



(IG)
15A
IG1
8 1J
Y–R
7 5M
7 5K
Y–R
2 EE1
Y–R
2 6F
2 6G
Y–R
10 A
7 B
Y–R (M/T)
5 BE1
Y–R (M/T)
1
IG+
SI
SE
B44
Vehicle Speed Sensor
(Combination Meter)
3
2
R–Y (M/T)
W (M/T)
13 BE1
11 BE1
R–Y (M/T)
W (M/T)
R–L (M/T)
R–L (A/T)
1
1
B42
Back–Up Lamp SW
2
2
Y–R (M/T)
Y–R (A/T)
1 BE1
RB
RL
R
B35
Park/Neutral Position SW
2 BE1
Y–R
11 A
E57(A), E58(B)
Junction Connector
R–Y
1 BE1
7 A
9 A
E57(A)
Junction Connector
R–Y
2 1L
2 1J
Rear Fog
Light Switch
LG–R
(*3)
Turn Signal
Flasher
L–W
P
Park/Neutral
Position SW
Y–B
(A/T)
Park/Neutral
Position SW
G–W
(A/T)
R–Y
30 A
20 A
18 A
21 B
20 B
19 B
+
B
B
P
R
N
(M/T)
(A/T)
Rear Fog
Turn LH
Turn RH
A/T P
P
R
N
(M/T)
A/T3
E13(A), E14(B)
Combination Meter
22 B
W
(A/T)
Transfer Indicator SW
(Neutral Position)
W(M/T)
R–Y(M/T)



* 1 : w/ Rheostat
* 3 : China
(BAT)
10A DOME
(BAT)
50A J/B
Shift Lock Control ECU
Park/Neutral Position SW
Shift Lock Control ECU
Headlamp Dimmer SW Assembly
10A TAIL
TAIL Relay
Beam
Illumination
Door
SPEED CONTROL
VOLT CONTROL
(M/T)
(M/T)
KSW
ILL–
SE
SI
ES
E13(A), E14(B)
Combination Meter
Main Body ECU
Light Control Rheostat
E50(A), E51(B)
Junction Connector
E4
W(M/T)
R–Y(M/T)
GR–R
(A/T)



(IG)
7. 5A
GAUGE
4 1G
R–L
Y–G (*6)
2 EE2
Y–G (*6)
V–Y (*7)
W–L
V–R
Y–G(*6)
V–Y(*7)
W–L
V–R
2 A
23 A
29 A
14 A
E13(A), E14(B)
Combination Meter
IG+
SW
DOOR
+S
ODO/TRIP
Driver's Seat Belt
Fuel
120km/h (*2)
SRS
ABS
Brake
(*2)
TACHO CONTROL
TEMP CONTROL
Buzzer
FLASHING
FUEL CONTROL
REVERSE
REVERSE
REVERSE
S
TEMP
PBKL
L
WRNP
L
E3
SW
ESC
PKB
12 A
15 A
10 A
8 A
7 A
16 A
5 A
6 A
17 A
31 A
B–W
BR–B
L–R
G–Y
LG
V–W
Y–B
B–Y
LG–R
B–L
9 5E
14 6D
7 EL2
15 EL2
9 5D
9 5F
14 6C
Front Seat Inner Belt (RH)
Front Seat Inner Belt (LH)
A/C Amplifier
Airbag Sensor Assembly Center
V–W
Y–B
3
Gage
L5
Fuel Suction Pump and Gage Assembly
2
9
TAC
E1
DLC3
B–L
LG–R
BR–B
B–W
GR–R
(A/T)
GR–R(A/T)

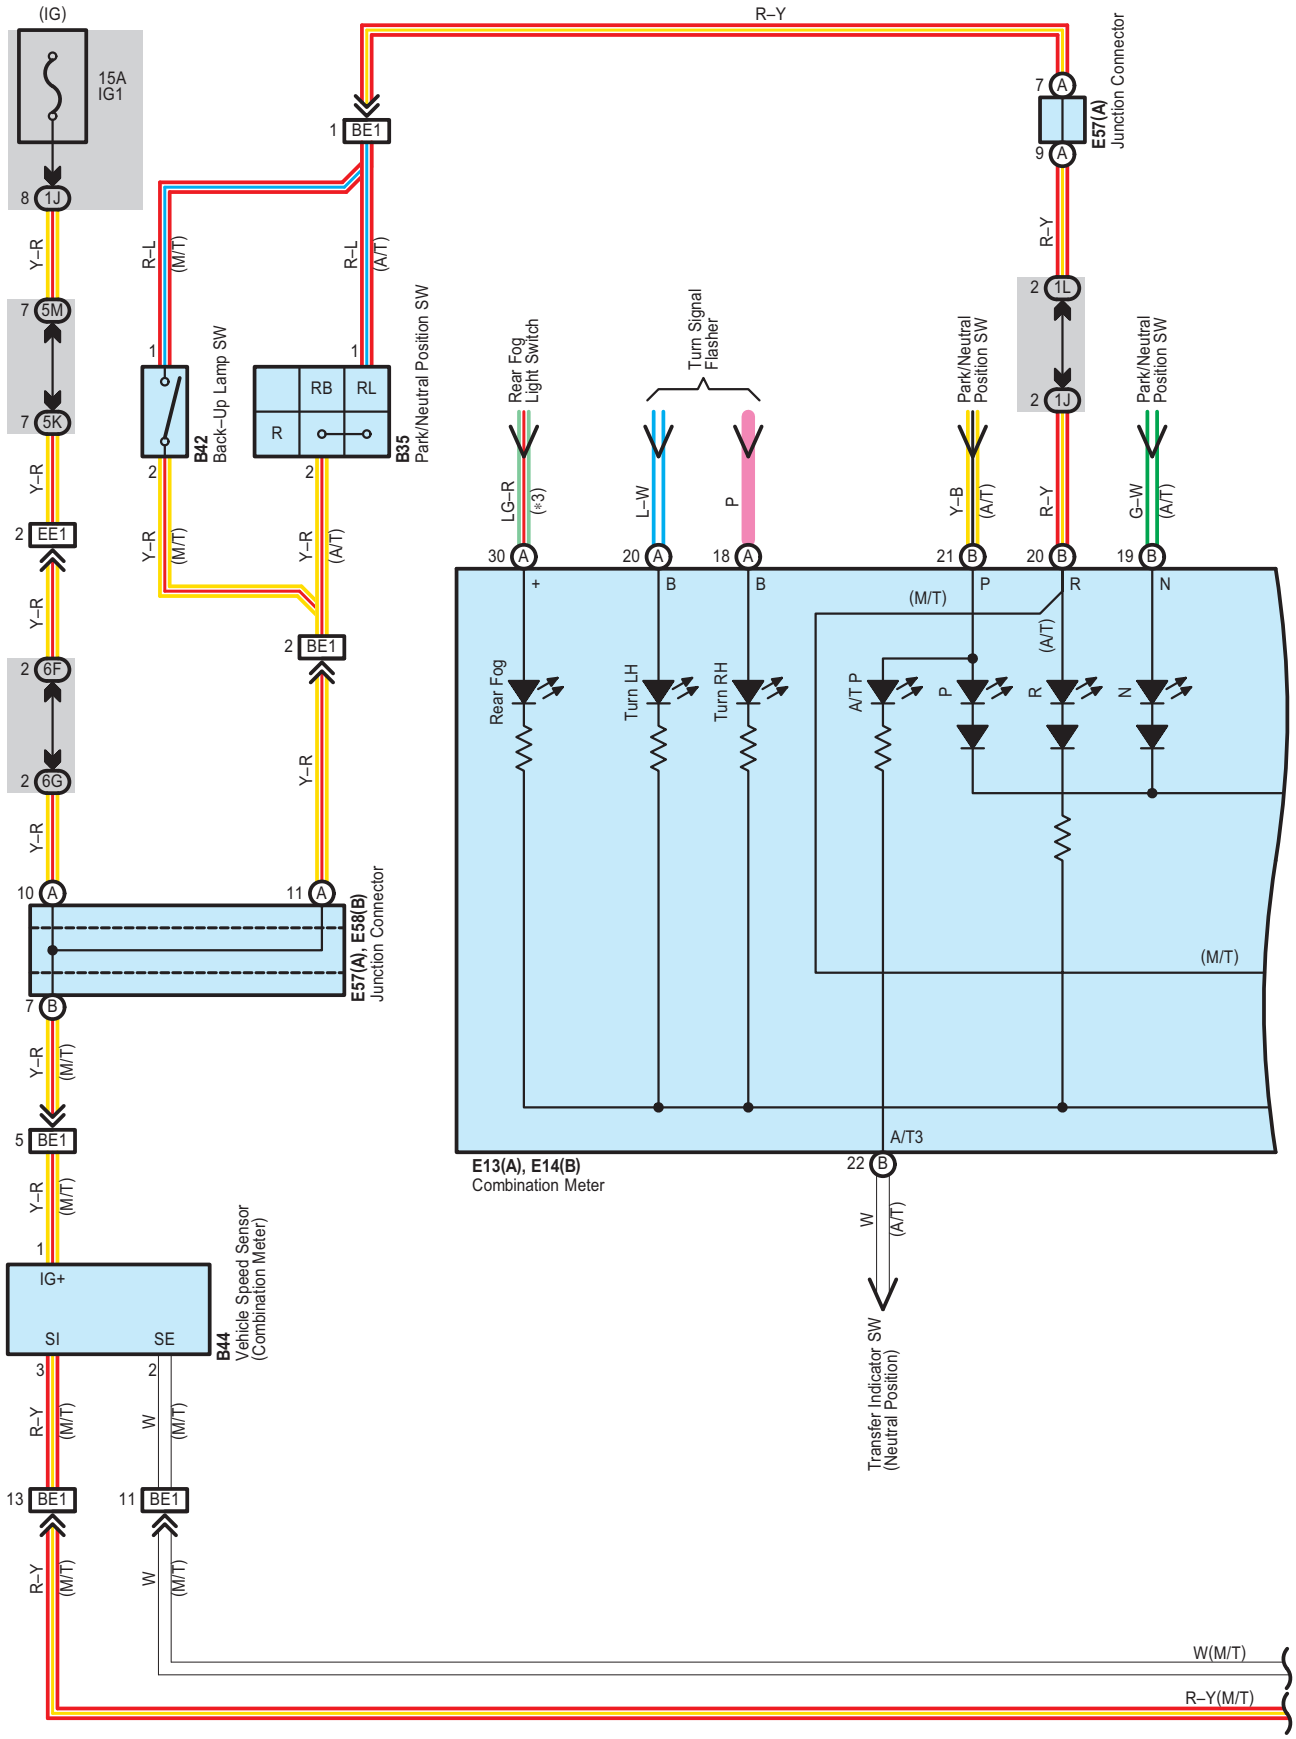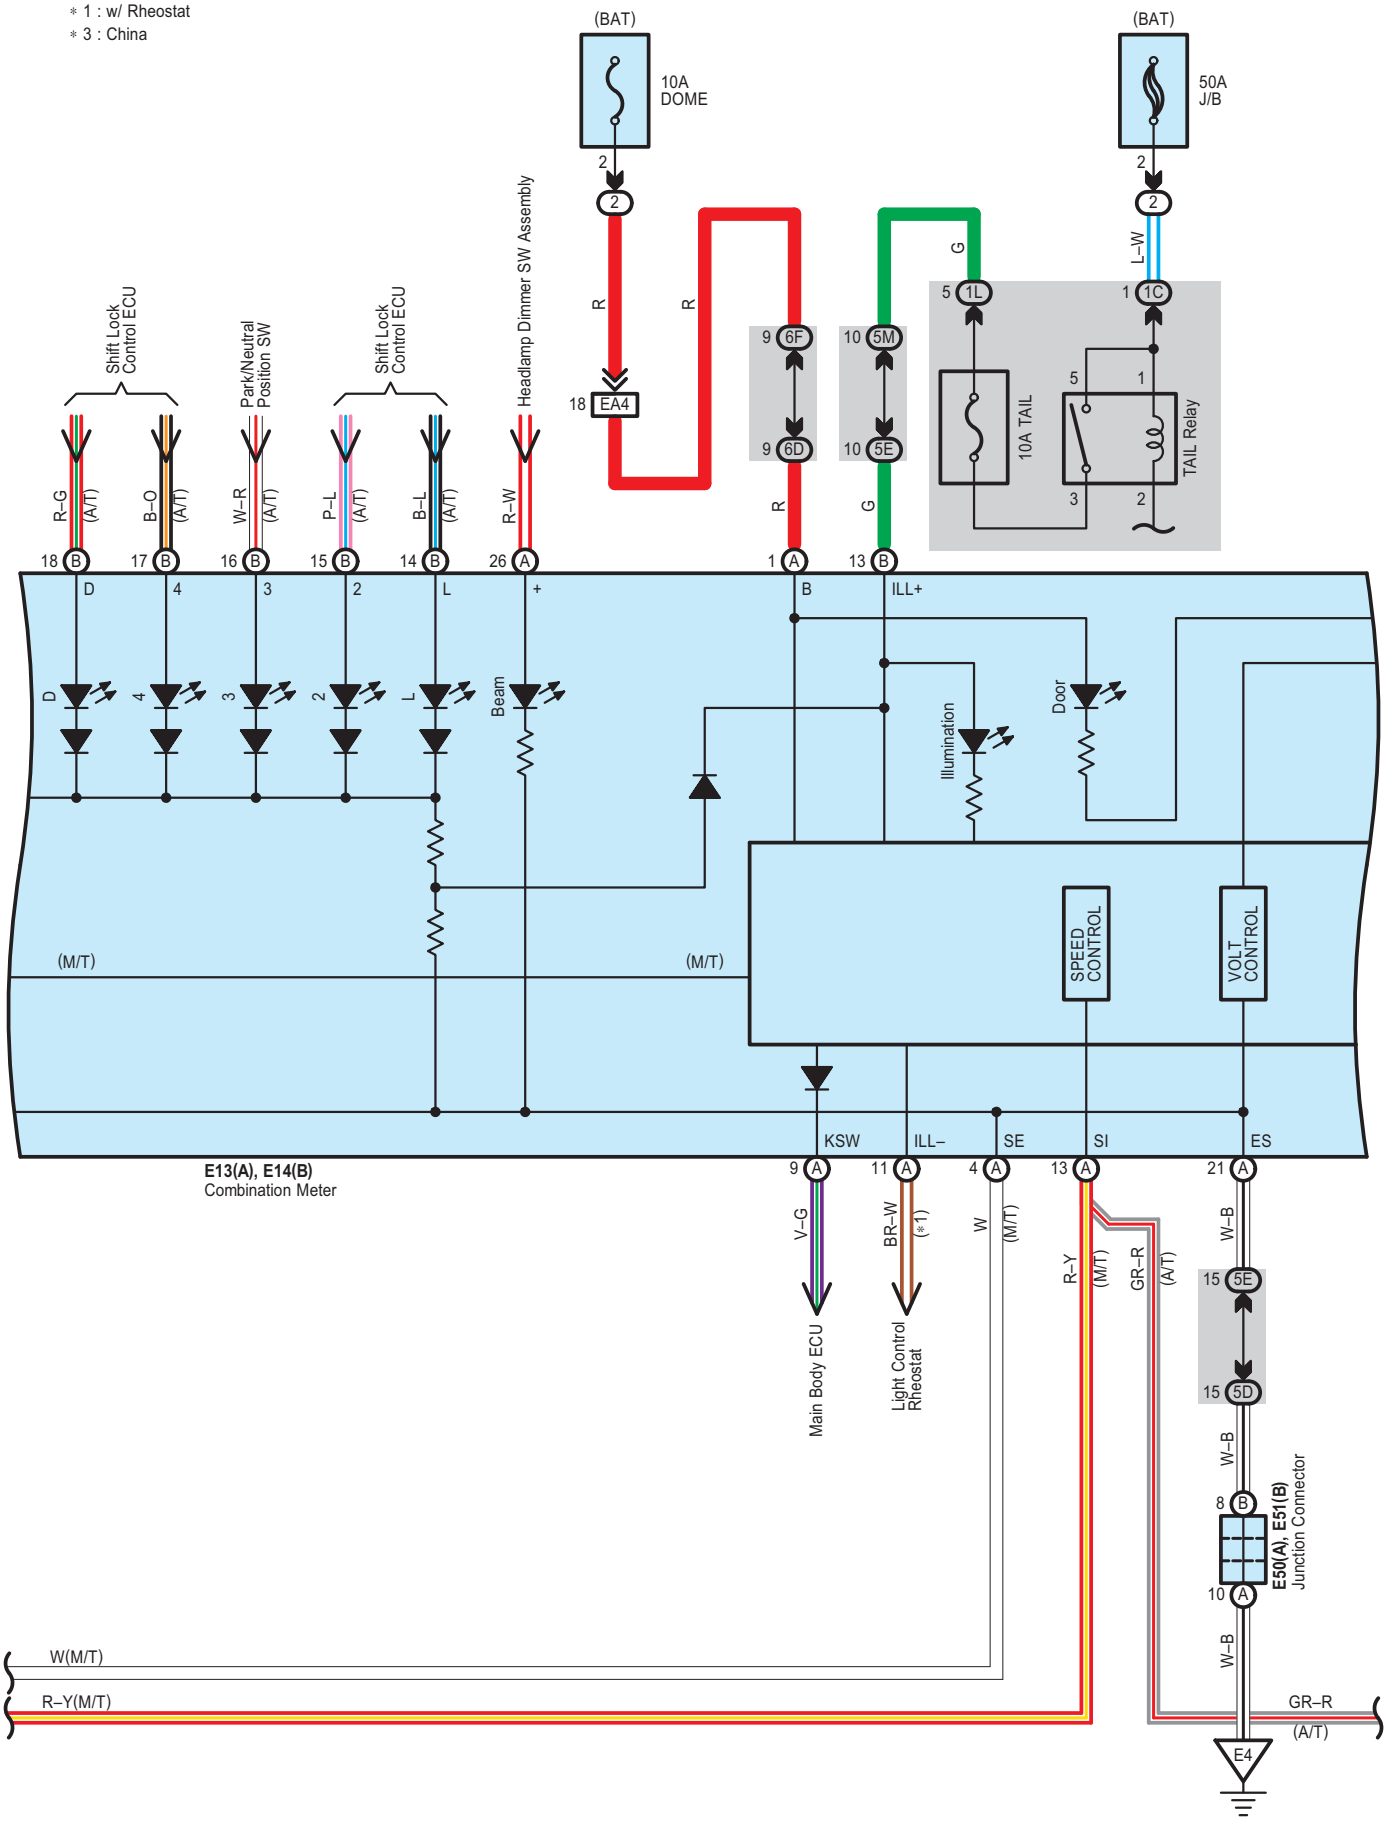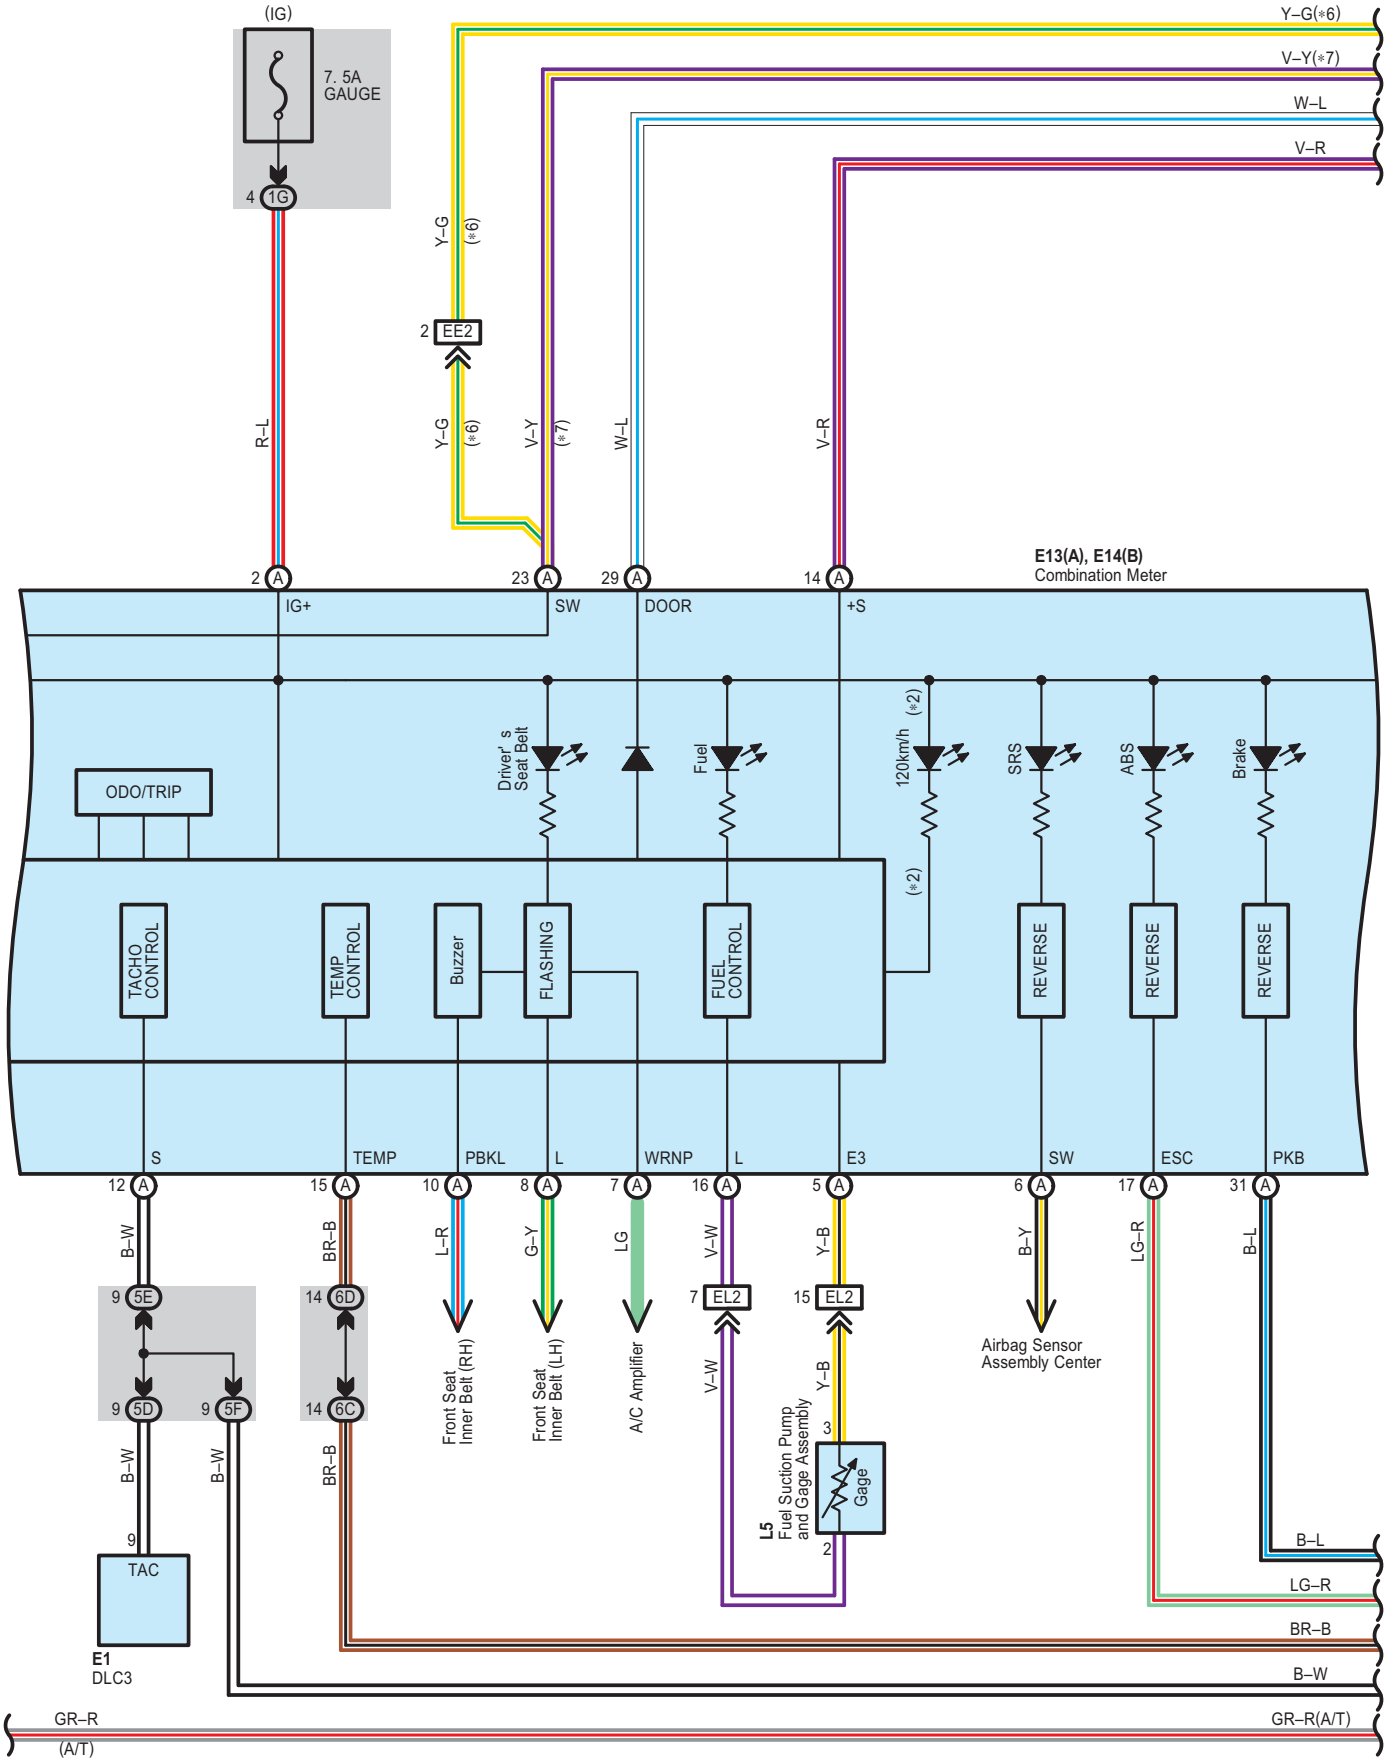


∗ 2 : Middle East, Before Aug. 2009 Production China
∗ 4 : From Aug. 2008 Production Except China, From Aug. 2009 Production China
∗ 5 : Before Aug. 2008 Production Except China, Before Aug. 2009 Production China
∗ 6 : From Aug. 2008 Production Middle East until Aug. 2009 Production Middle East
∗ 7 : Except ∗6


E13(A), E14(B)
Combination Meter

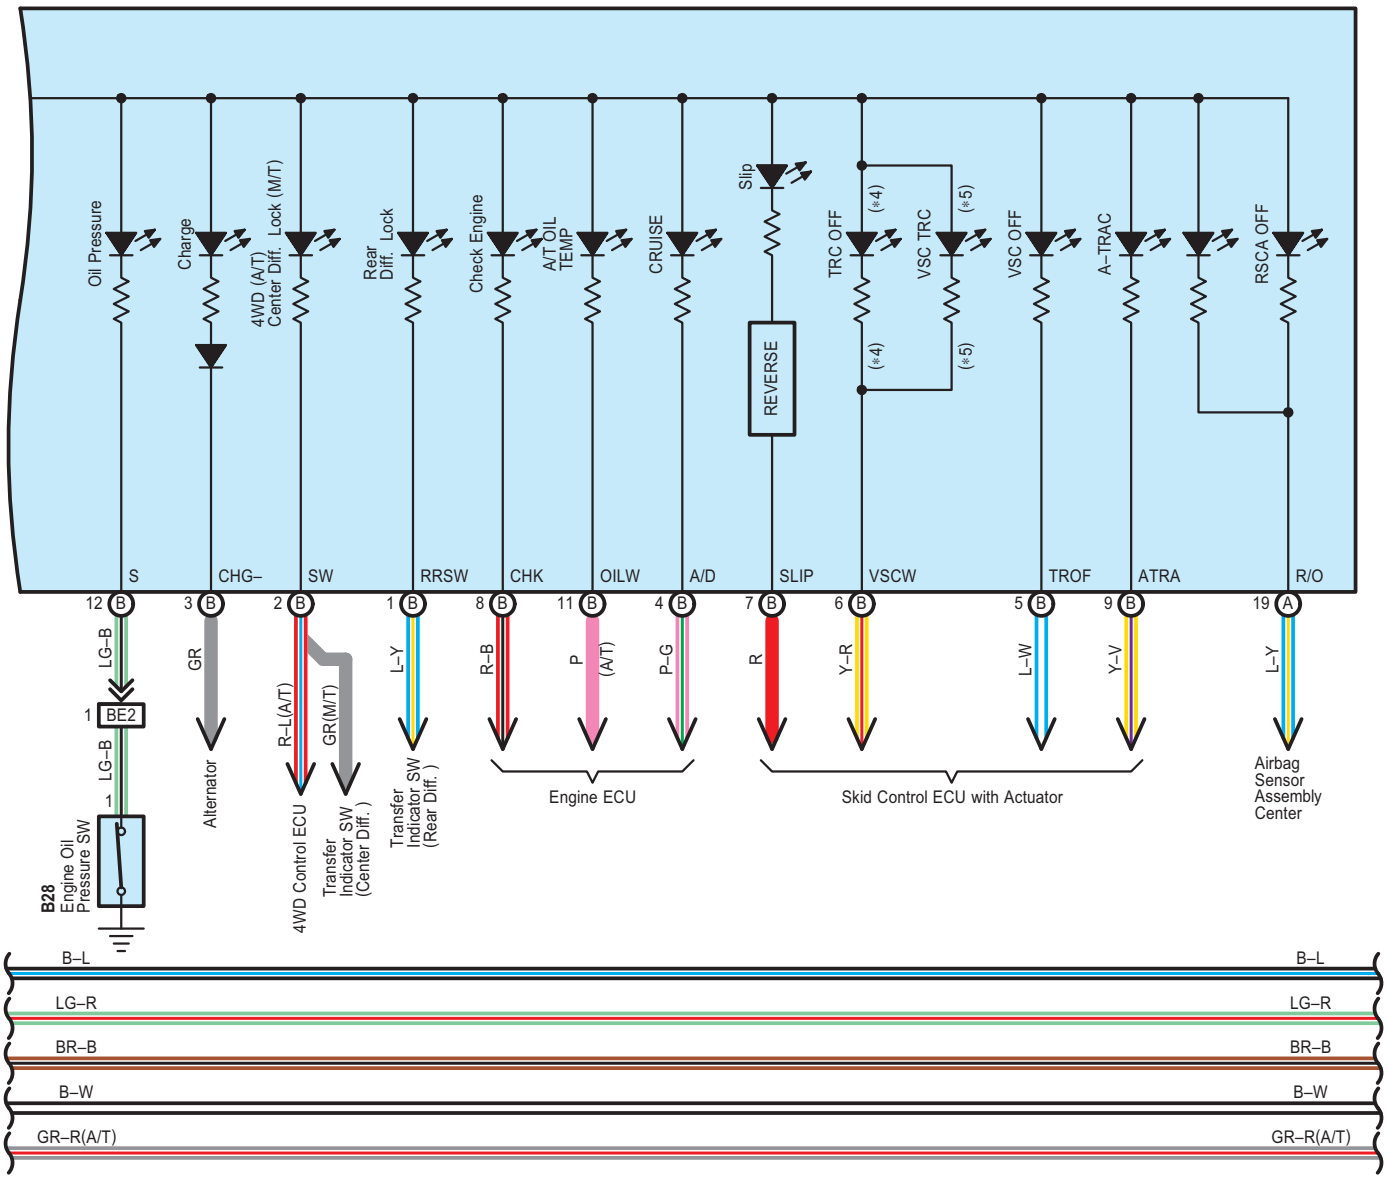

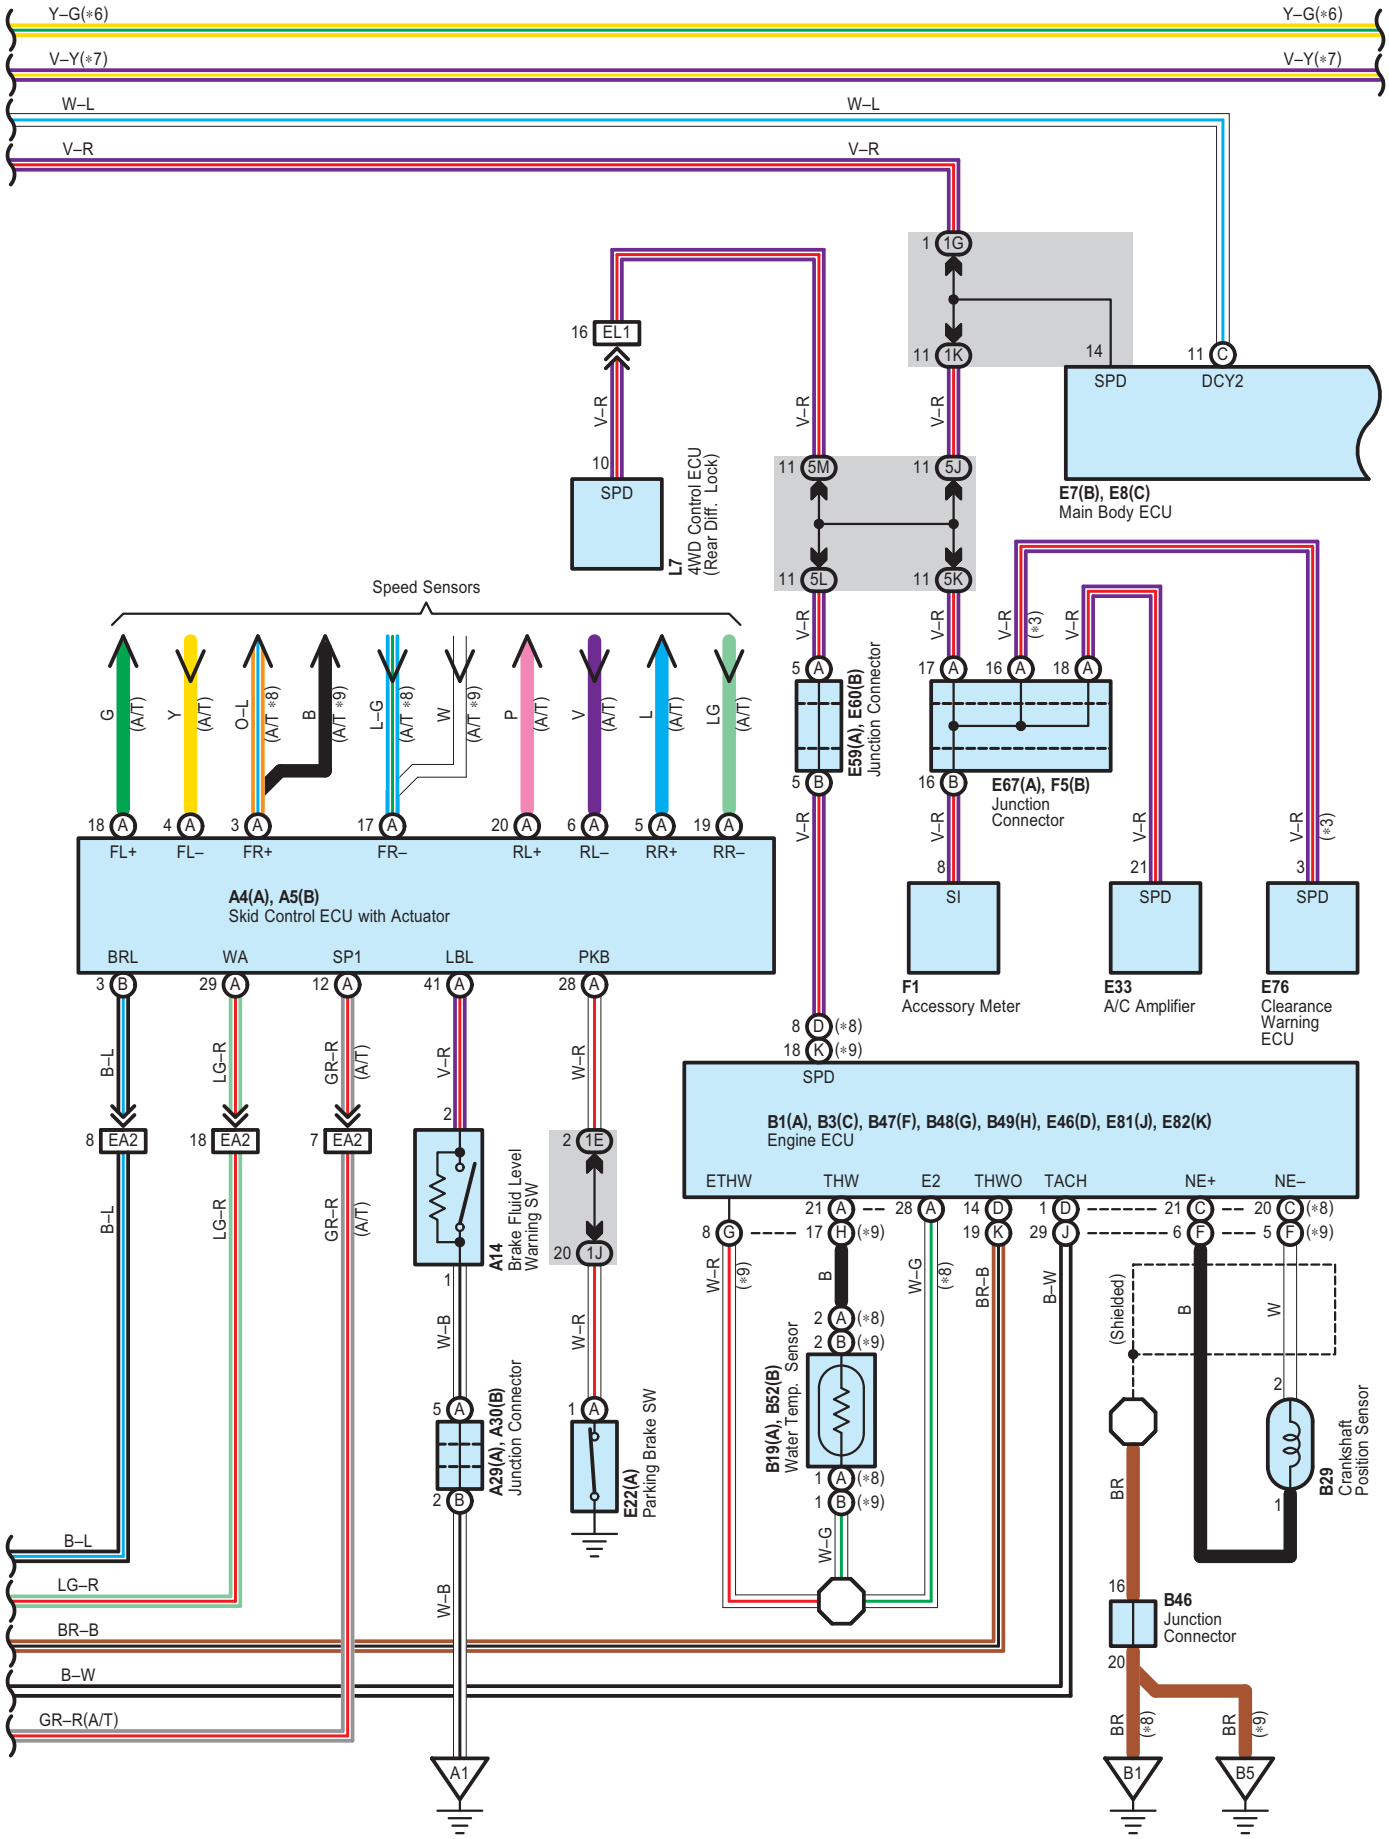

Y–G(*6)
V–Y(*7)
W–L
V–R
Speed Sensors
A4(A), A5(B)
Skid Control ECU with Actuator
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
BRL
WA
SP1
LBL
PKB
L7
4WD Control ECU
(Rear Diff. Lock)
SPD
E7(B), E8(C)
Main Body ECU
DCY2
E59(A), E60(B)
Junction Connector
E67(A), F5(B)
Junction
Connector
F1
Accessory Meter
SI
E33
A/C Amplifier
E76
Clearance
Warning
ECU
B1(A), B3(C), B47(F), B48(G), B49(H), E46(D), E81(J), E82(K)
Engine ECU
ETHW
THW
E2
THWO
TACH
NE+
NE–
A14
Brake Fluid Level
Warning SW
A29(A), A30(B)
Junction Connector
E22(A)
Parking Brake SW
B19(A), B52(B)
Water Temp. Sensor
B29
Crankshaft
Position Sensor
(Shielded)
B46
Junction
Connector
A1
B1
B5
B–L
LG–R
BR–B
B–W
GR–R(A/T)

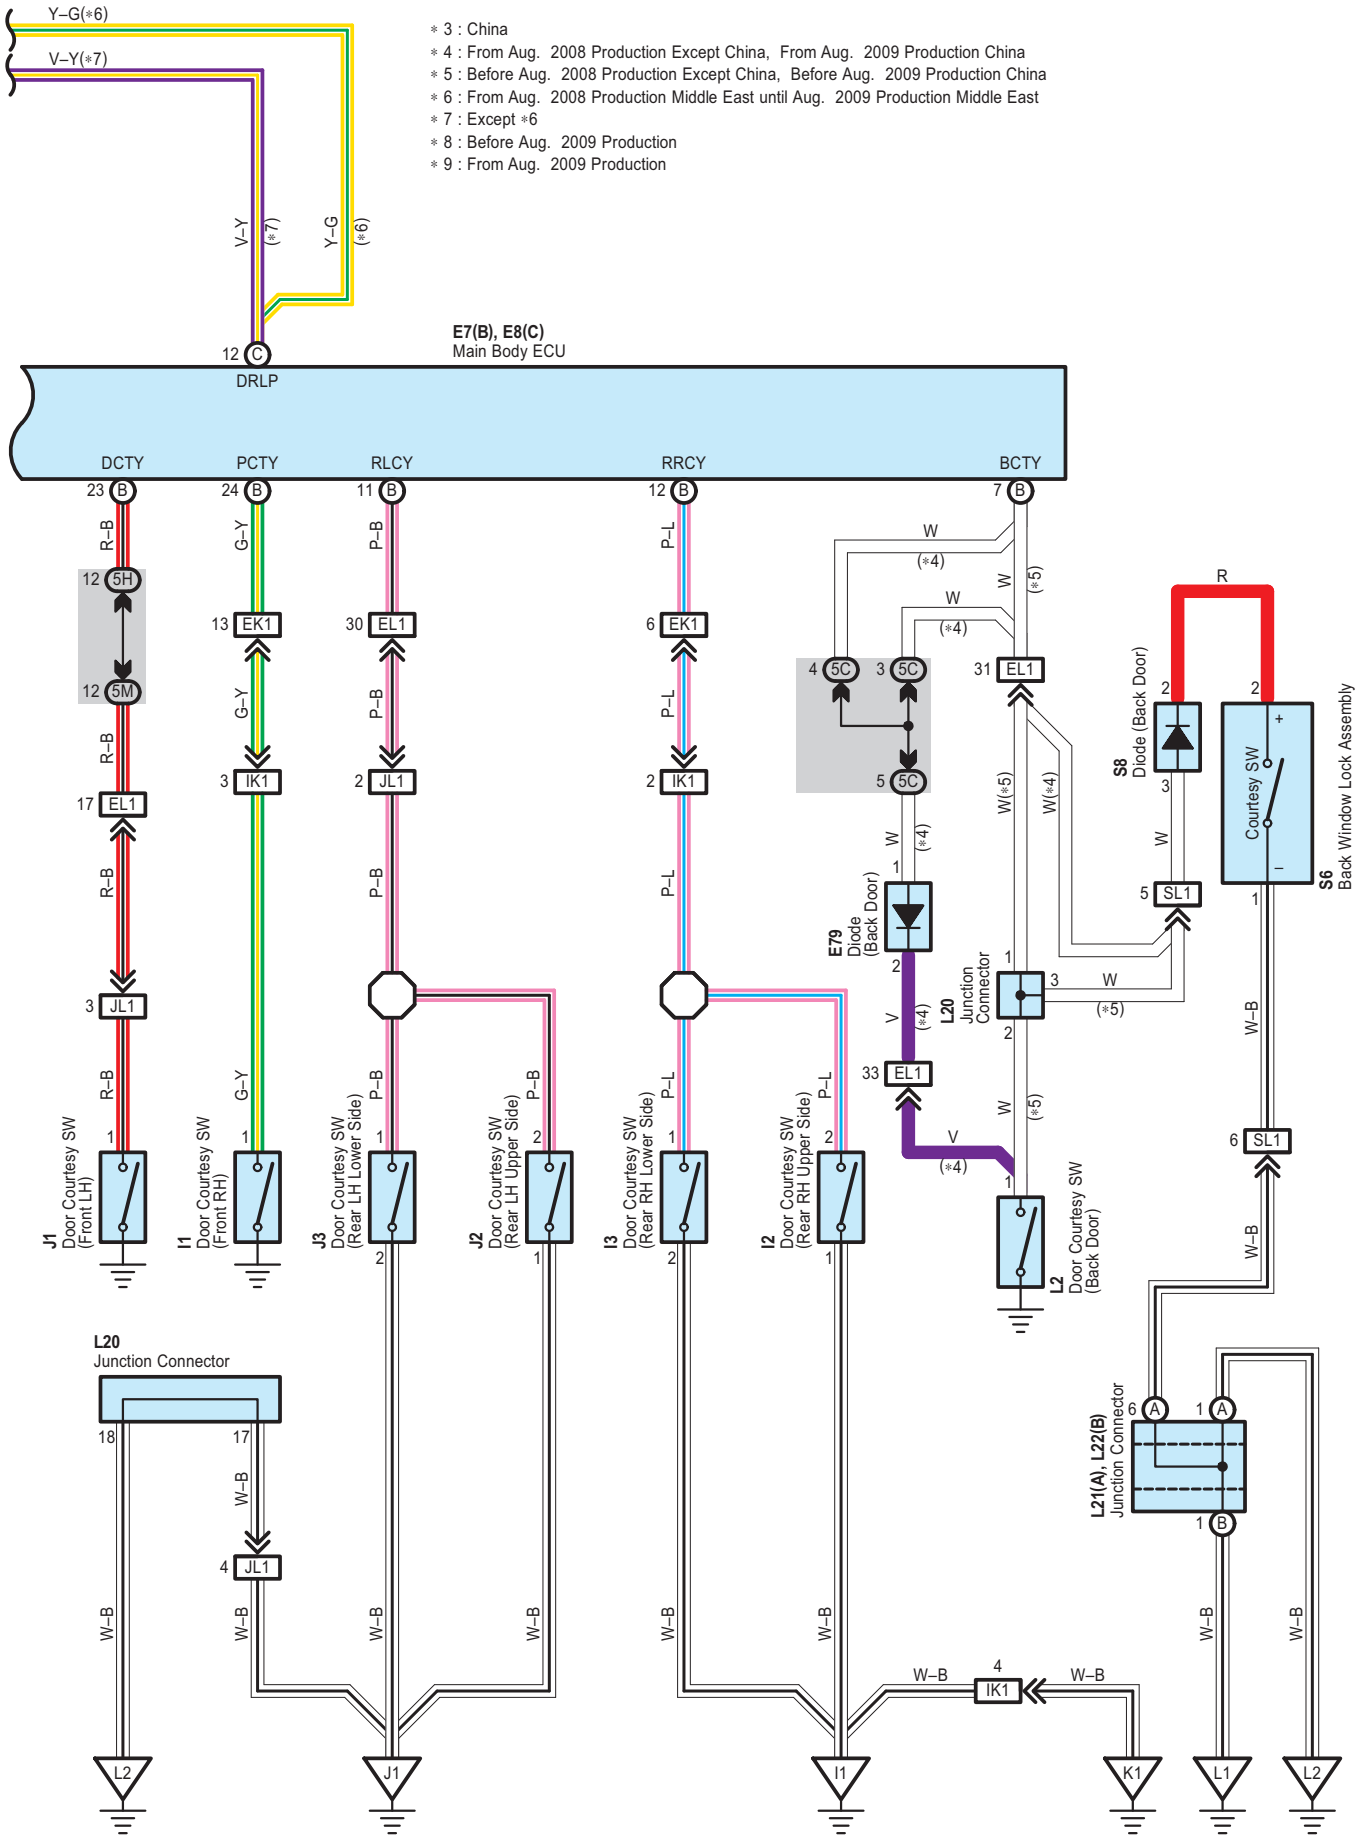
Y–G(∗6)
V–Y(∗7)
∗ 3 : China
∗ 4 : From Aug. 2008 Production Except China, From Aug. 2009 Production China
∗ 5 : Before Aug. 2008 Production Except China, Before Aug. 2009 Production China
∗ 6 : From Aug. 2008 Production Middle East until Aug. 2009 Production Middle East
∗ 7 : Except ∗6
∗ 8 : Before Aug. 2009 Production
∗ 9 : From Aug. 2009 Production
E7(B), E8(C)
Main Body ECU
DRLP
DCTY
PCTY
RLCY
RRCY
BCTY
J1 Door Courtesy SW (Front LH)
I1 Door Courtesy SW (Front RH)
J3 Door Courtesy SW (Rear LH Lower Side)
J2 Door Courtesy SW (Rear LH Upper Side)
I3 Door Courtesy SW (Rear RH Lower Side)
I2 Door Courtesy SW (Rear RH Upper Side)
L2 Door Courtesy SW (Back Door)
E79 Diode (Back Door)
L20 Junction Connector
S8 Diode (Back Door)
S6 Back Window Lock Assembly
Courtesy SW
L21(A), L22(B) Junction Connector
L2
J1
I1
K1
L1


A4
Black

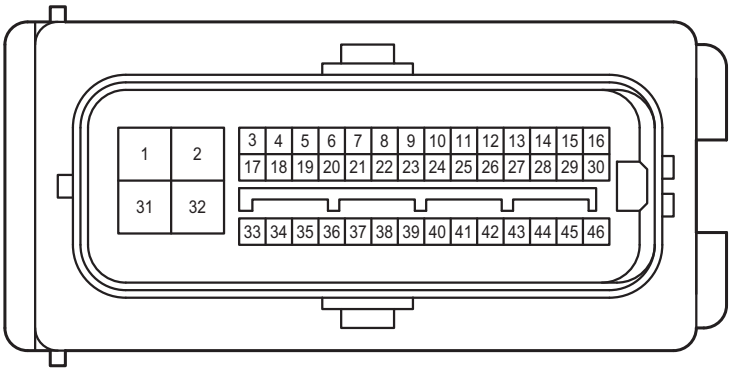


A5
Black

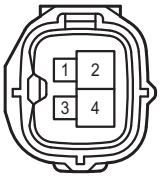


A14
Gray

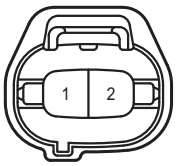


A29
Blue

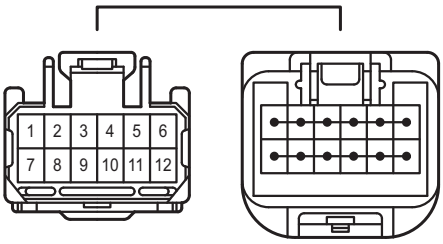


A30
Blue

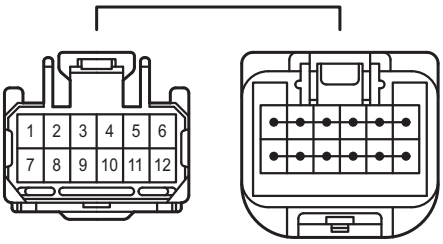

B1
White

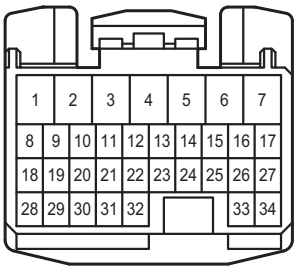

B3
White

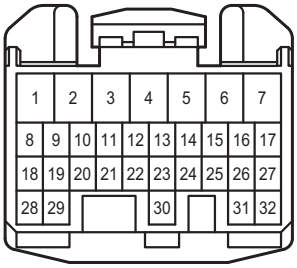


B19
Gray




B28
Gray




B29
Black

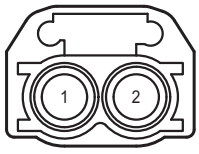

B35
Gray

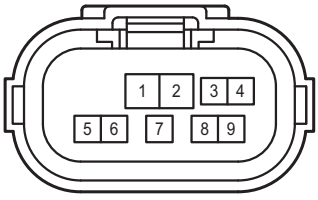


B42
Gray

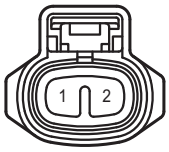


B44
Black




B46
White

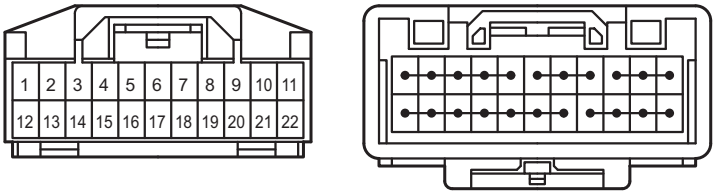


B47
White

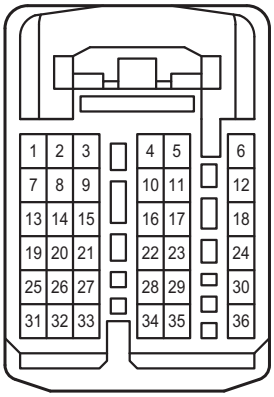

B48
White

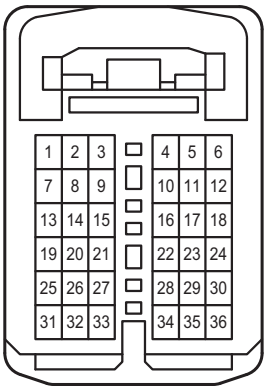


B49
White

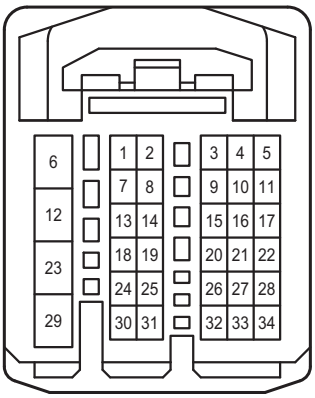


B52
Black




E1
White

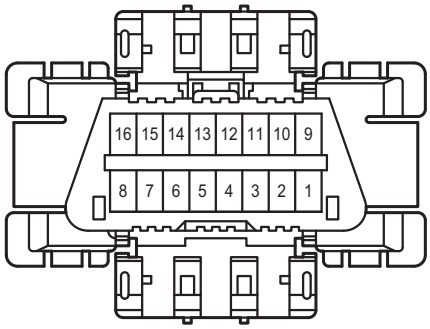


E7
White

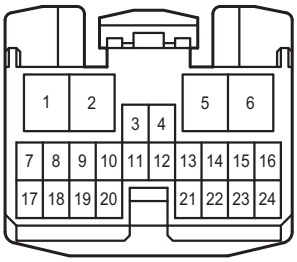


E8
White

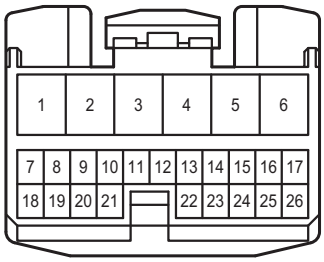

E13
White

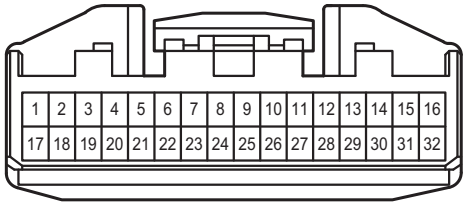


E14
White

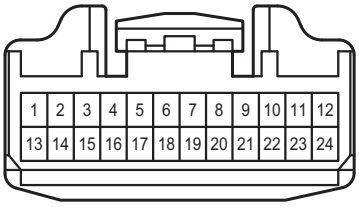


E22
Black




E33
White

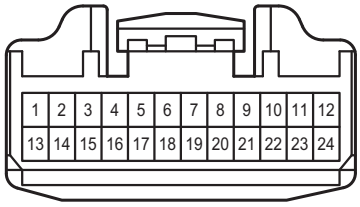


E46
White

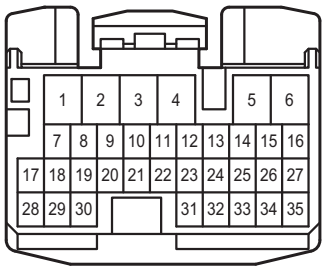


E50
Black

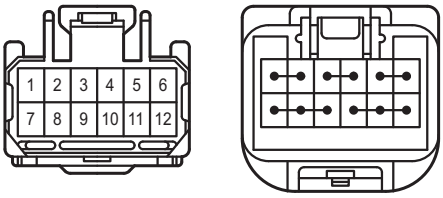


E51
Black

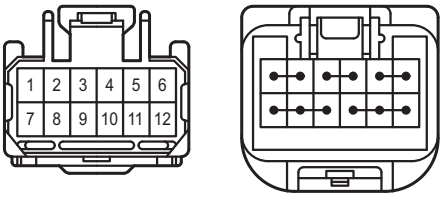


E57
Black

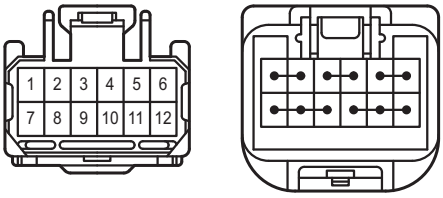


E58
Black

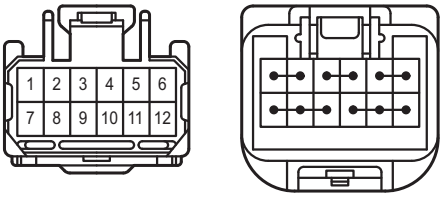


E59
Blue

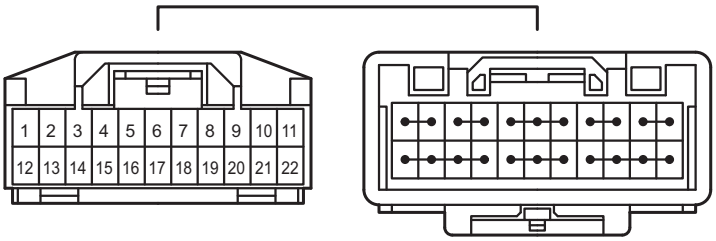


E60
Blue

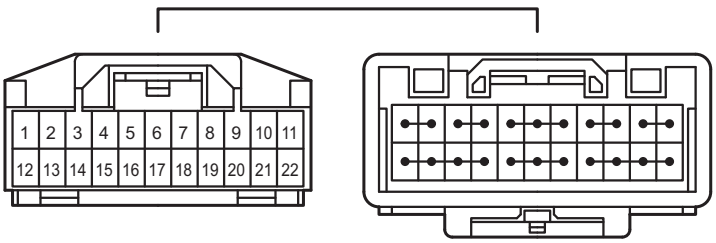


E67
Blue

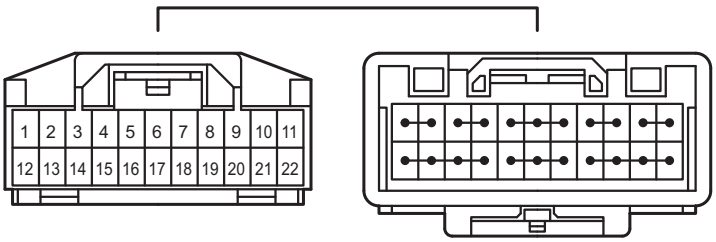


E76
White

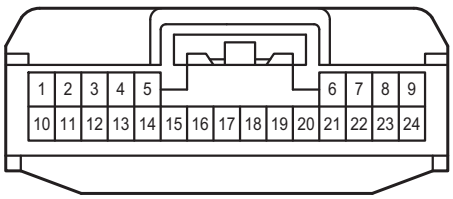


E79
Gray



E81
White

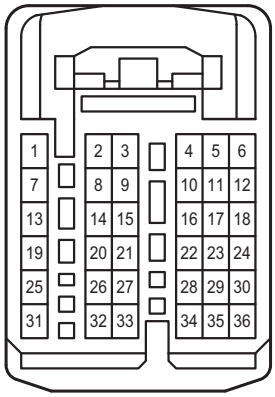


E82
White

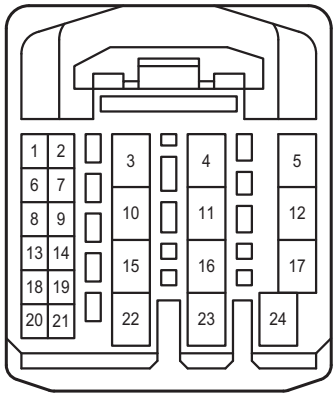

F1
White



F5
Blue

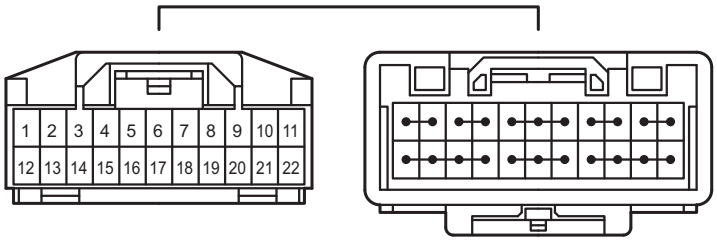

I1
Black



I2
White



I3
Gray




J1
Black



J2
White



J3
Gray




L2
Black




L5
White




L7
White

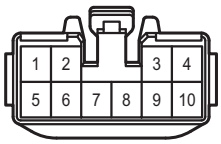


L20
Black

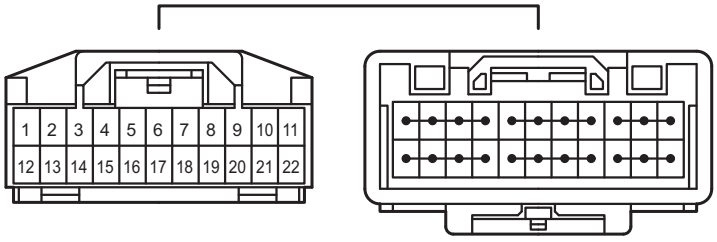


L21
Gray

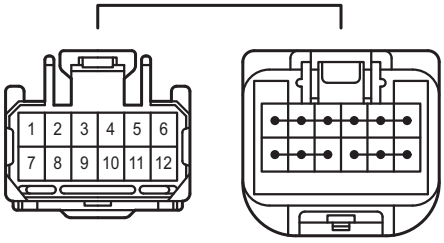

L22
Gray

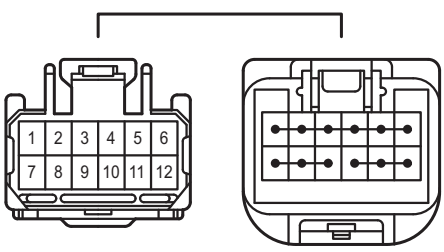


S6
White




S8
Gray




1 C
White

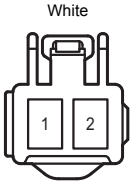


1 E
White

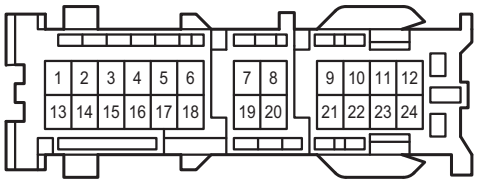


1 G
White

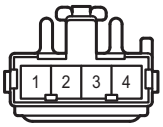


1 J
White

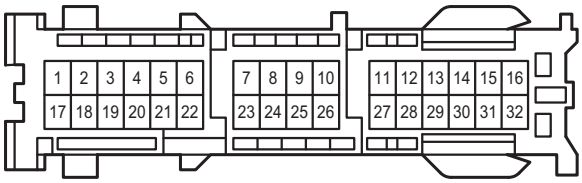


1 K
White

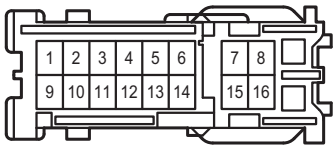


1 L
White

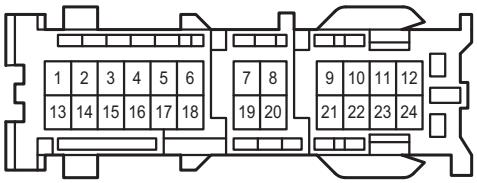


5 C
White




5 D
White




5 E
White




5 F
White




5 H
White




5 J
White




5 K
White




5 L
White




5 M
White




6 C
White




6 D
White




6 F
White




6 G
White




BE1
White

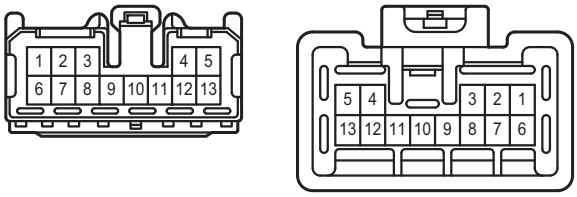

BE2
White

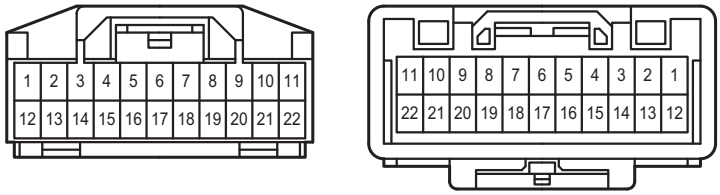



EA2
Gray

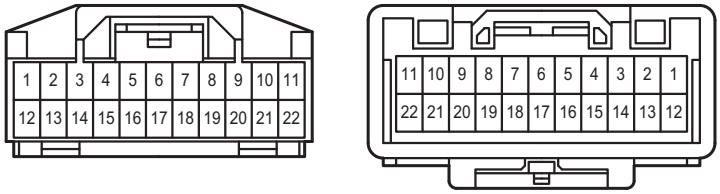


EA4
White


Gray

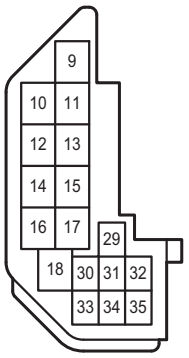

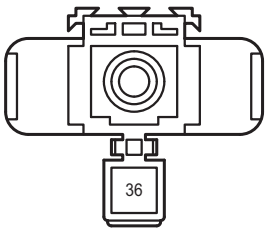


Gray

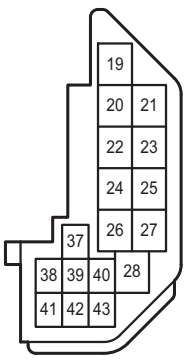


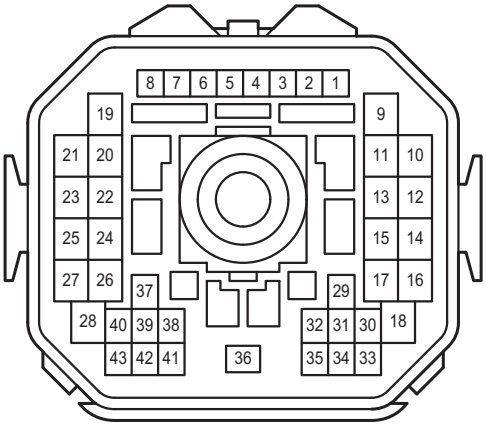



EE1
White

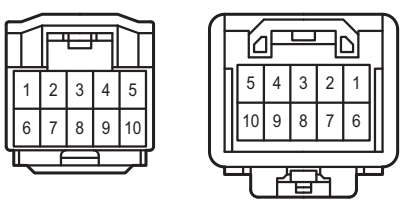



EE2
White

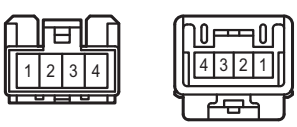

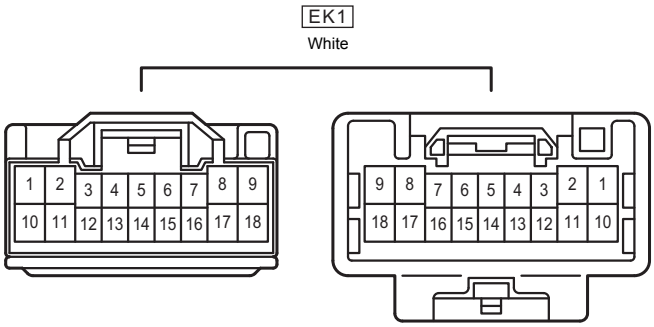
EK1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18
9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11 10

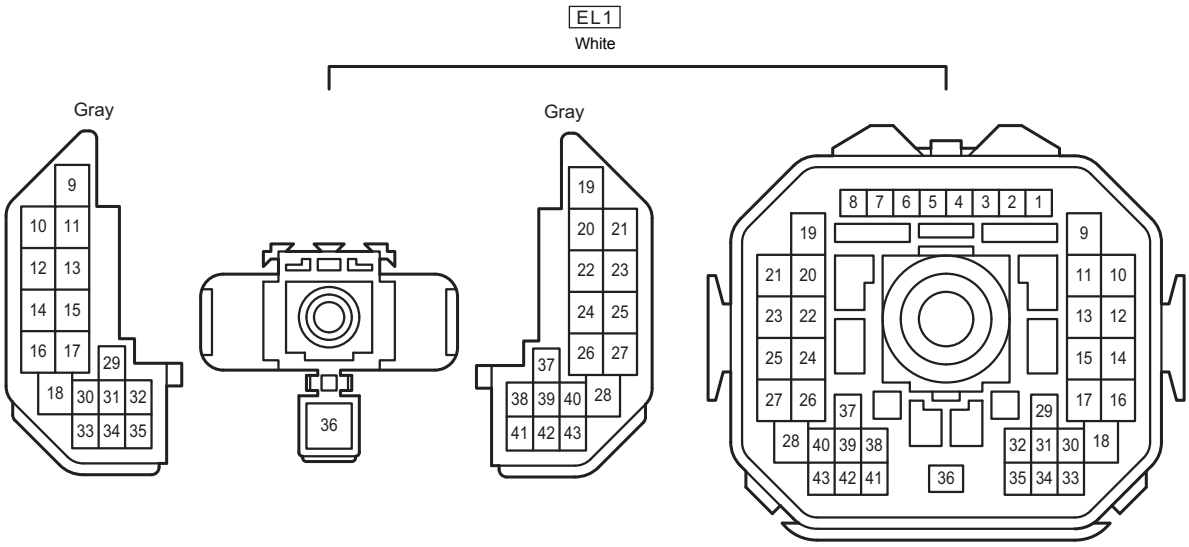
EL1
White
Gray
9
10 11
12 13
14 15
16 17
18 29
30 31 32
33 34 35
36
Gray
19
20 21
22 23
24 25
26 27
37
38 39 40 28
41 42 43
8 7 6 5 4 3 2 1
19
21 20
23 22
25 24
27 26
9
11 10
13 12
15 14
17 16
37
28 40 39 38
43 42 41
29
32 31 30 18
35 34 33
36

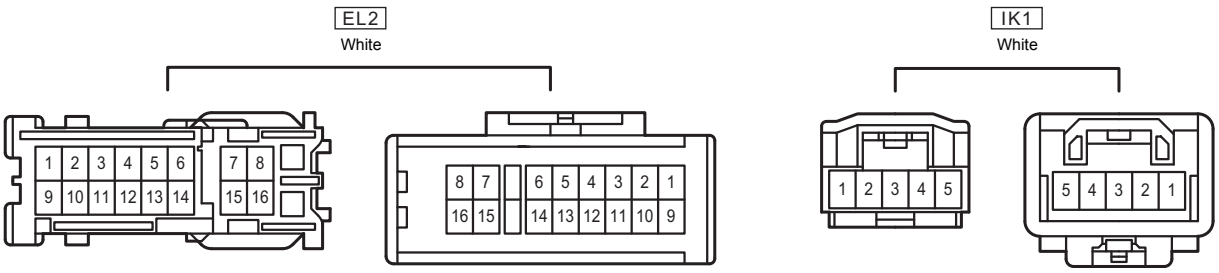
EL2
White
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16
8 7 6 5 4 3 2 1
16 15 14 13 12 11 10 9
IK1
White
1 2 3 4 5
5 4 3 2 1

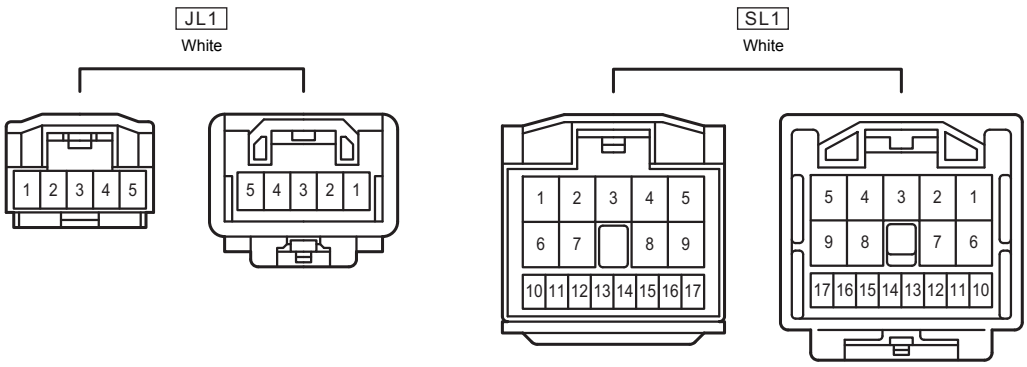
JL1
White
1 2 3 4 5
5 4 3 2 1
SL1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10