FRONT FENDER APRON (ASSY)


F25276A


With the cowl side reinforcement removed.

Symbol meaning

REMOVAL	▲ ▲1 : Remove Weld Points
INSTALLATION	⊙ : Spot Weld ◘ I : MIG Plug Weld

F25276B

REMOVAL·INSTALLATION

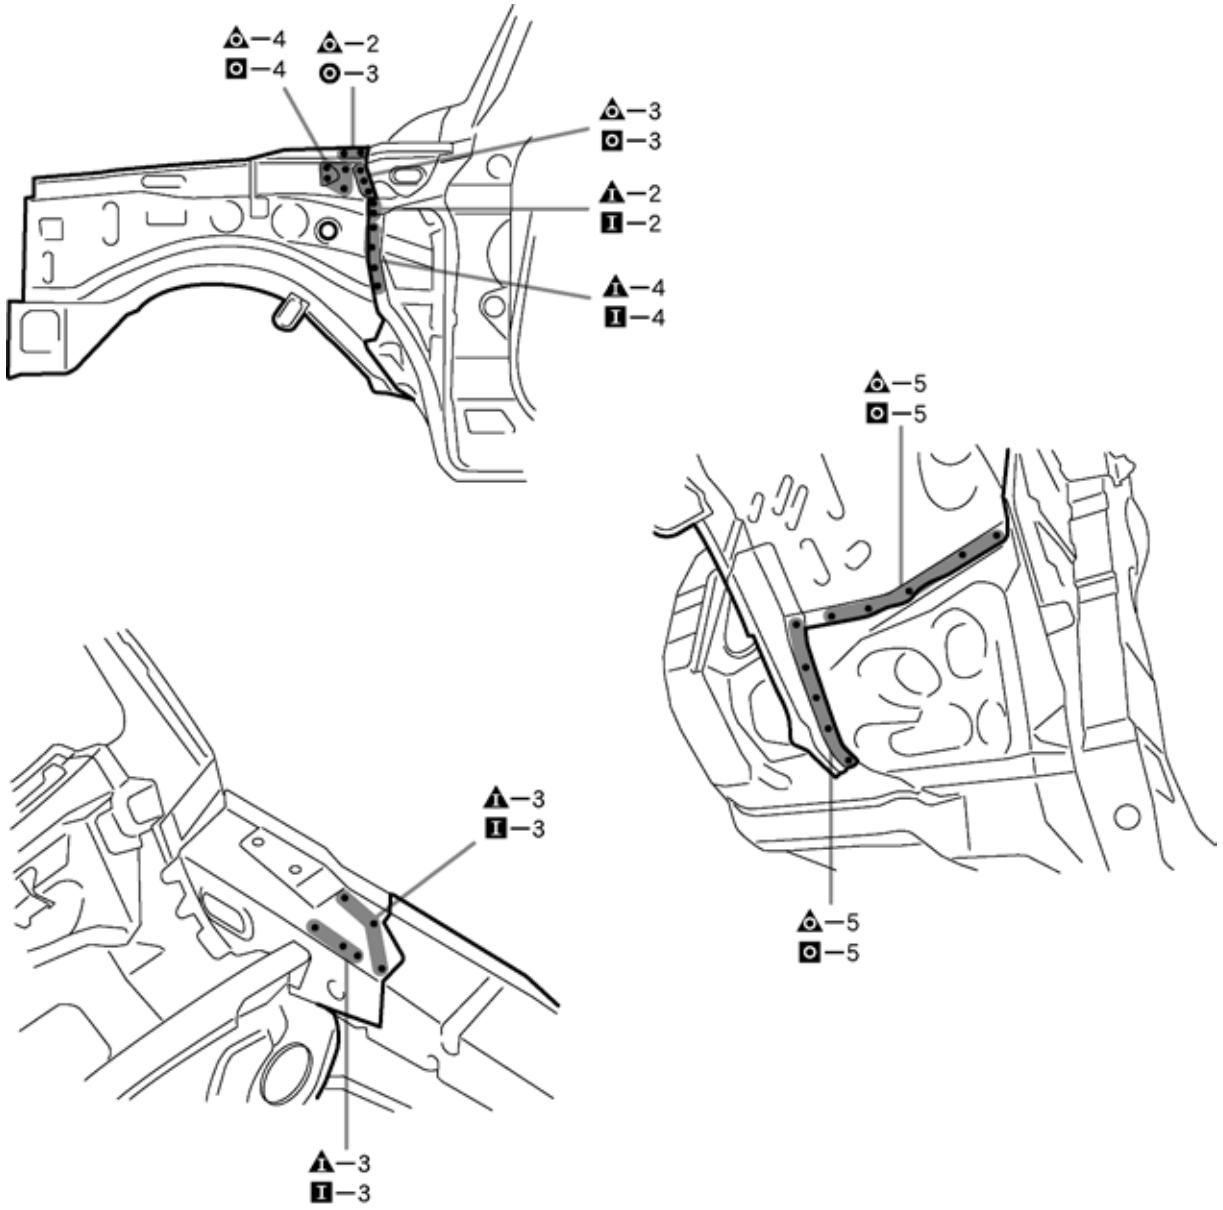

F25276

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.