



(BAT)
(IG)
10A
STOP
15A
IG1
G–W
Y–R
A28
Junction
Connector
A3
Stop Lamp SW
STOP LP CTRL
Relay
A27
Junction
Connector
G–Y
G–B
B–L
W–B
STP2
STPO
STP
A4
Skid Control ECU with Actuator
L21(A), L22(B)
Junction
Connector
L11
Rear Combination Lamp (LH)
L14
Rear Combination Lamp (RH)
T1
Center Stop Lamp
SL1
TS1
L20
Junction Connector
JL1
L1
J1
L2


A 3
White

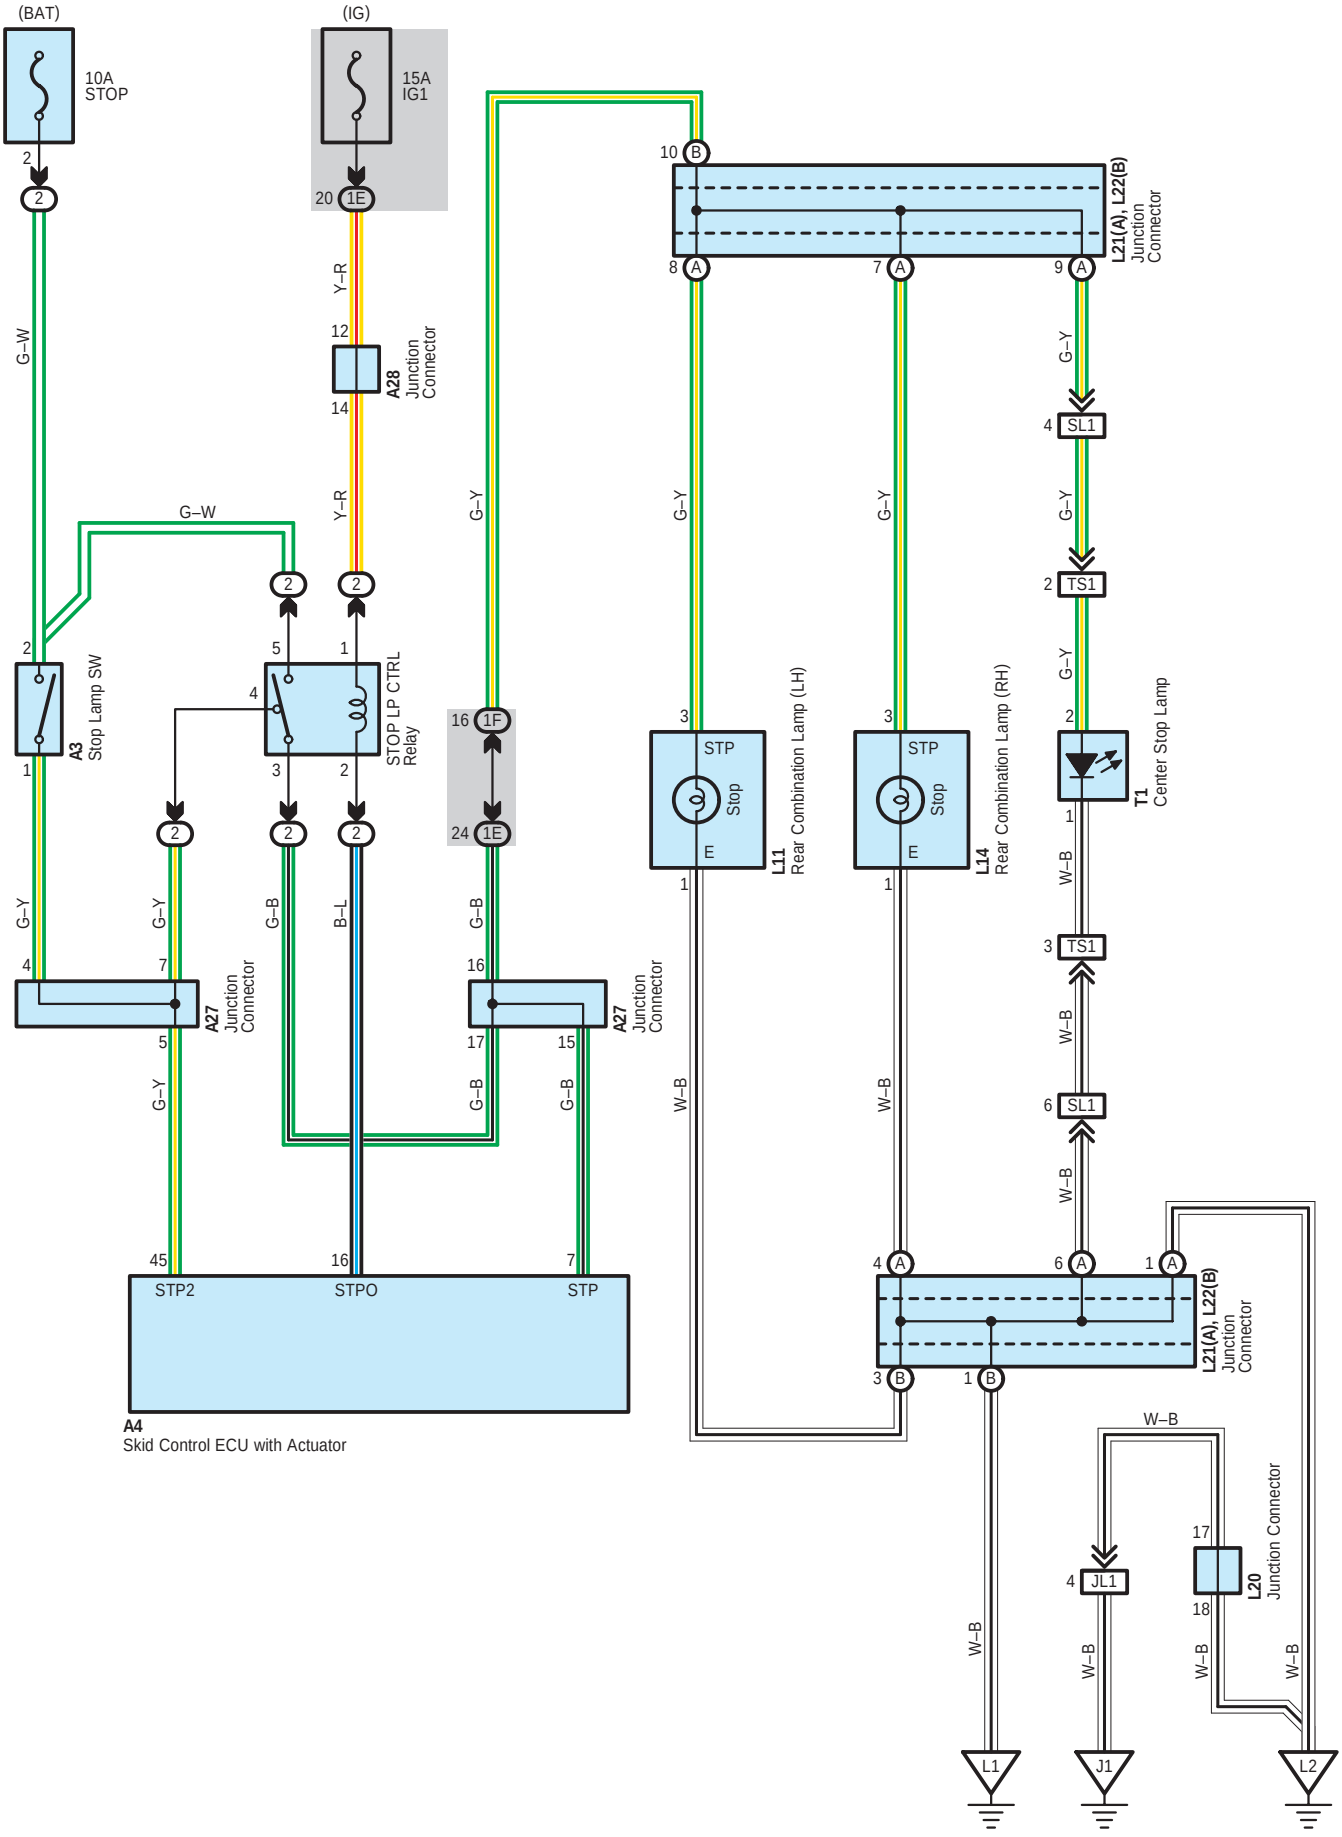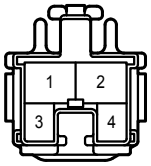


A 4
Black

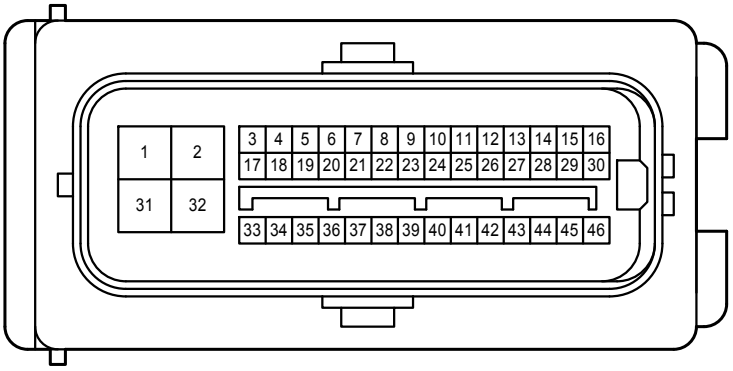


A 27
Black

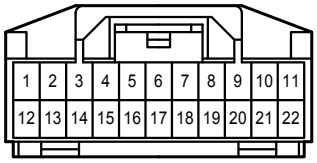


A 28
White

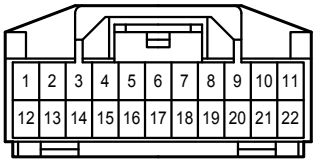


L 11
White

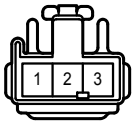


L 14
White

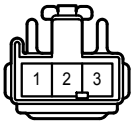


L 20
Black

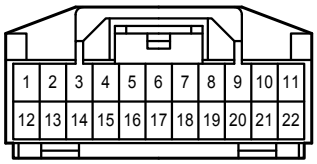


L 21
Gray

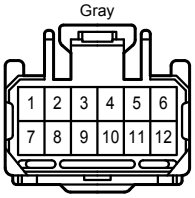


L 22
Gray

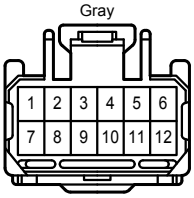


T 1
Gray

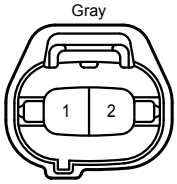


1E
White

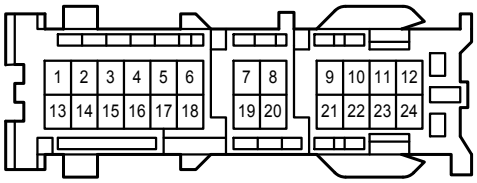


1F
White

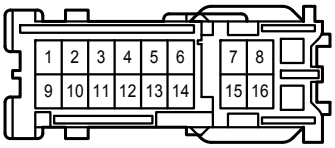


JL1
White

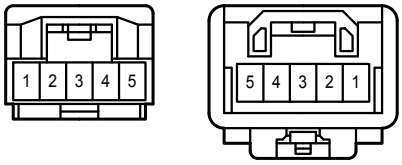

SL1
White

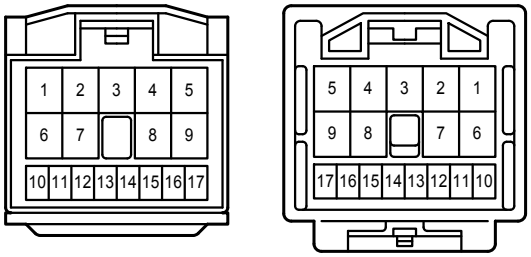

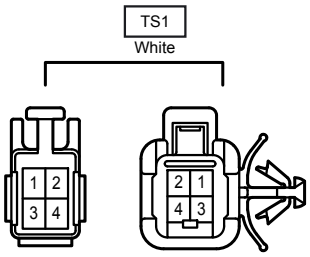
TS1
White
1
2
3
4
2
1
4
3