

(Cont. next page)

Door Lock Control (RHD)

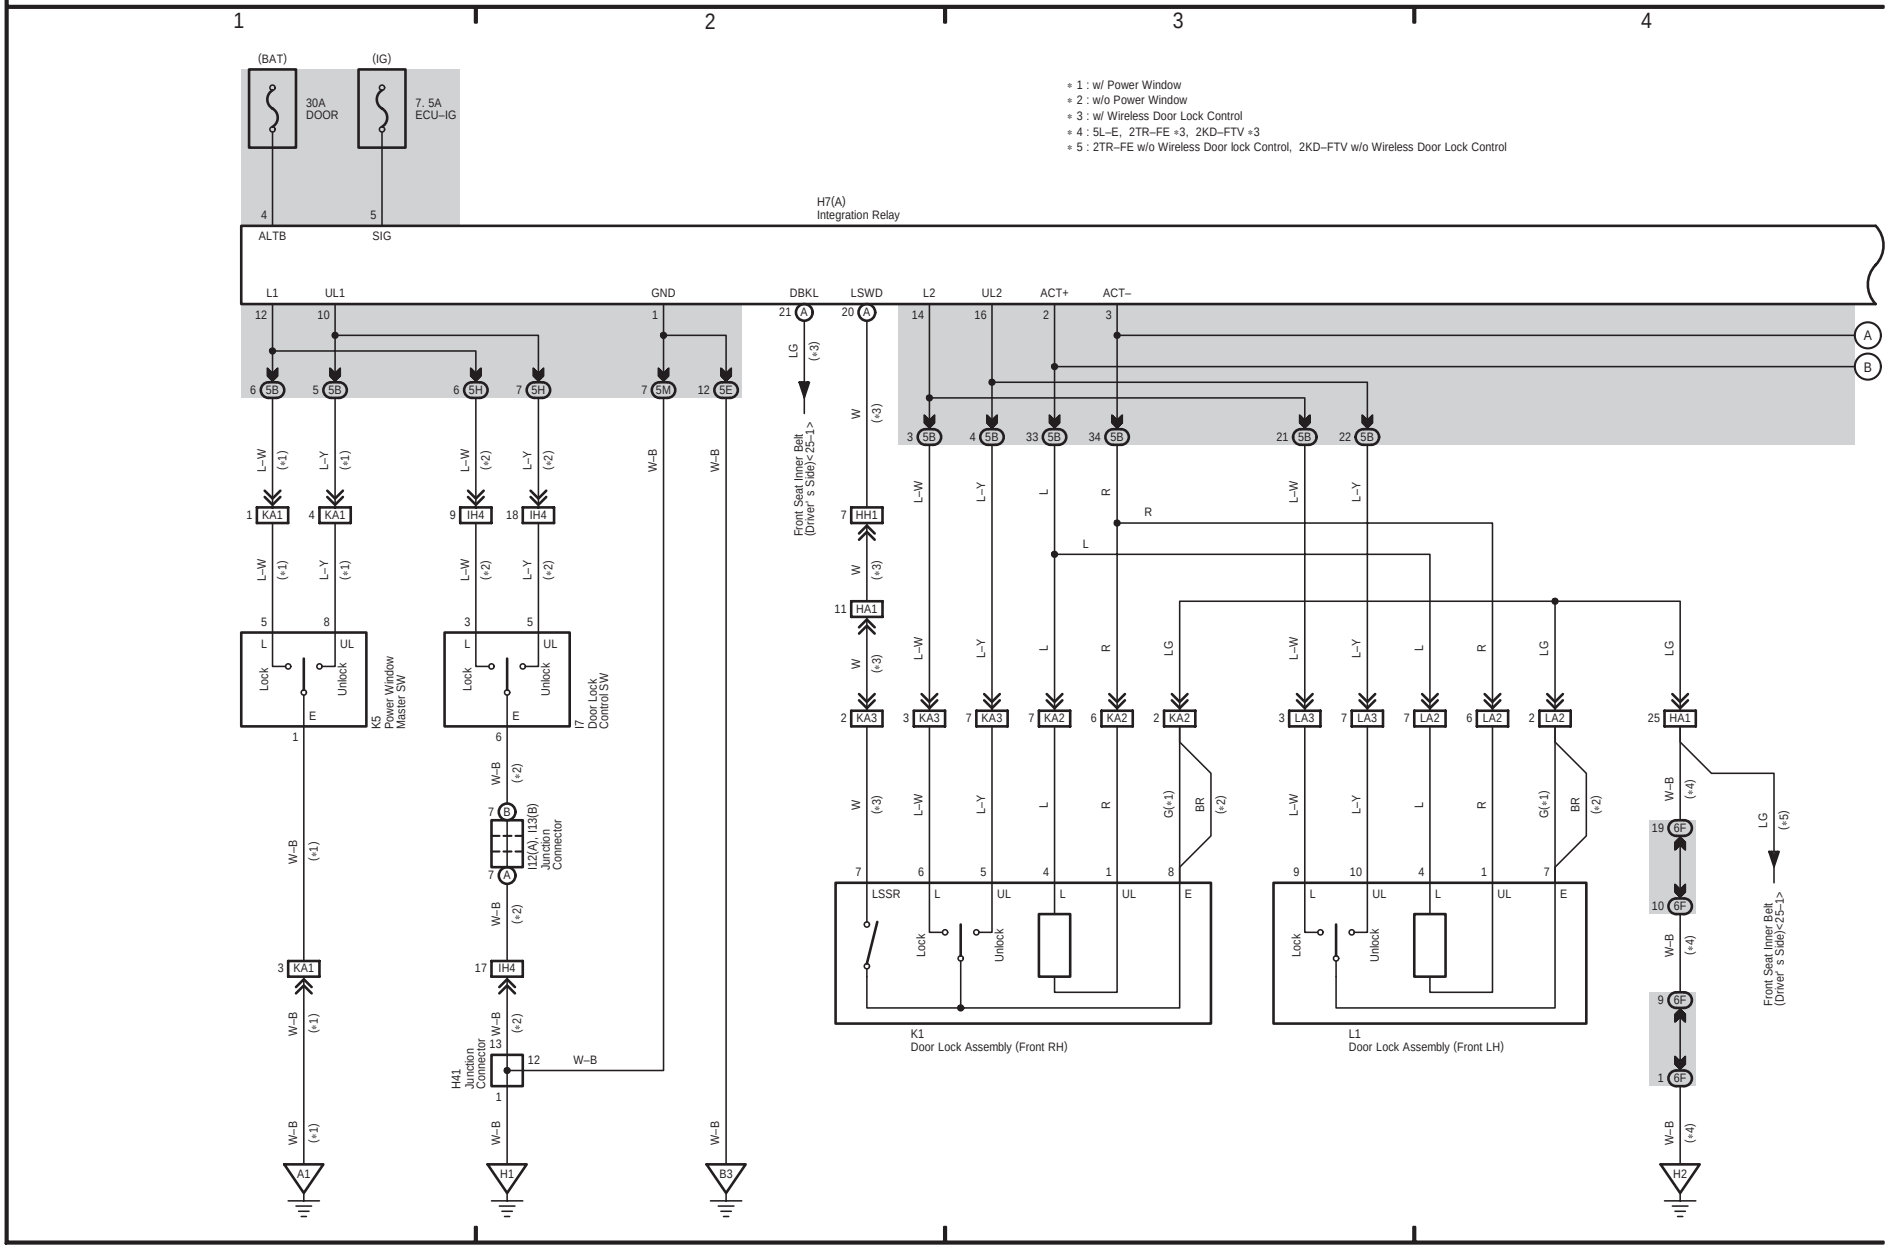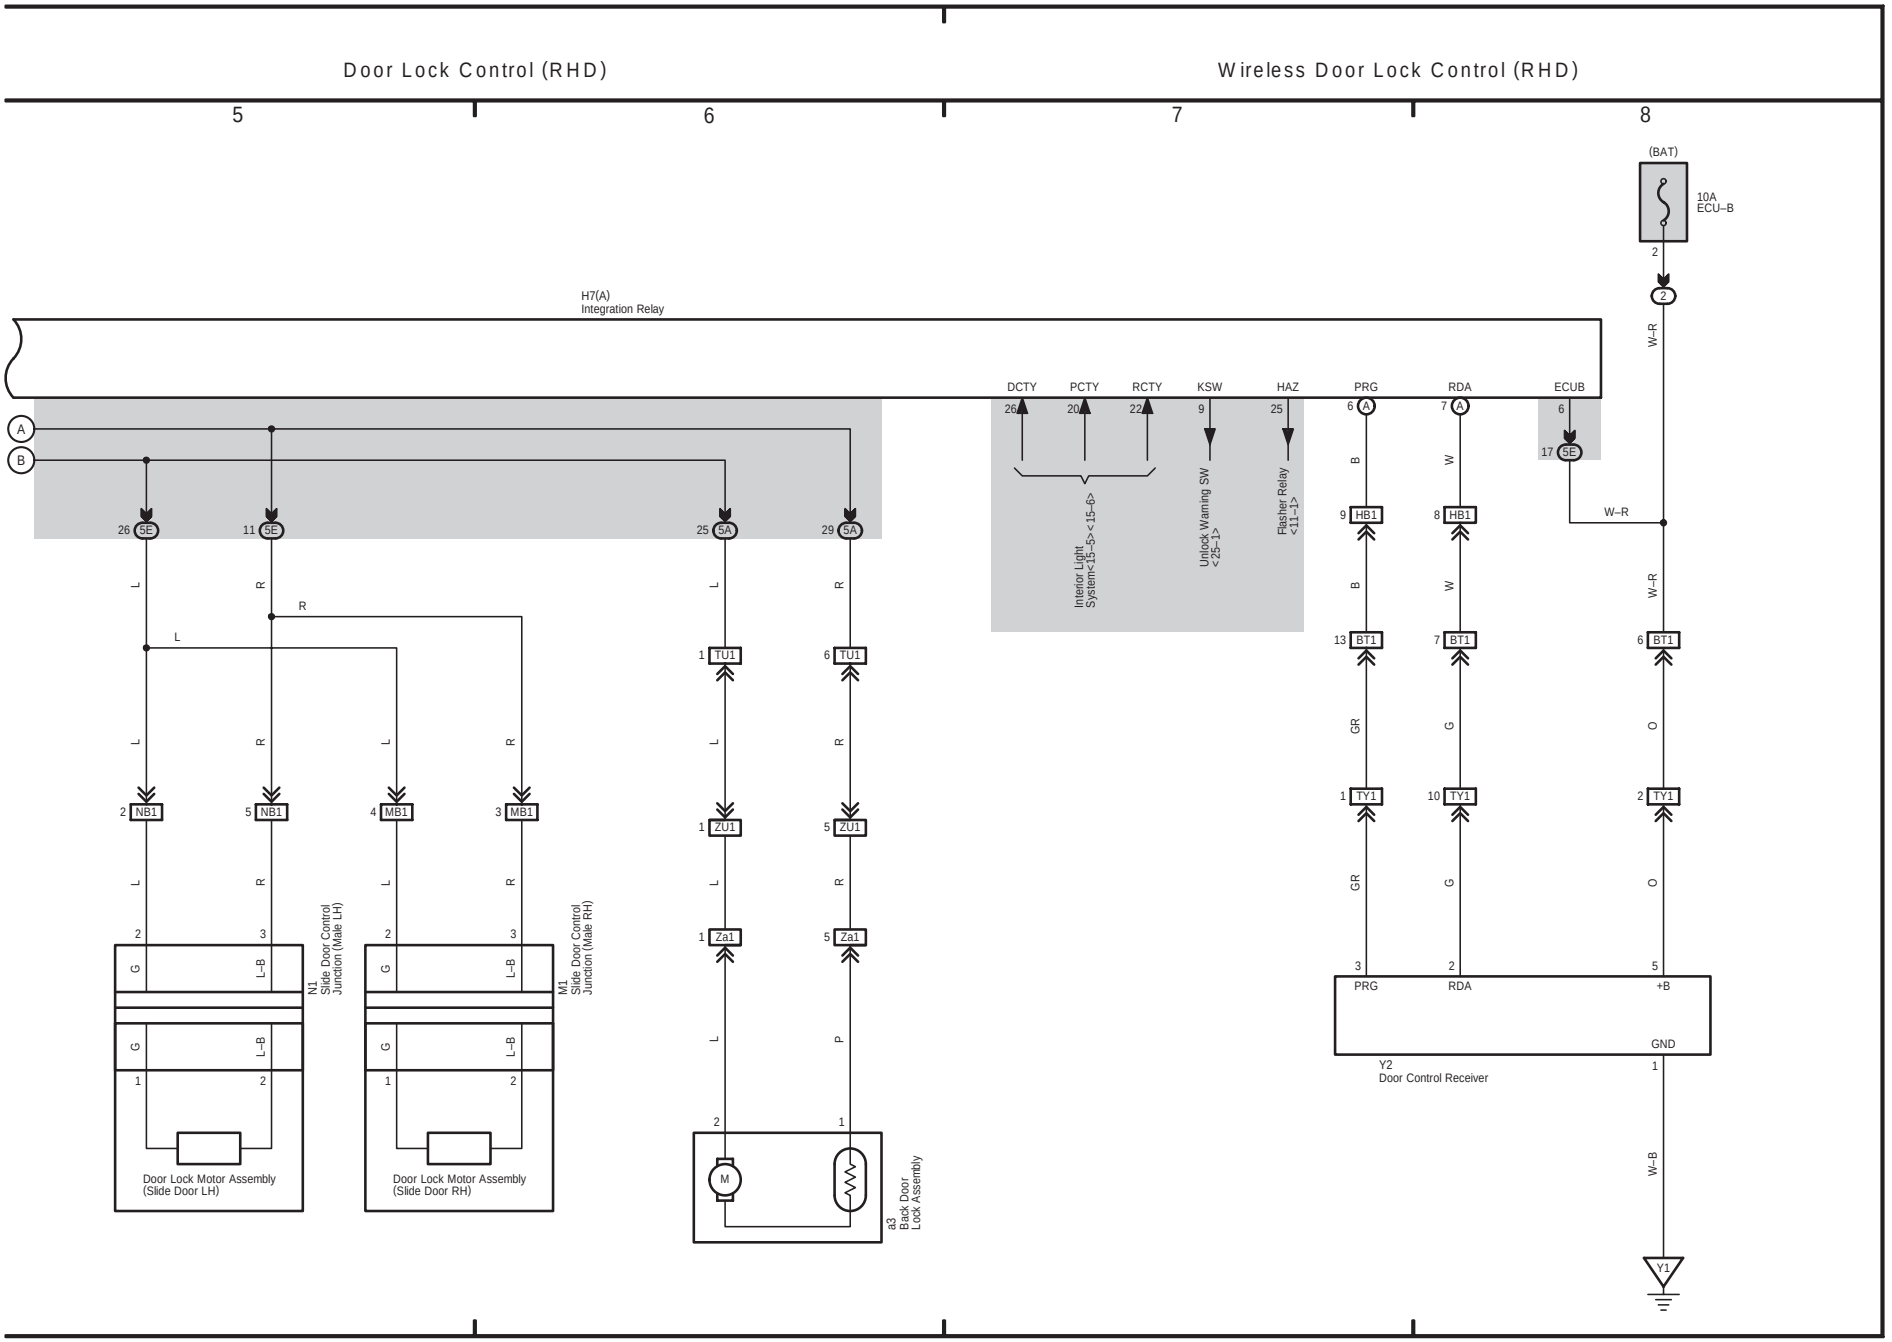


Door Lock Control (RHD)
Wireless Door Lock Control (RHD)
5
6
7
8
(BAT)
10A
ECU–B
H7(A)
Integration Relay
DCTY
PCTY
RCTY
KSW
HAZ
PRG
RDA
ECUB
Interior Light System<15–5><15–6>
Unlock Warning SW <25–1>
Flasher Relay <11–1>
W–R
B
W
L
R
GR
G
O
P
W–B
HB1
BT1
TY1
TU1
ZU1
Za1
NB1
MB1
N1
Slide Door Control Junction (Male LH)
M1
Slide Door Control Junction (Male RH)
Door Lock Motor Assembly (Slide Door LH)
Door Lock Motor Assembly (Slide Door RH)
a3
Back Door Lock Assembly
Y2
Door Control Receiver
+B
GND
Y1

M