

F RELAY LOCATIONS

12

: Instrument Panel R/B

: Instrument Panel J/B No.2

Under the Glove Box (See Page 23)

(LHD) (From Dec. 2013 Production)

- * 1:7.5A ECU IG NO.2
- * 2:10A GAUGE NO.2
- * 3:7.5A STOP NO.2
- * 4:7.5A A/C NO.2
- * 5:7.5A ST
- * 6:10A H-LP LH-HI
(Halogen Headlight)
- * 7:10A H-LP RH-HI
(Halogen Headlight)
- * 8:10A H-LP LH-LO
(Halogen Headlight)
- * 9:10A H-LP RH-LO
(Halogen Headlight)

- * 10:10A H-LP RH-LO
(LED Headlight)
- * 11:10A H-LP LH-LO
(LED Headlight)
- * 12:10A H-LP RH-HI
(LED Headlight)
- * 13:10A H-LP LH-HI
(LED Headlight)
- * 14:7.5A ECU-IG NO. 3

The diagram illustrates the internal layout of the HIACE (EM26T4E) relay box. It features several relays with their terminal configurations and labels:

- FOG RR Relay**: A 3-pin relay with terminals 1, 2, and 3.
- MG CLT Relay**: A 3-pin relay with terminals 1, 2, and 3.
- AIR PMP HTR Relay**: A 3-pin relay with terminals 1, 2, and 3.
- HORN Relay**: A 3-pin relay with terminals 1, 2, and 3.
- DIM Relay**: A 5-pin relay with terminals 1, 2, 3, 4, and 5.
- HEAD Relay**: A 5-pin relay with terminals 1, 2, 3, 4, and 5.
- PTC NO.1 Relay**: A 5-pin relay with terminals 1, 2, 3, 4, and 5.
- PTC NO.2 Relay**: A 5-pin relay with terminals 1, 2, 3, 4, and 5.
- ST Relay**: A 3-pin relay with terminals 1, 2, and 3.

Terminal connections are indicated by numbers and asterisks (*). For example, the DIM Relay has terminals 1, 2, 3, 4, and 5. The HEAD Relay has terminals 1, 2, 3, 4, and 5. The PTC NO.1 Relay has terminals 1, 2, 3, 4, and 5. The PTC NO.2 Relay has terminals 1, 2, 3, 4, and 5. The ST Relay has terminals 1, 2, and 3.

Unit A is labeled on the right side of the diagram.

HIACE (EM26T4E)


12 : Instrument Panel R/B

Instrument Panel J/B No.2

Under the Glove Box (See Page 23)

(RHD) (From Dec. 2013 Production)

- * 1:10A H-LP RH-LO
(Halogen Headlight)
- * 2:10A H-LP LH-LO
(Halogen Headlight)
- * 3:10A H-LP RH-HI
(Halogen Headlight)
- * 4:10A H-LP LH-HI
(Halogen Headlight)
- * 5:10A GAUGE NO.2
- * 6:7.5A ECU IG NO.2
- * 7:7.5A ST
- * 8:7.5A A/C NO.2
- * 9:7.5A STOP NO.2
- * 10:10A H-LP RH-LO
(LED Headlight)
- * 11:10A H-LP LH-LO
(LED Headlight)
- * 12:10A H-LP RH-HI
(LED Headlight)
- * 13:10A H-LP LH-HI
(LED Headlight)
- * 14:PTC NO.2 Relay
(Except 1GD-FTV),
DCU Relay(1GD-FTV)
- * 15:PTC NO.1 Relay
(Except 1GD-FTV),
DEF Relay(1GD-FTV)
- * 16:25A DCU NO.2
- * 17:15A DCU NO.1

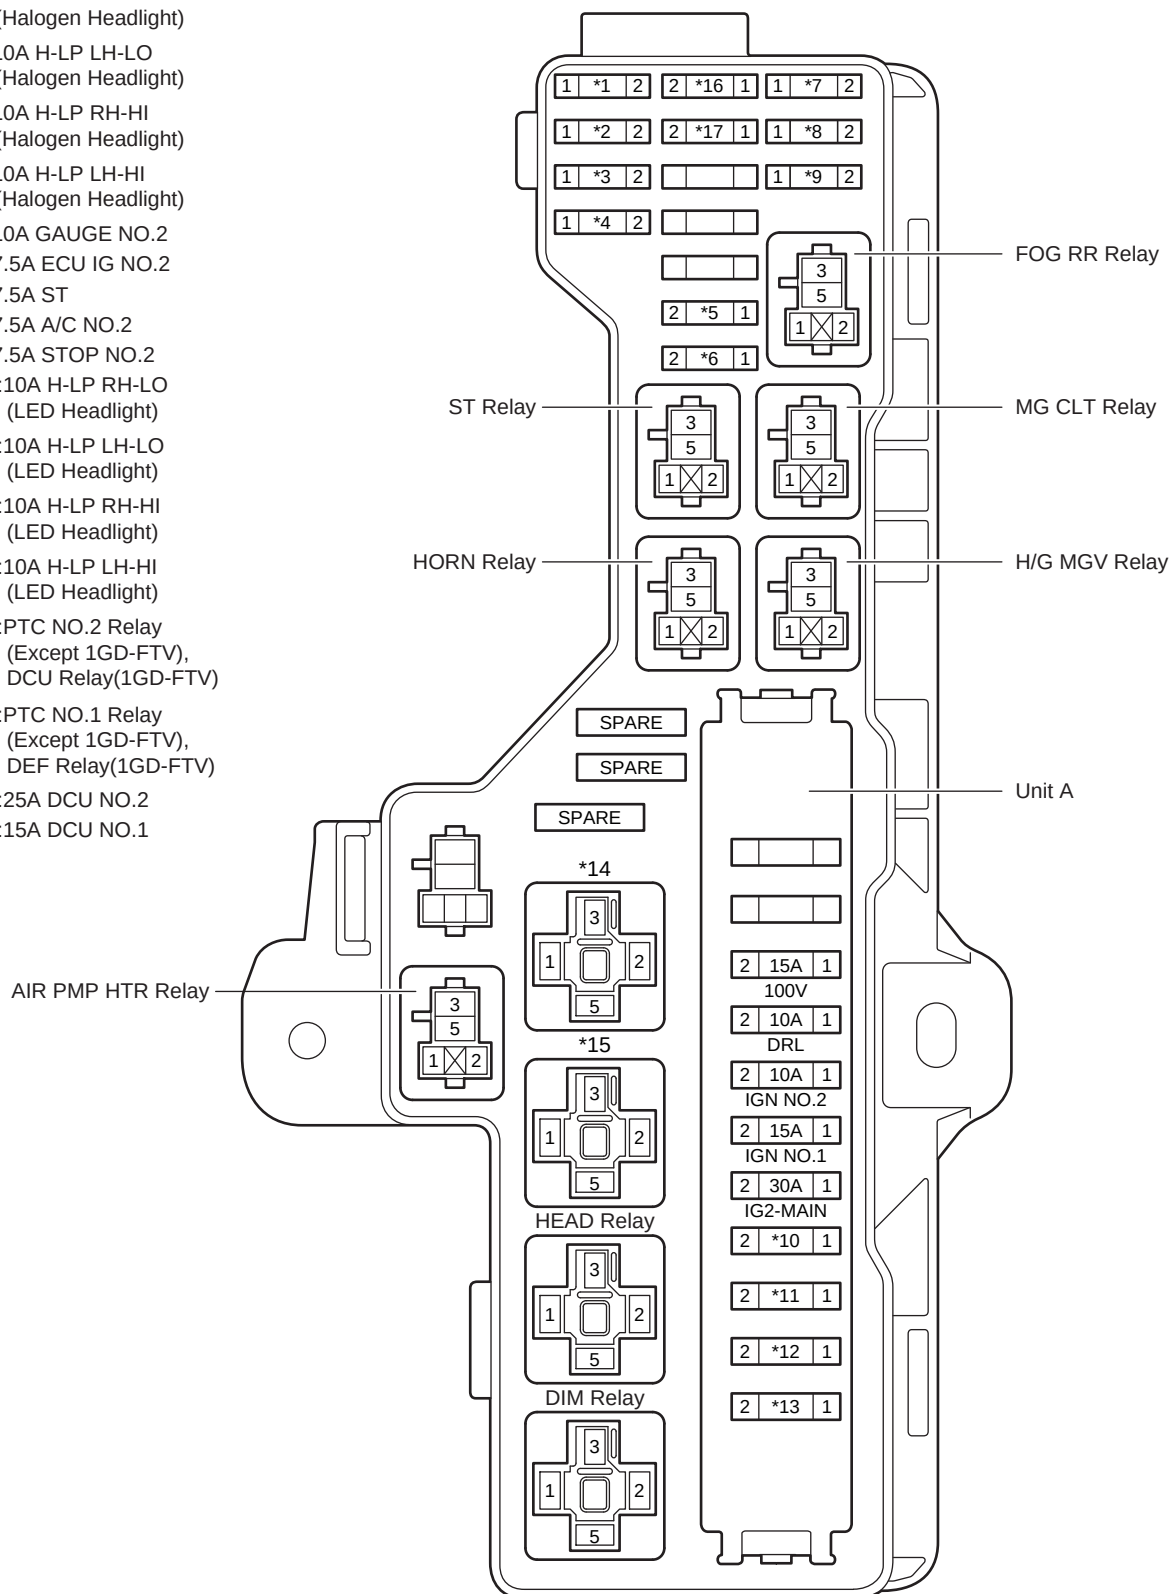

HIACE (EM26T4E)

F RELAY LOCATIONS

12 : Instrument Panel R/B	Under the Glove Box (See Page 23)
: Instrument Panel J/B No.2	

(From Dec. 2013 Production)

Unit A

