

REAR FLOOR CENTER CROSSMEMBER (ASSY)


F14883B

REPLACEMENT

REMOVAL

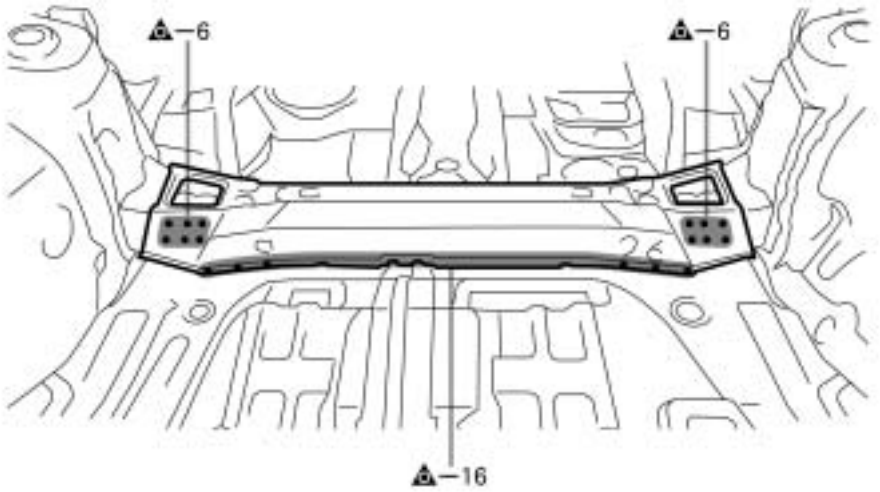

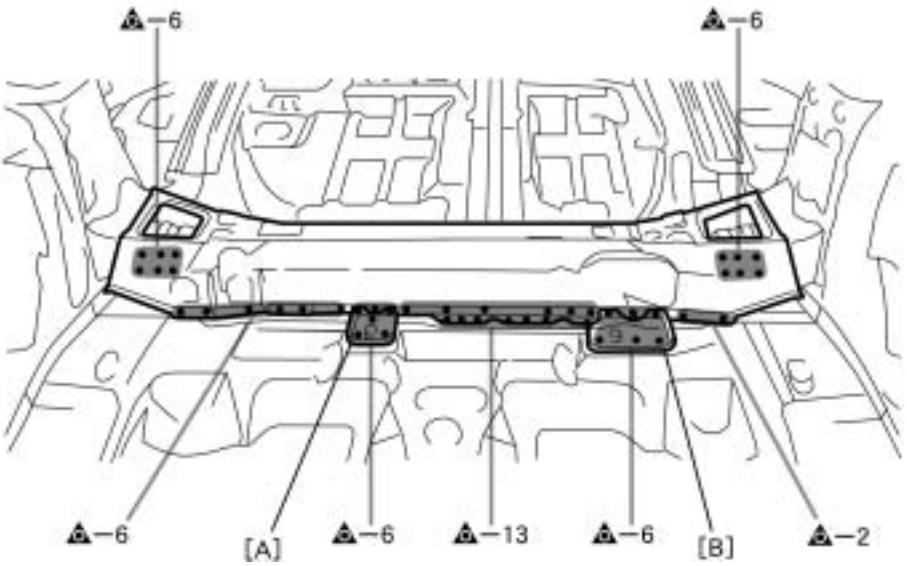


F14883

POINT
1 Remove the [A] and [B] at the same time.

PART NAME
[A] Front Floor Panel Side Plate [B] Fuel Tank Support Bracket

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

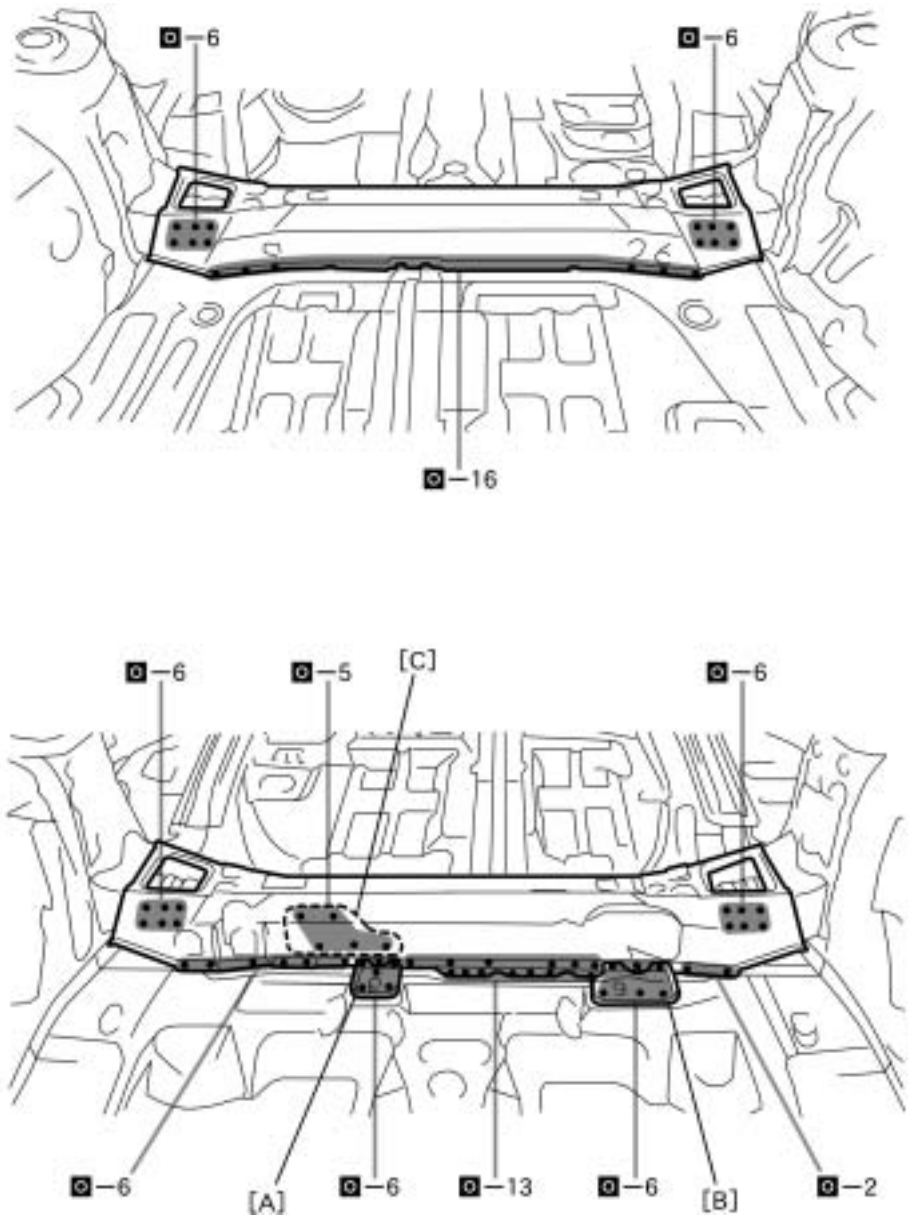

F14884

PART NAME

[A] Front Floor Panel Side Plate [B] Fuel Tank Support Bracket
[C] Rear Floor Crossmember No.2 Reinforcement