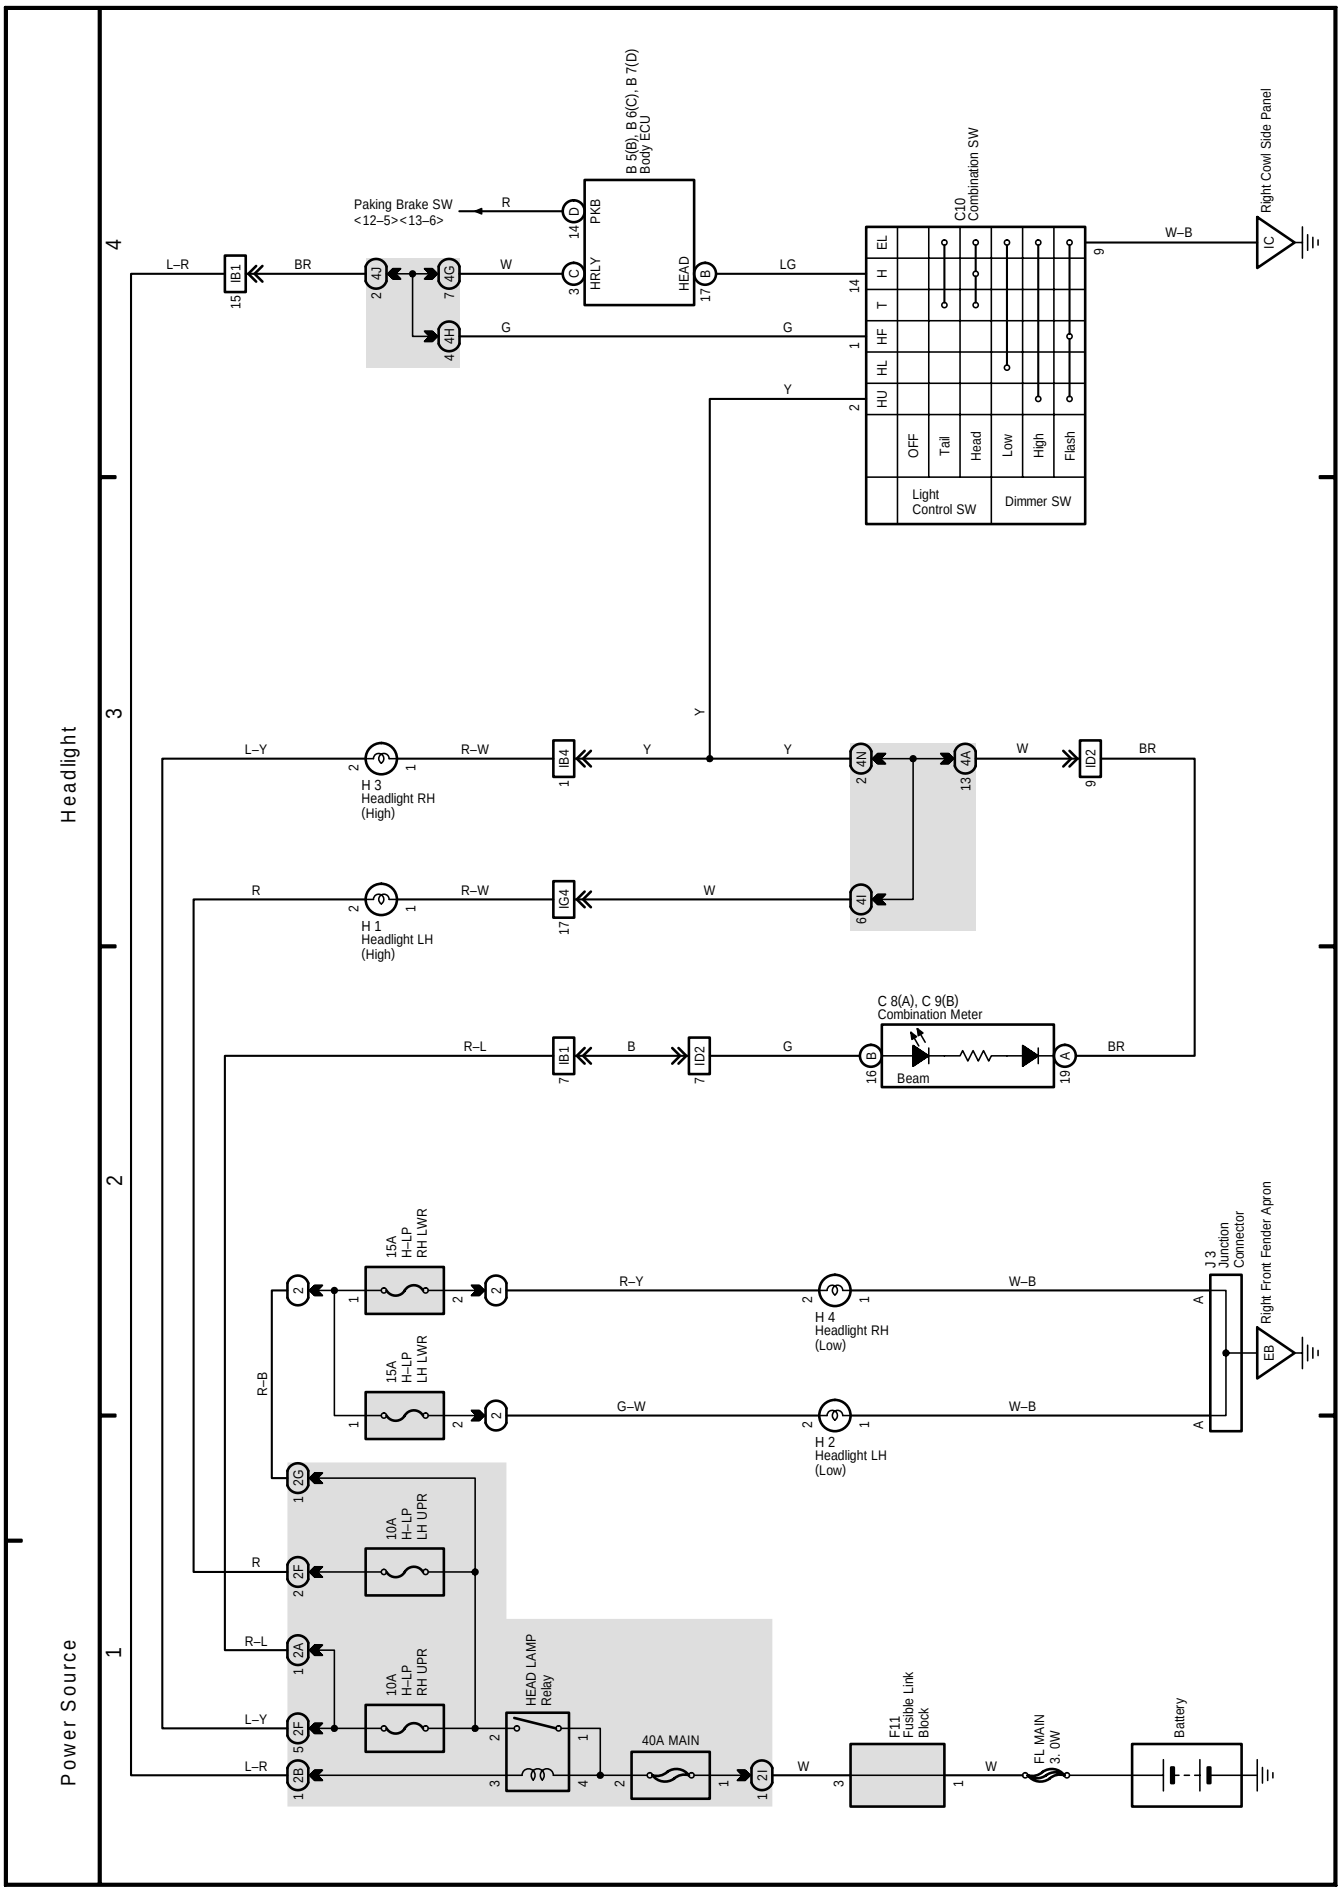

4 KLUGER
Power Source
Headlight
Paking Brake SW
<12–5><13–6>
B 5(B), B 6(C), B 7(D)
Body ECU
PKB
HRLY
HEAD
C10
Combination SW
EL
H
T
HF
HL
HU
OFF
Tail
Head
Low
High
Flash
Light
Control SW
Dimmer SW
Right Cowl Side Panel
IC
IB1
IB4
ID2
IG4
H 3
Headlight RH
(High)
H 1
Headlight LH
(High)
C 8(A), C 9(B)
Combination Meter
Beam
15A
H–LP
RH LWR
15A
H–LP
LH LWR
10A
H–LP
LH UPR
10A
H–LP
RH UPR
HEAD LAMP
Relay
40A MAIN
H 4
Headlight RH
(Low)
H 2
Headlight LH
(Low)
J 3
Junction
Connector
Right Front Fender Apron
EB
F11
Fusible Link
Block
FL MAIN
3. 0W
Battery