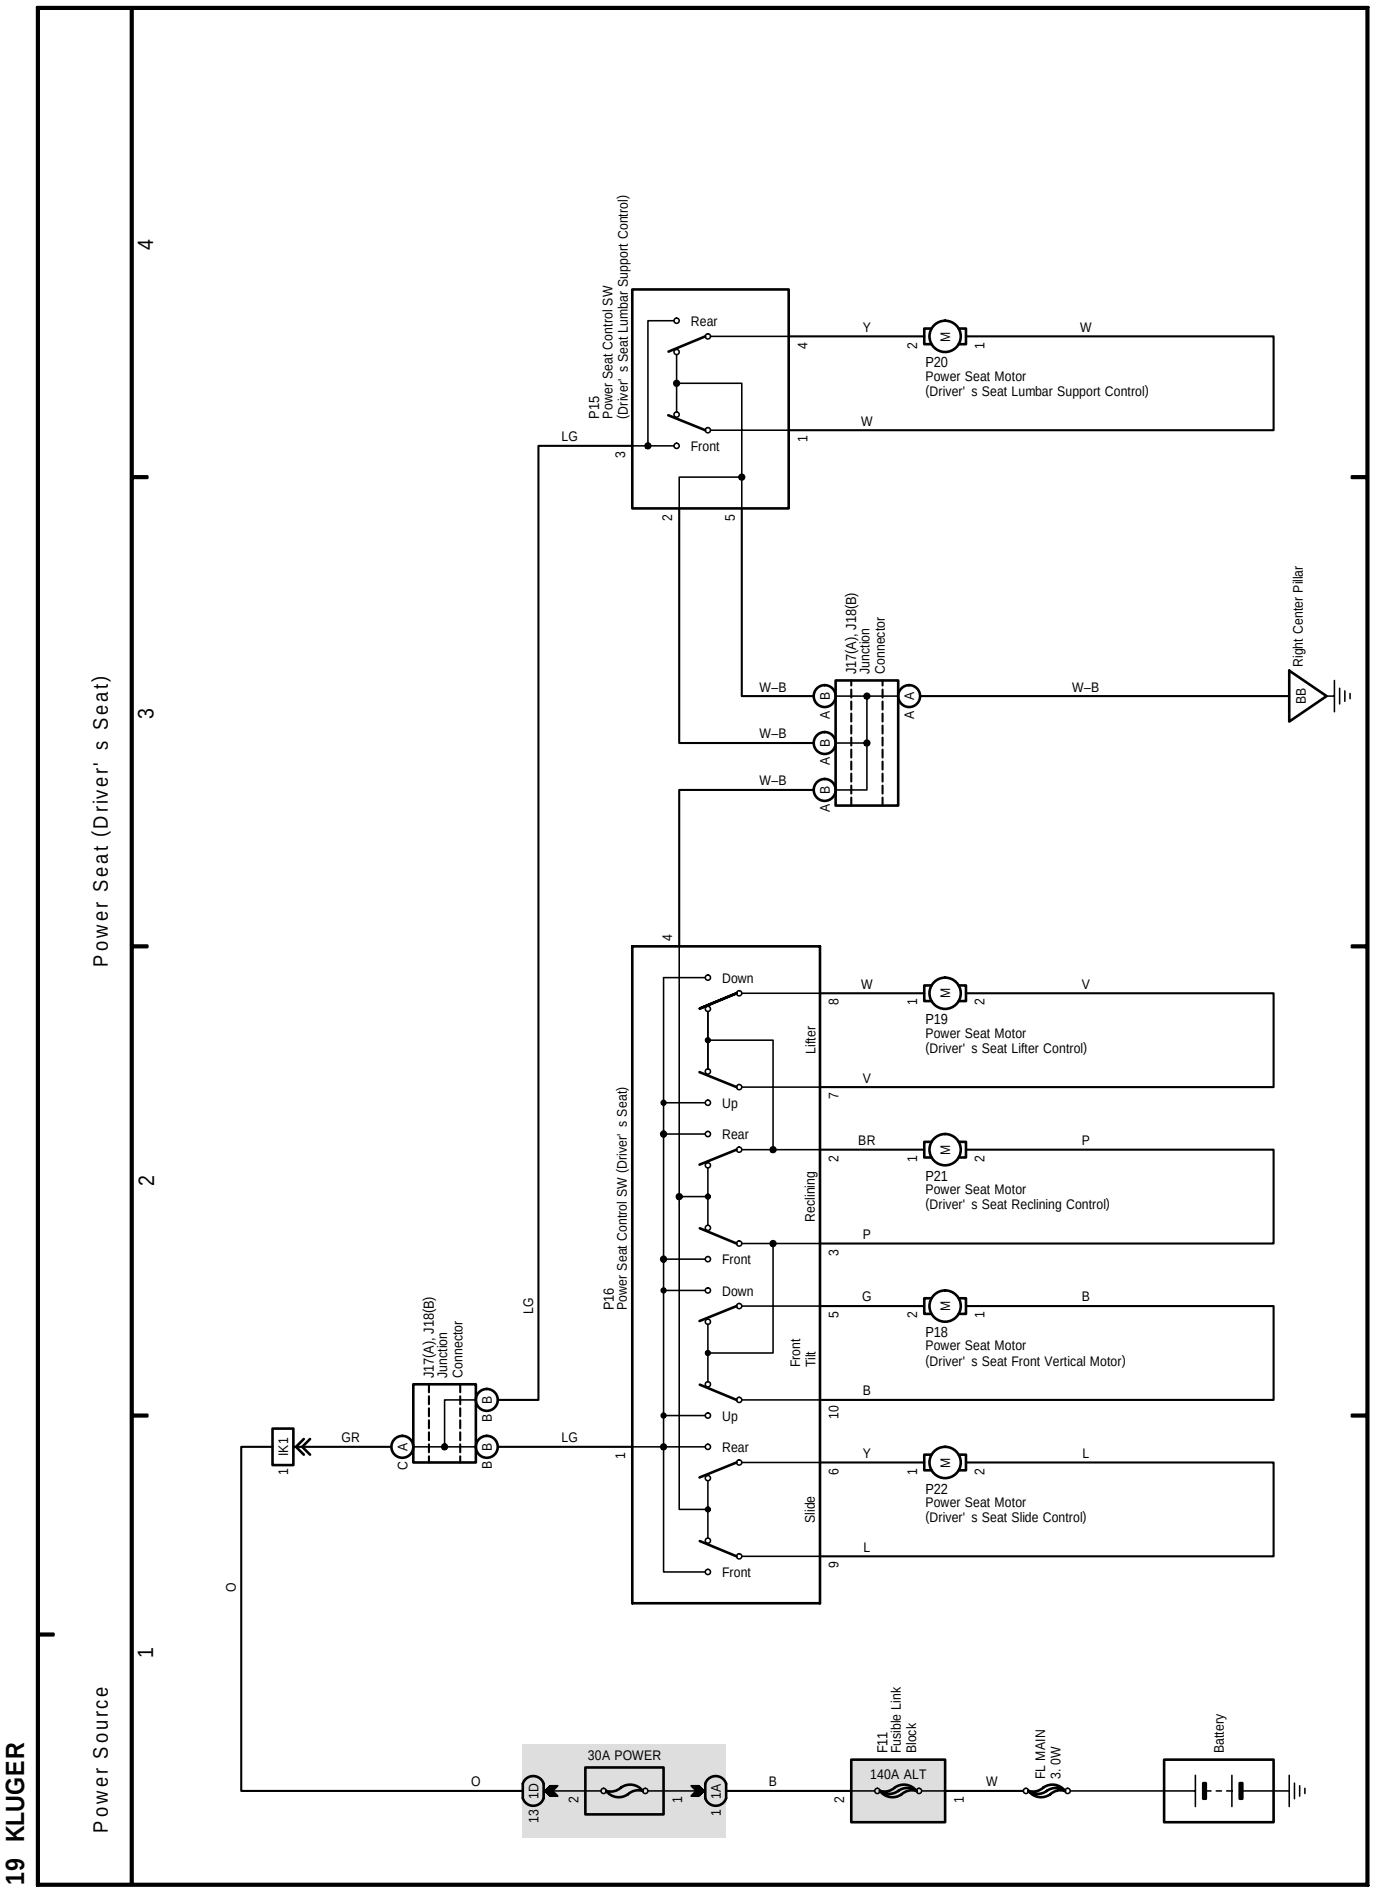

19 KLUGER
Power Source
Power Seat (Driver' s Seat)
1
2
3
4
P15
Power Seat Control SW
(Driver' s Seat Lumbar Support Control)
Rear
Front
P20
Power Seat Motor
(Driver' s Seat Lumbar Support Control)
J17(A), J18(B)
Junction
Connector
Right Center Pillar
BB
P16
Power Seat Control SW (Driver' s Seat)
Down
Up
Rear
Front
Lifter
Reclining
Front
Tilt
Slide
P19
Power Seat Motor
(Driver' s Seat Lifter Control)
P21
Power Seat Motor
(Driver' s Seat Reclining Control)
P18
Power Seat Motor
(Driver' s Seat Front Vertical Motor)
P22
Power Seat Motor
(Driver' s Seat Slide Control)
IK1
30A POWER
140A ALT
F11
Fusible Link
Block
FL MAIN
3. 0W
Battery
W–B
LG
GR
O
B
W
Y
BR
G
P
V
L