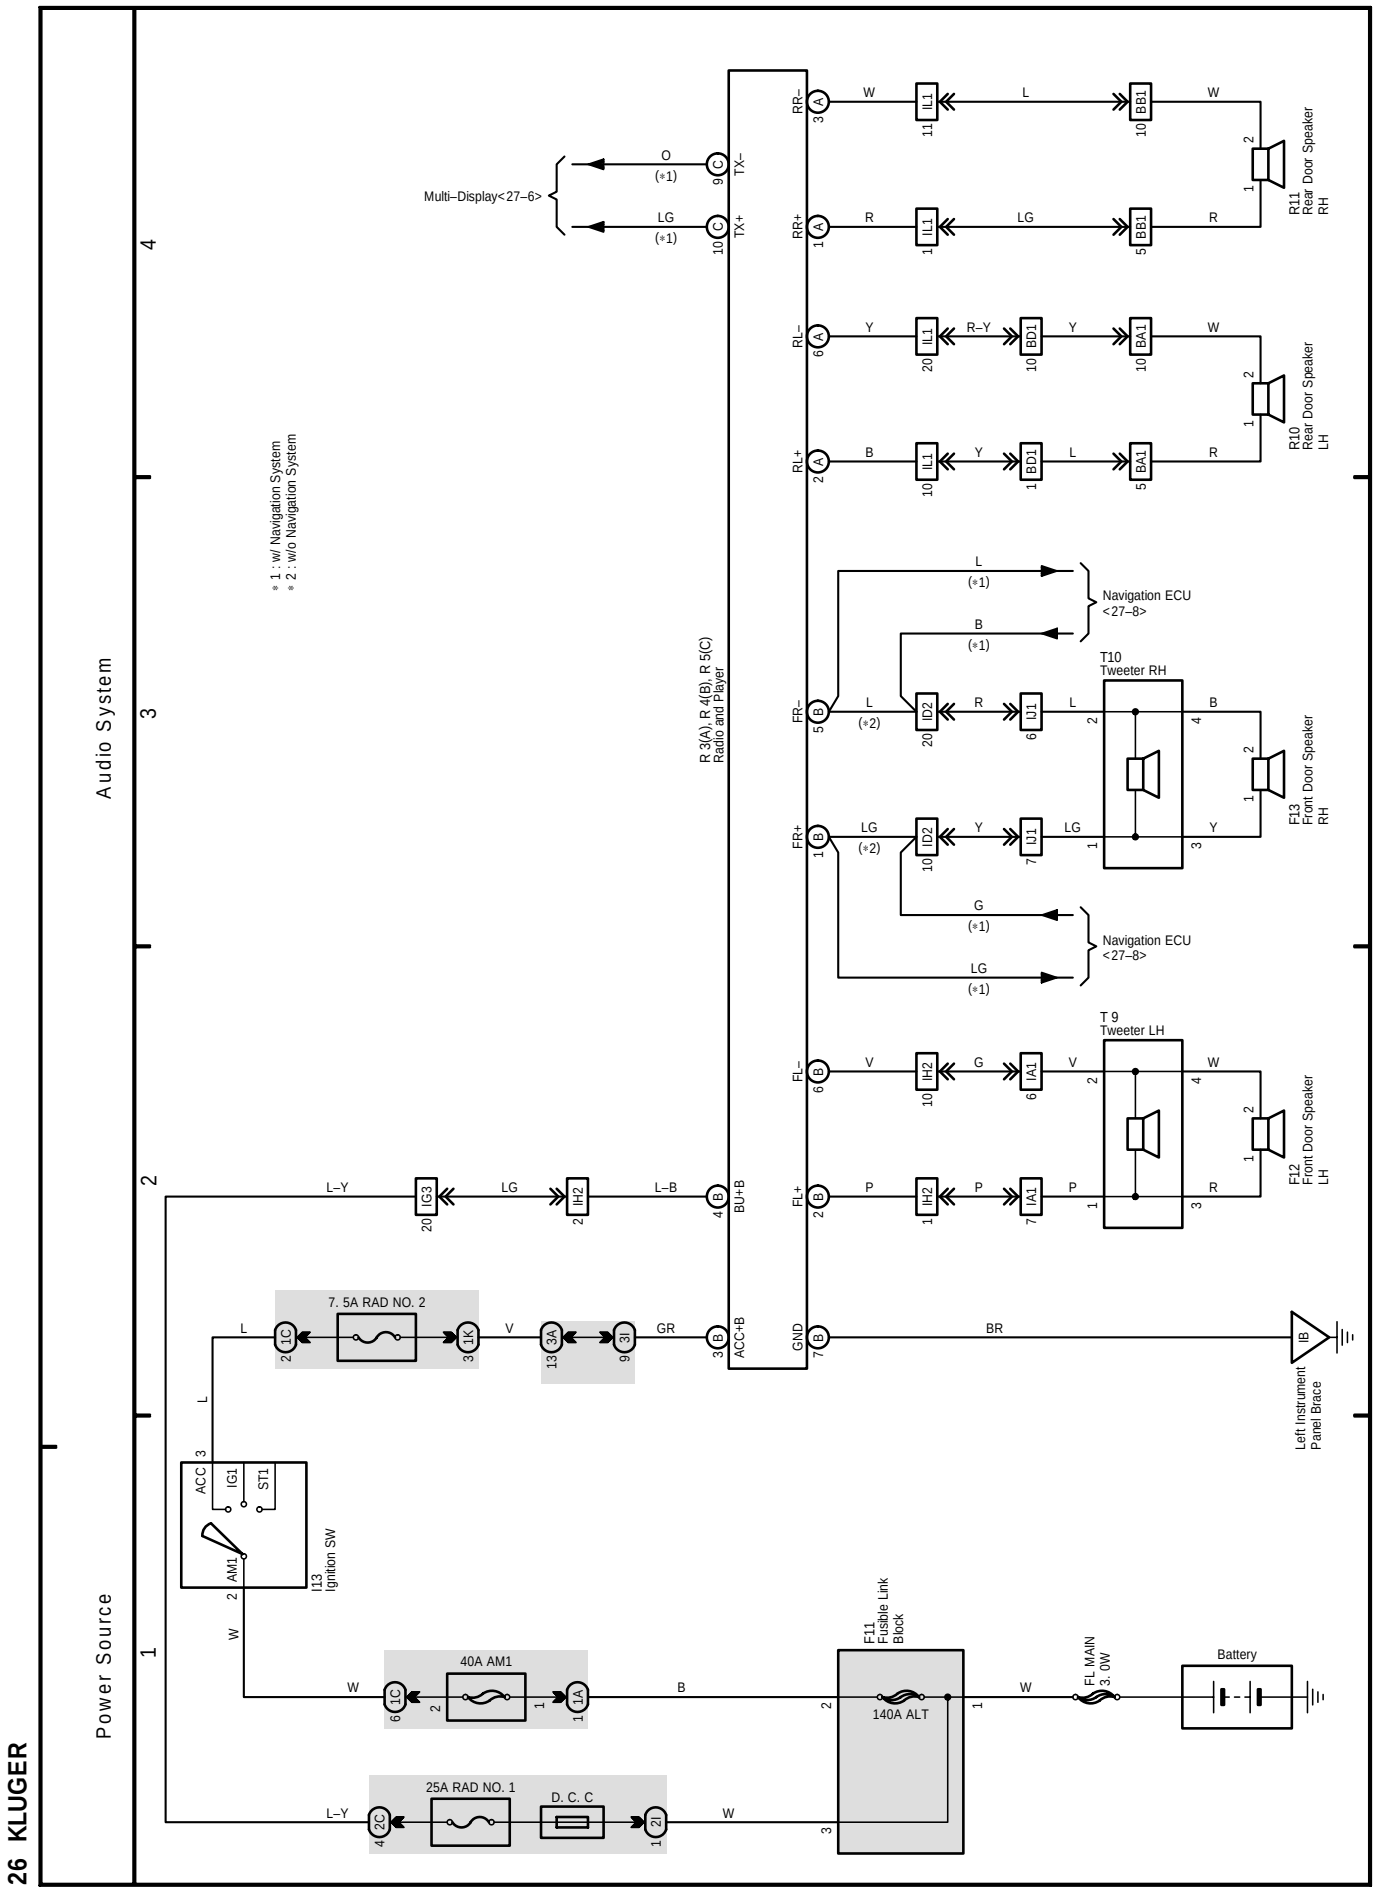

26 KLUGER
Power Source
Audio System
1
2
3
4
* 1 : w/ Navigation System
* 2 : w/o Navigation System
Multi–Display<27–6>
O (*1)
LG (*1)
TX–
TX+
R 3(A), R 4(B), R 5(C) Radio and Player
BU+B
ACC+B
GND
RR–
RR+
RL–
RL+
FR–
FR+
FL–
FL+
R11 Rear Door Speaker RH
R10 Rear Door Speaker LH
F13 Front Door Speaker RH
F12 Front Door Speaker LH
T10 Tweeter RH
T 9 Tweeter LH
Navigation ECU <27–8>
Navigation ECU <27–8>
7. 5A RAD NO. 2
I13 Ignition SW
ACC
IG1
ST1
AM1
40A AM1
25A RAD NO. 1
D. C. C
F11 Fusible Link Block
140A ALT
FL MAIN 3. 0W
Battery
I8 Left Instrument Panel Brace