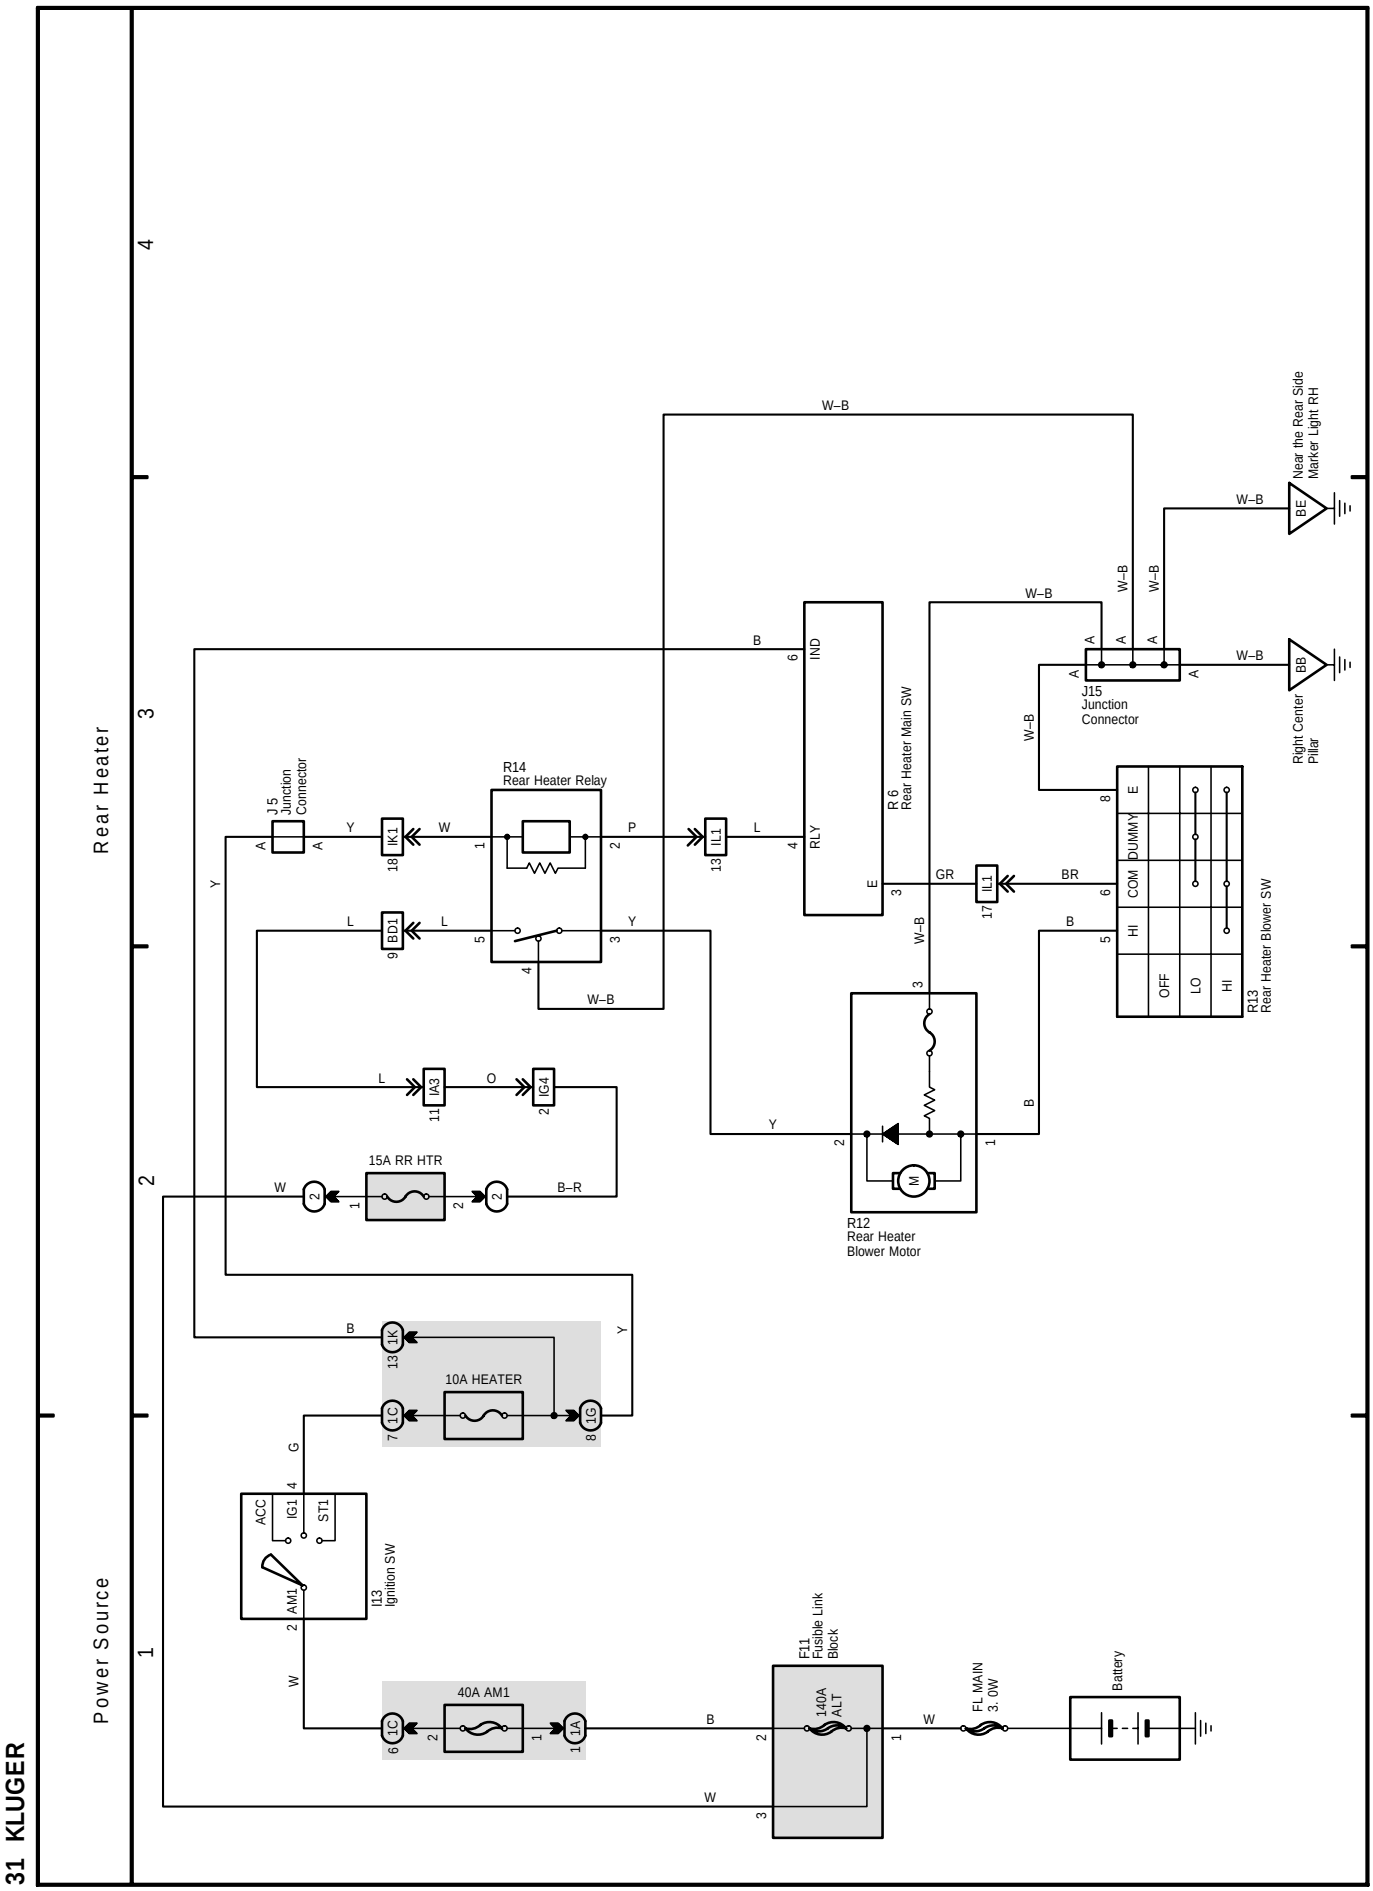

Rear Heater
Power Source
R14
Rear Heater Relay
J5
Junction
Connector
J15
Junction
Connector
R 6
Rear Heater Main SW
R13
Rear Heater Blower SW
R12
Rear Heater
Blower Motor
Near the Rear Side
Marker Light RH
Right Center
Pillar
15A RR HTR
10A HEATER
40A AM1
I13
Ignition SW
F11
Fusible Link
Block
140A
ALT
FL MAIN
3. 0W
Battery
W–B
B
Y
L
W
P
G
O
GR
BR
B–R
IND
RLY
DUMMY
COM
HI
LO
OFF
ACC
IG1
ST1
AM1

31 KLUGER