DISPLAY DOES NOT DIM (NIGHT SCREEN) WITH TAIL SWITCH ON

INSPECTION PROCEDURE


1 CHECK SYSTEM

(a) Turn the light control switch to the TAIL or HEAD position.
Check if the illumination of the switches such as on the radio receiver assy comes on.
OK: Illumination of the switches comes on.

NG → **GO TO COMBINATION METER SYSTEM (SEE PAGE 05–956)**

OK

2 CHECK IMAGE QUALITY SETTING

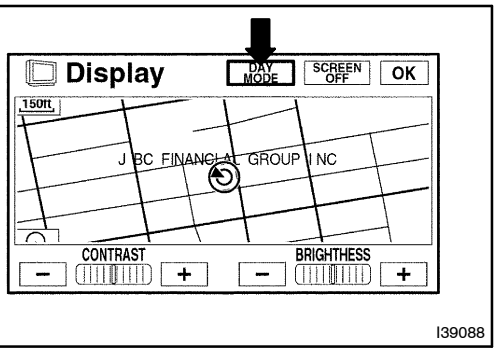

(a) Enter the display adjustment screen by pressing the "DISPLAY" switch.
(b) Turn the light control switch to the TAIL position.
(c) Check if "DAY MODE" on the display adjustment is ON.
OK: "DAY MODE" is ON.

OK → **TURN FORCED "DAY MODE" SETTING OFF**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05–880)