
ACCELERATOR PEDAL ROD ASSY (3MZ–FE)

100NY–01

REPLACEMENT

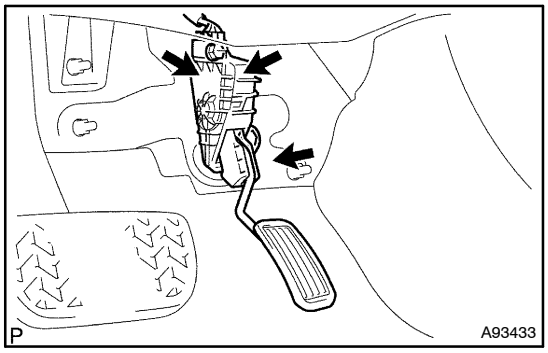

1. REMOVE ACCELERATOR PEDAL ROD ASSY

(a) Disconnect the accelerator pedal position sensor connector.

(b) Remove the 2 bolts and pedal rod.

2. INSTALL ACCELERATOR PEDAL ROD ASSY

(a) Install the pedal rod with the 2 bolts.

Torque: 4.9 N·m (50 kgf·cm, 43 in.·lbf)

(b) Connect the accelerator pedal position sensor connector.