W/HOLDER ANTENNA ASSY


REPLACEMENT

6717D–01

HINT:

- COMPONENTS: See page 67–2
- Installation is in the reverse order of removal.


1. **REMOVE GLOVE COMPARTMENT DOOR ASSY** (SEE PAGE 71–9)
2. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER NO.2** (SEE PAGE 71–9)
3. **REMOVE FRONT PILLAR GARNISH RH** (SEE PAGE 71–9)
4. **REMOVE FRONT FENDER SPLASH SHIELD SUB–ASSY LH** (SEE PAGE 76–2)

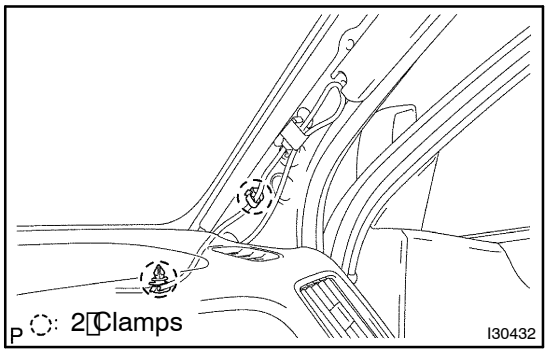

5. **REMOVE W/HOLDER ANTENNA ASSY**


(a) Disconnect the connector, and remove the bolt.

(b) Remove the 2 clamps.

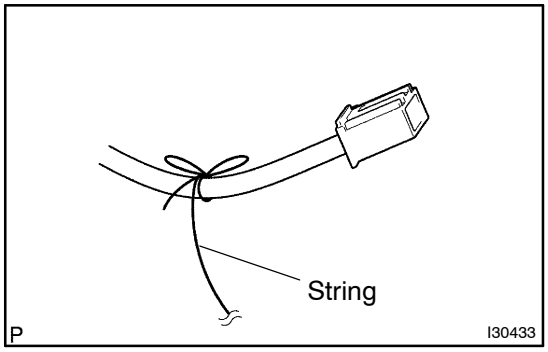

(c) Tie the string at the tip of the cable of the w/ holder antenna assy.

(d) Remove the antenna nut and ornament antenna.

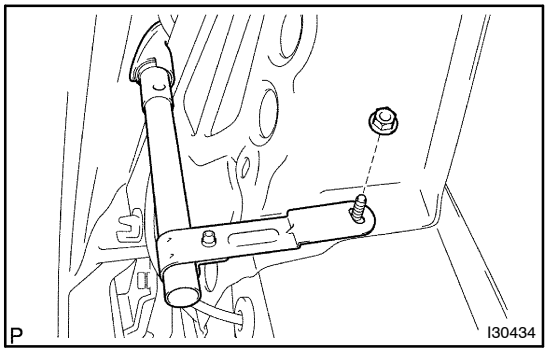

(e) Remove the nut and w/ holder antenna assy.

6. INSTALL W/HOLDER ANTENNA ASSY

(a) Install the w/ holder antenna assy with the nut.
(b) Install the antenna nut and ornament antenna.
(c) Use the string to put the cable of the w/ holder antenna assy.
(d) Install the 2 clamps.
(e) Connect the connector and install the bolt.