
REAR FLOOR SIDE REAR MEMBER (CUT-H)

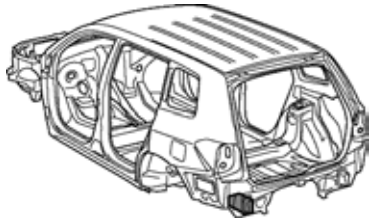

F28431A


With the body lower back panel removed.

Symbol meaning

REMOVAL	: Remove Weld Points	: Cut and Join Location
INSTALLATION	: Plug Weld	: Butt Weld

F28431B

REMOVAL·INSTALLATION

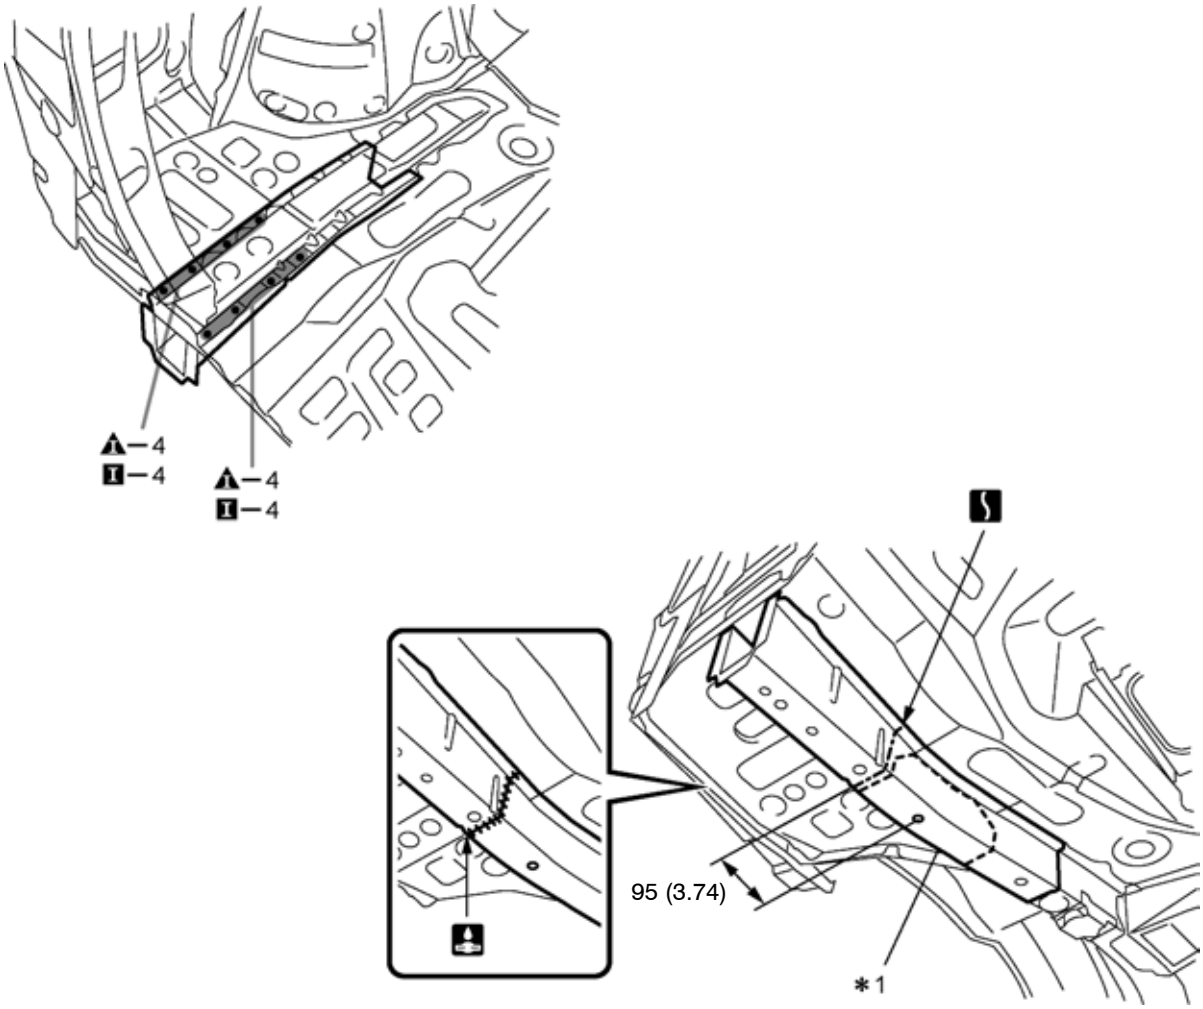

mm (in.)

F28431

REMOVAL POINT

1 Carefully cut the rear floor side rear member so not to damage *1.

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.