
BODY DIMENSION DRAWINGS
ENGINE COMPARTMENT

(Three - Dimensional Distance)

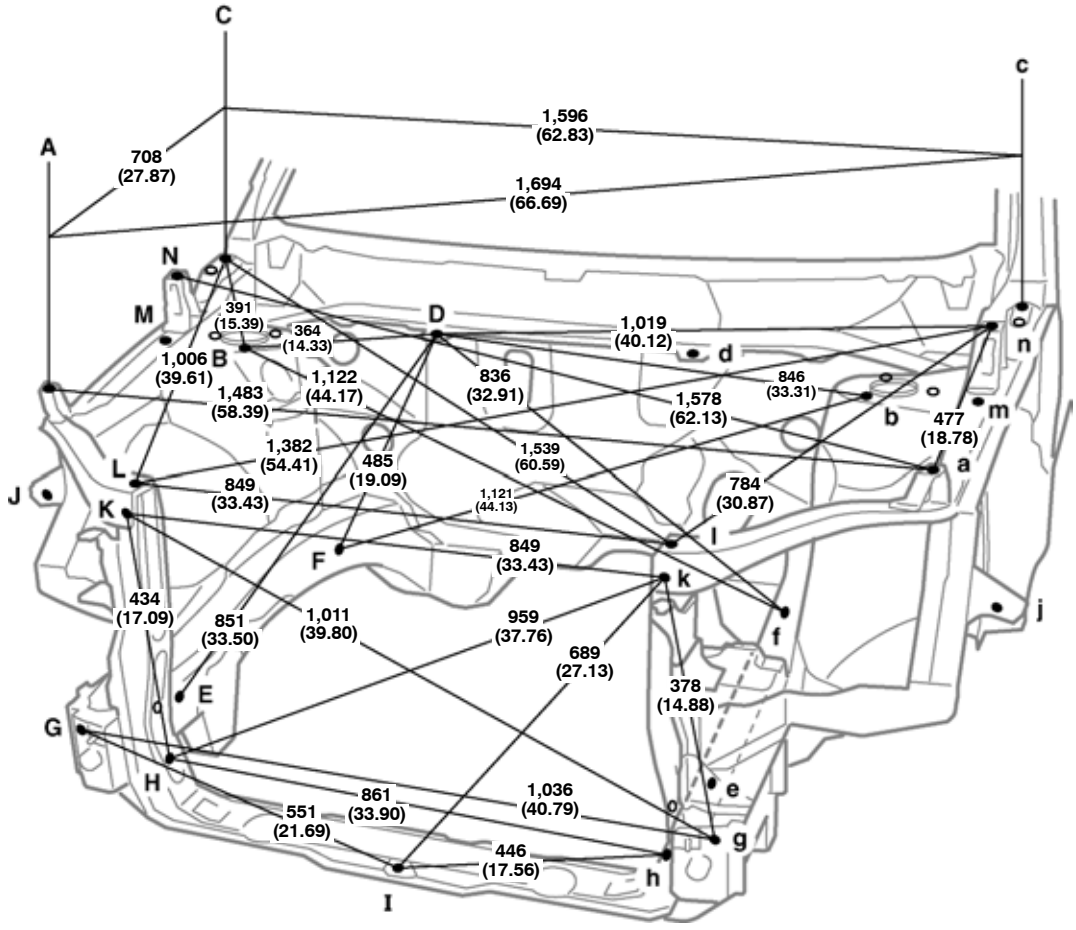

Vehicle Dimensions

B-c or b-C	D-L or d-l	D-l or d-L	D-e or d-E	B-b	J-j	M-m	N-n
1,420 (55.91)	778 (30.63)	1,015 (39.96)	1,089 (42.87)	1,167 (45.94)	1,680 (66.14)	1,534 (60.39)	1,525 (60.04)

Height from Imaginary Datum Line

A ,a	C,c	L,l
822 (32.36)	872 (34.33)	768 (30.24)


HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (seen from rear).

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front fender installation nut	M6 (0.24)	H, h	Front crossmember side gusset standard hole	ø10 (0.39)
B, b	Front spring support hole - inner	ø13 (0.51)	I	Hood lock support installation nut	M6 (0.24)
C, c	Hood hinge installation nut	M8 (0.31)	J, j	Front fender extension standard hole	ø10 (0.39)
D, d	Cowl top inner panel cowl installation nut	M6 (0.24)	K, k	Radiator upper support installation nut	M6 (0.24)
E, e	Front side member standard hole	ø18 (0.71)	L, l	Radiator upper support installation nut	M6 (0.24)
F, f	Front side member standard hole	RH ø18 (0.72) LH ø13 (0.51)	M, m	Front apron to cowl side member standard hole	ø13 (0.51)
G, g	Front bumper reinforcement installation nut	M21 (0.83)	N, n	Front fender installation nut	M6 (0.24)
—	—	—	—	—	—

BODY OPENING AREAS (Side View: Front)

(Three - Dimensional Distance)

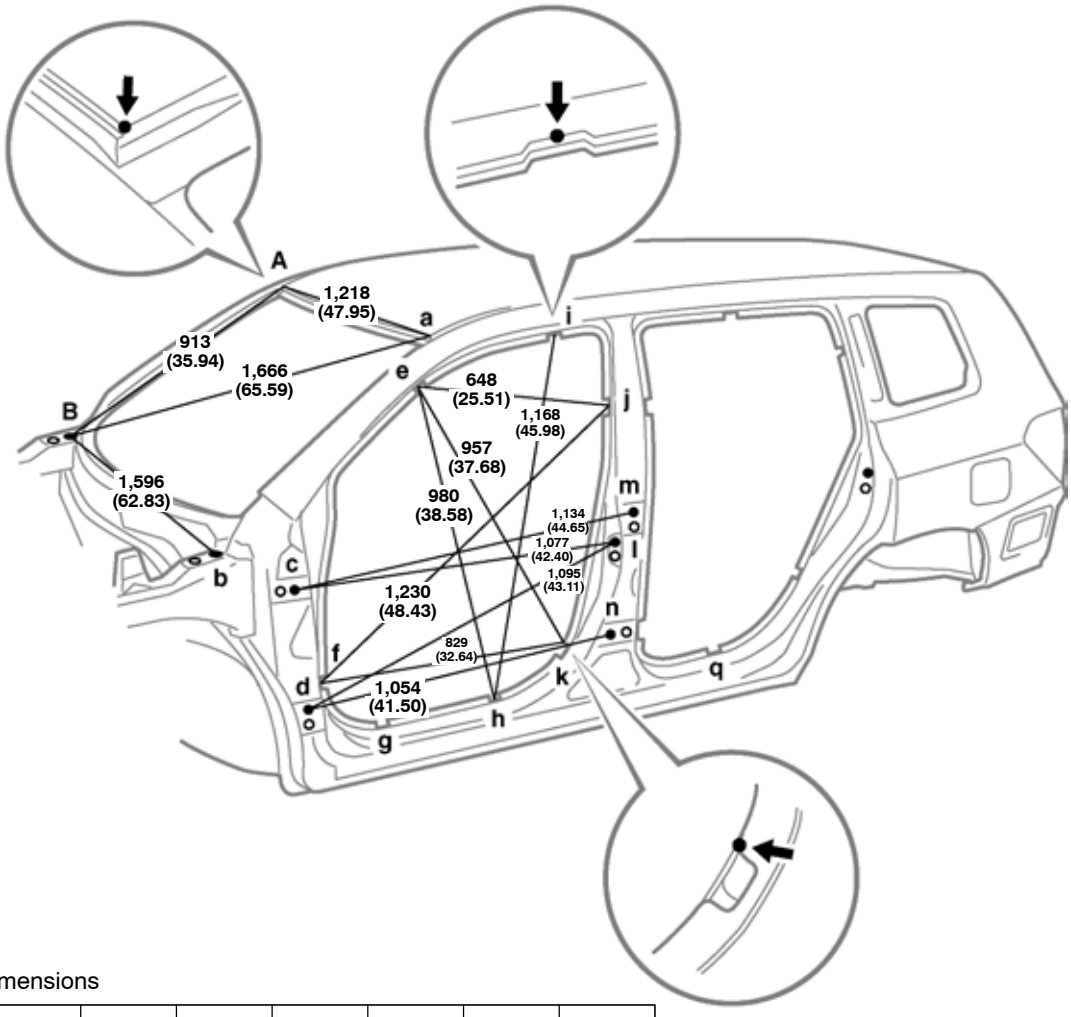

Vehicle Dimensions

E-e	F-f	G-g	H-h	I-i	J-j	K-k	L-l
1,383 (54.45)	1,556 (61.26)	1,527 (60.12)	1,527 (60.12)	1,287 (50.67)	1,462 (57.56)	1,557 (61.30)	1,679 (66.10)

E-f or e-F	E-h or e-H	E-j or e-J	F-j or f-J	F-k or f-K	G-q or g-Q	H-i or h-I	J-k or j-K
1,712 (67.40)	1,753 (69.02)	1,563 (61.54)	1,946 (76.61)	1,764 (69.45)	1,871 (73.66)	1,825 (71.85)	1,690 (66.54)


HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (seen from rear).

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Roof panel corner	—	H, h	Rocker panel assembly mark	—
B, b	Hood hinge installation nut	M8 (0.31)	I, i	Roof side rail assembly mark	—
C, c	Front door hinge installation nut	M8 (0.31)	J, j	Center body pillar assembly mark	—
D, d	Front door hinge installation nut	M8 (0.31)	K, k	Center body pillar assembly mark	—
E, e	Front body pillar assembly mark	—	L, l	Front door lock striker installation nut	M8 (0.31)
F, f	Front body pillar assembly mark	—	M, m	Rear door hinge installation nut	M8 (0.31)
G, g	Rocker panel assembly mark	—	N, n	Rear door hinge installation nut	M8 (0.31)
			Q, q	Rocker panel assembly mark	—

BODY OPENING AREAS (Side View: Rear)

(Three - Dimensional Distance)

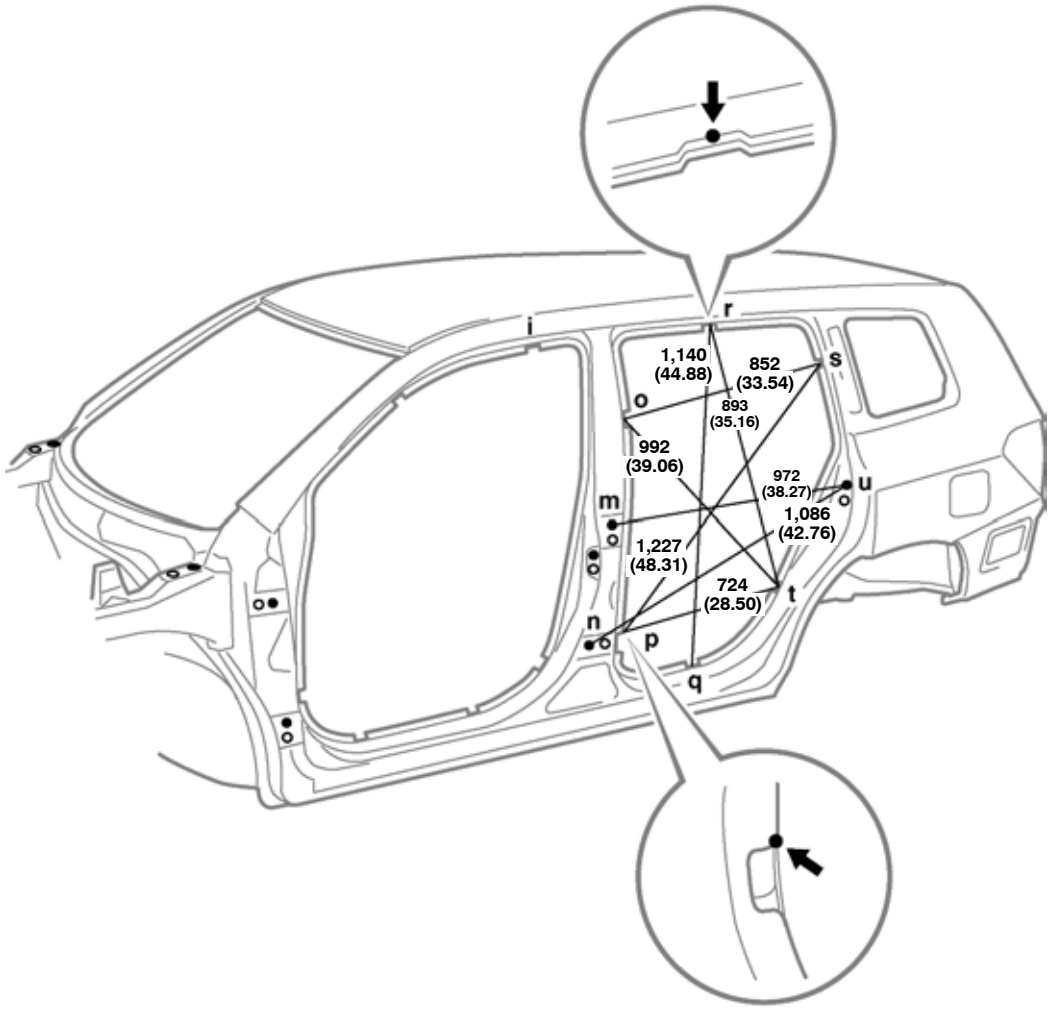

Vehicle Dimensions

O-o	P-p	Q-q	R-r	S-s	T-t	U-u
1,463 (57.60)	1,564 (61.57)	1,527 (60.12)	1,272 (50.08)	1,368 (53.86)	1,582 (62.28)	1,691 (66.57)

I-r or i-R	O-s or o-S	O-t or o-T	P-t or p-T	Q-r or q-R	S-t or s-T
1,465 (57.68)	1,651 (65.00)	1,779 (70.04)	1,732 (68.19)	1,800 (70.87)	1,658 (65.28)


HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (seen from rear).

mm (in.)

Symbol	Name	Hole dia.			
I, i	Roof side rail assembly mark	—	Q, q	Rocker panel assembly mark	—
M, m	Rear door hinge installation nut	M8 (0.31)	R, r	Roof side rail assembly mark	—
N, n	Rear door hinge installation nut	M8 (0.31)	S, s	Quarter panel assembly mark	—
O, o	Center body pillar assembly mark	—	T, t	Quarter panel assembly mark	—
P, p	Center body pillar assembly mark	—	U, u	Rear door lock striker installation nut	M8 (0.31)
			—	—	—

BODY OPENING AREAS (Rear View)

(Three - Dimensional Distance)

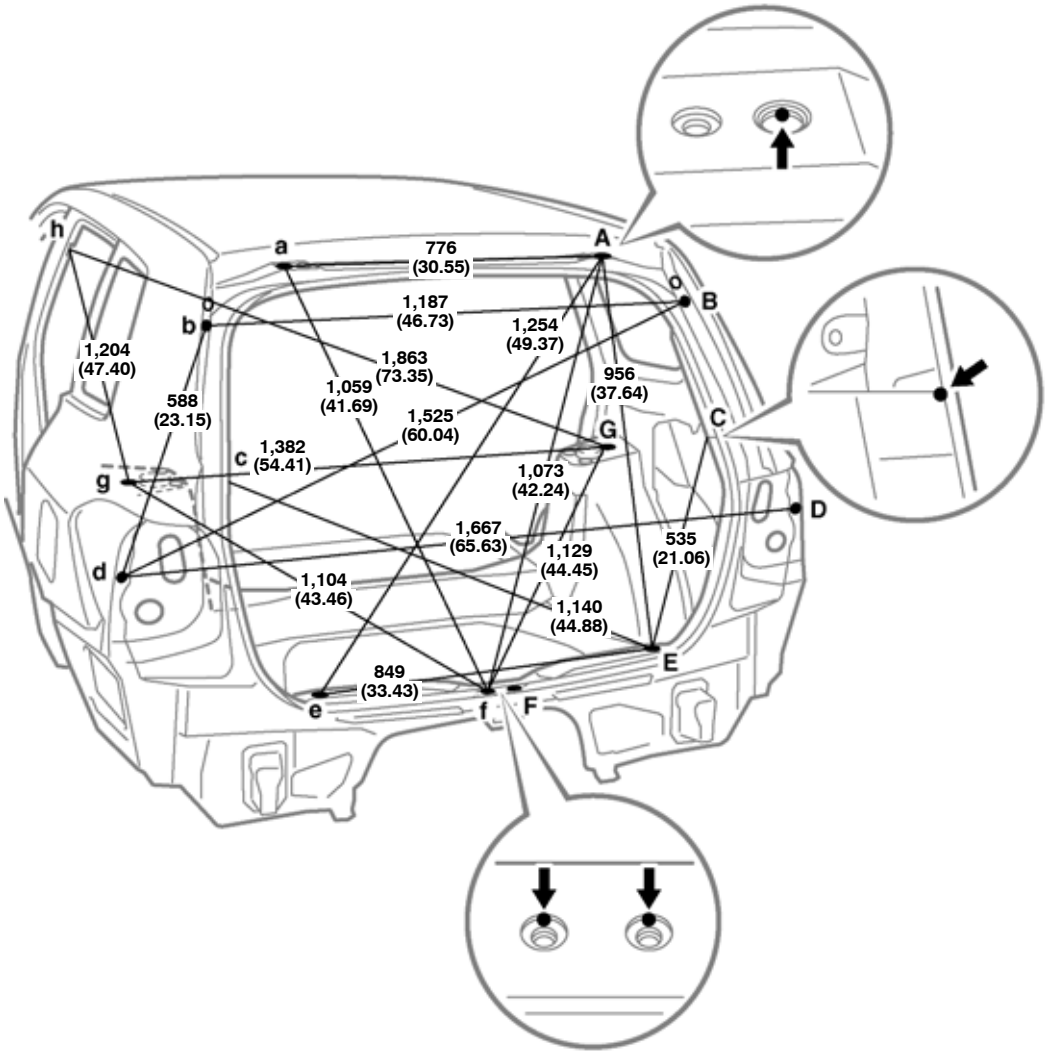

Vehicle Dimensions

C-c
1,193 (46.97)


HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (seen from rear).

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Back door hinge installation hole	ø12 (0.47)	E, e	Deck trim side panel installation hole	ø7 (0.28)
B, b	Back door damper stay installation nut	M6 (0.24)	F, f	Back door lock striker installation nut	M8 (0.31)
C, c	Roof side inner panel corner	—	G, g	Rear suspension installation hole - inner	ø12.5 (0.49)
D, d	Quarter panel standard hole	ø13 (0.51)	H, h	Center body pillar assembly mark	—
			—	—	—

UNDER BODY
2WD

(Three - Dimensional Distance)

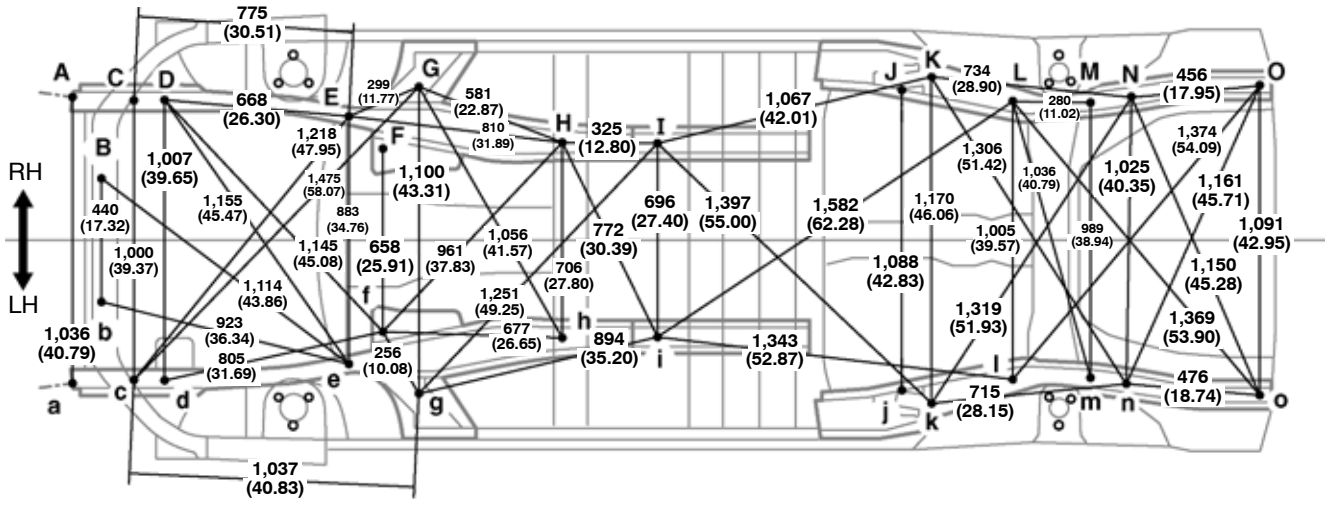


Vehicle Dimensions

E-g or e-G	E-h or e-H	F-g or f-G	L-O or l-o
1,030 (40.55)	1,131 (44.53)	889 (35.00)	886 (34.88)

1	2	3
104 (4.09)	100 (3.94)	100 (3.94)

Front

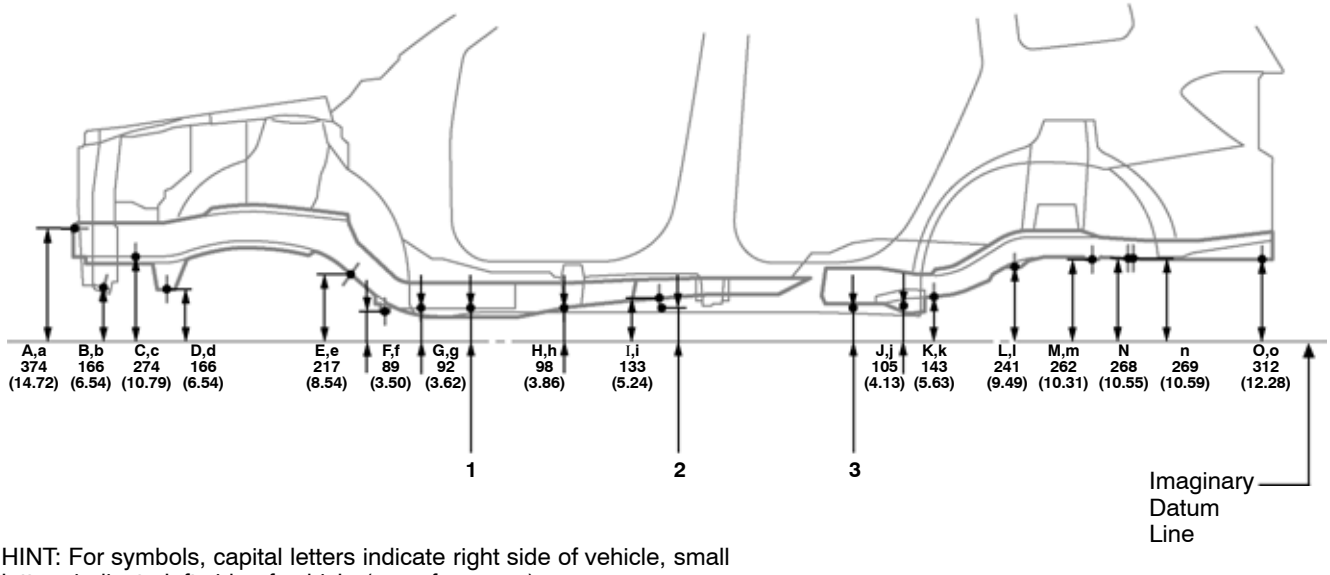


HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (seen from rear).

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front bumper reinforcement installation nut	M21 (0.83)	H, h	Front side member standard hole	ø18 (0.71)
B, b	Front crossmember lower standard hole	ø15 (0.59)	I, i	Front floor under reinforcement standard hole	ø18 (0.72)
C, c	Front side member standard hole	ø18 (0.71)	J, j	Rear strut bar installation hole - inner	ø12 (0.47)
D, d	Front suspension member installation nut	M16 (0.63)	K, k	Rear floor side member standard hole	ø18 (0.72)
E, e	Front side member standard hole	ø10 (0.39)	L, l	Rear suspension member installation nut	M12 (0.47)
F, f	Front suspension member installation nut	M16 (0.63)	M, m	Rear suspension member installation nut	M13 (0.51)
G, g	Torque box front standard hole	ø25 (0.98)	N, n	Rear floor side member standard hole	ø18 (0.71)
			O, o	Transport hook installation nut	M10 (0.39)

UNDER BODY
4WD


(Three - Dimensional Distance)

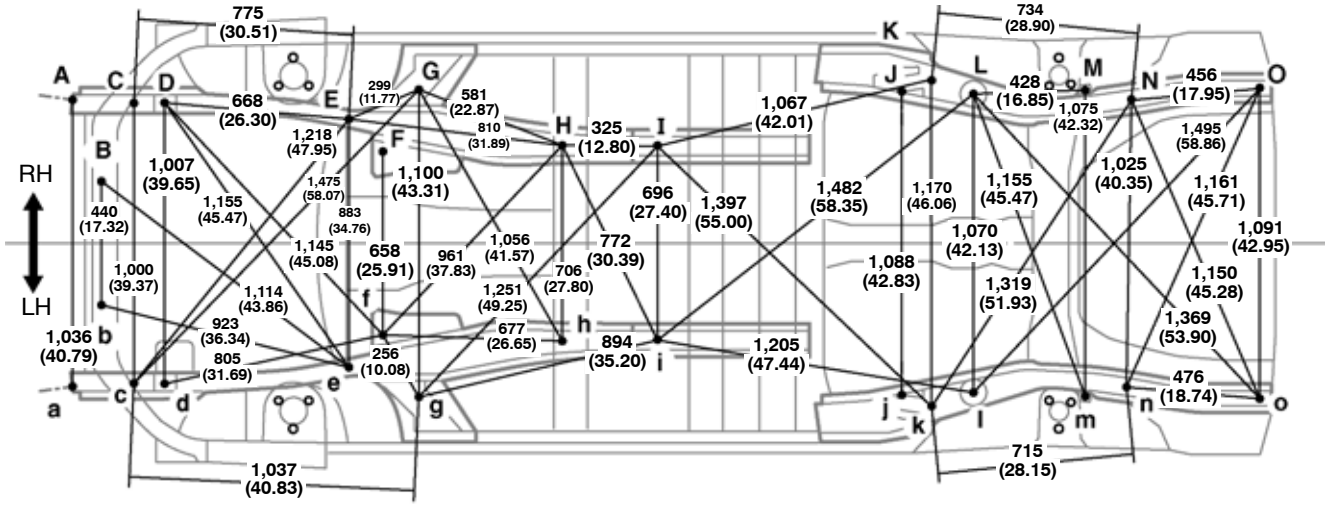

Vehicle Dimensions

E-g or e-G	E-h or e-H	F-g or f-G	K-n	L-O or l-o
1,030 (40.55)	1,131 (44.53)	889 (35.00)	1,306 (51.42)	1,030 (40.55)

1	2	3
104 (4.09)	100 (3.94)	100 (3.94)

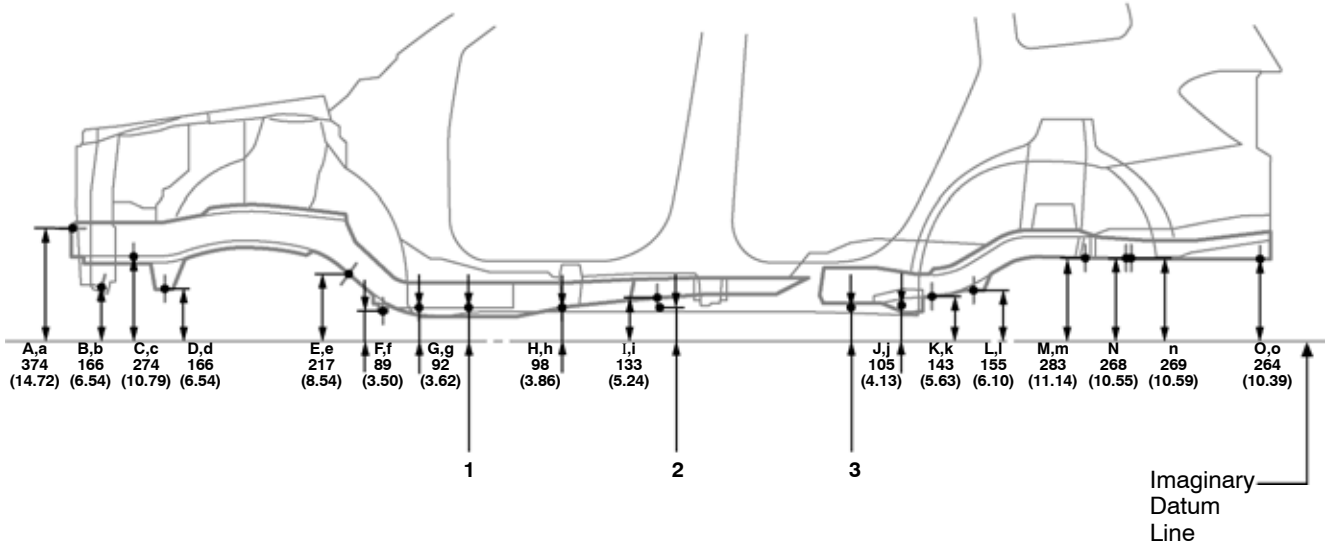


HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (seen from rear).


mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front bumper reinforcement installation nut	M21 (0.83)	H, h	Front side member standard hole	ø18 (0.71)
B, b	Front crossmember lower standard hole	ø15 (0.59)	I, i	Front floor under reinforcement standard hole	ø18 (0.72)
C, c	Front side member standard hole	ø18 (0.71)	J, j	Rear strut bar installation hole - inner	ø12 (0.47)
D, d	Front suspension member installation nut	M16 (0.63)	K, k	Rear floor side member standard hole	ø18 (0.72)
E, e	Front side member standard hole	ø10 (0.39)	L, l	Rear suspension member installation nut	M14 (0.55)
F, f	Front suspension member installation nut	M16 (0.63)	M, m	Rear suspension member installation nut	M10 (0.39)
G, g	Torque box front standard hole	ø25 (0.98)	N, n	Rear floor side member standard hole	ø18 (0.71)
			O, o	Transport hook installation nut	M10 (0.39)

UNDER BODY
2WD

(Two - Dimensional Distance)

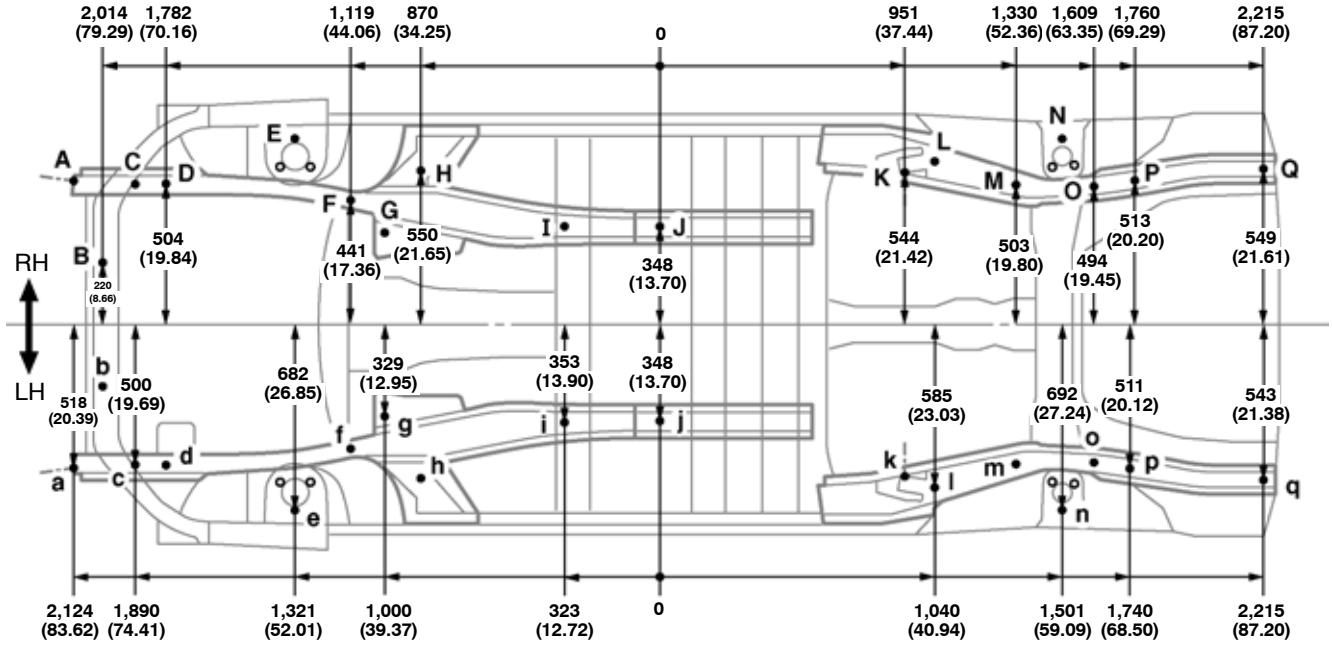

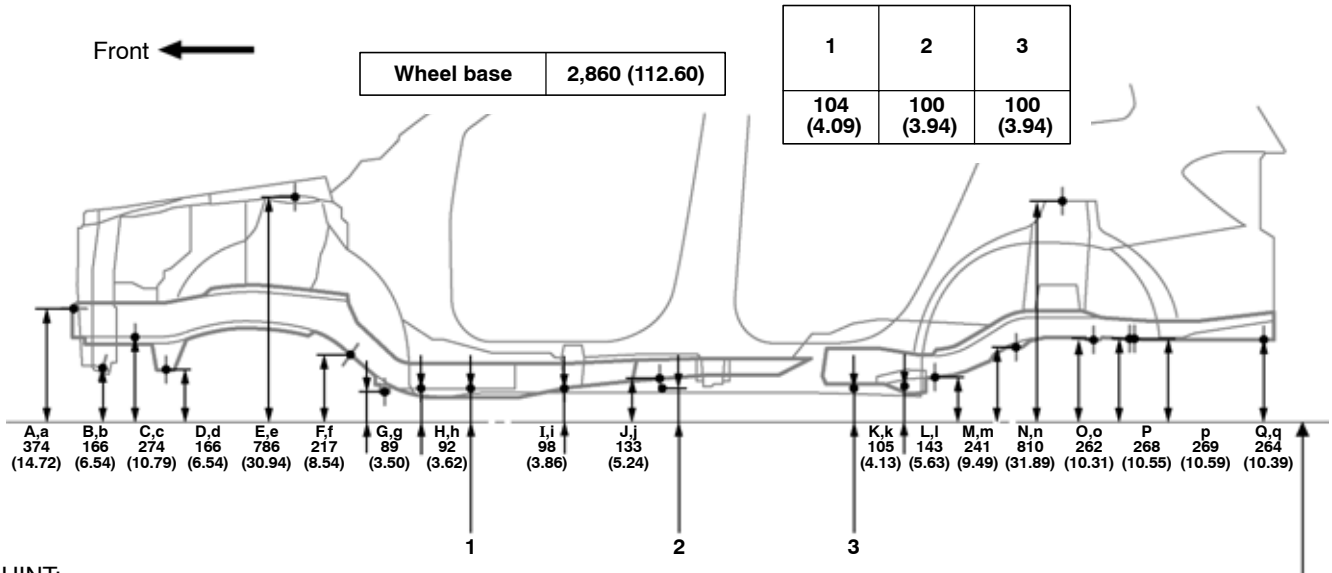


HINT:
1) For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (seen from rear).
2) Point P,p, Q,q on the vehicle are asymmetrical.

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front bumper reinforcement installation nut	M21 (0.83)	I, i	Front side member standard hole	ø18 (0.71)
B, b	Front crossmember lower standard hole	ø15 (0.59)	J, j	Front floor under reinforcement standard hole	ø18 (0.72)
C, c	Front side member standard hole	ø18 (0.71)	K, k	Rear strut bar installation hole - inner	ø12 (0.47)
D, d	Front suspension member installation nut	M16 (0.63)	L, l	Rear floor side member standard hole	ø18 (0.72)
E, e	Front spring support hole - outer	ø13 (0.51)	M, m	Rear suspension member installation nut	M12 (0.47)
F, f	Front side member standard hole	ø10 (0.39)	N, n	Rear spring support hole - outer	ø12.5 (0.49)
G, g	Front suspension member installation nut	M16 (0.63)	O, o	Rear suspension member installation nut	M13 (0.51)
H, h	Torque box front standard hole	ø25 (0.98)	P, p	Rear floor side member standard hole	ø18 (0.71)
			Q, q	Transport hook installation nut	M10 (0.39)


UNDER BODY
4WD

(Two - Dimensional Distance)

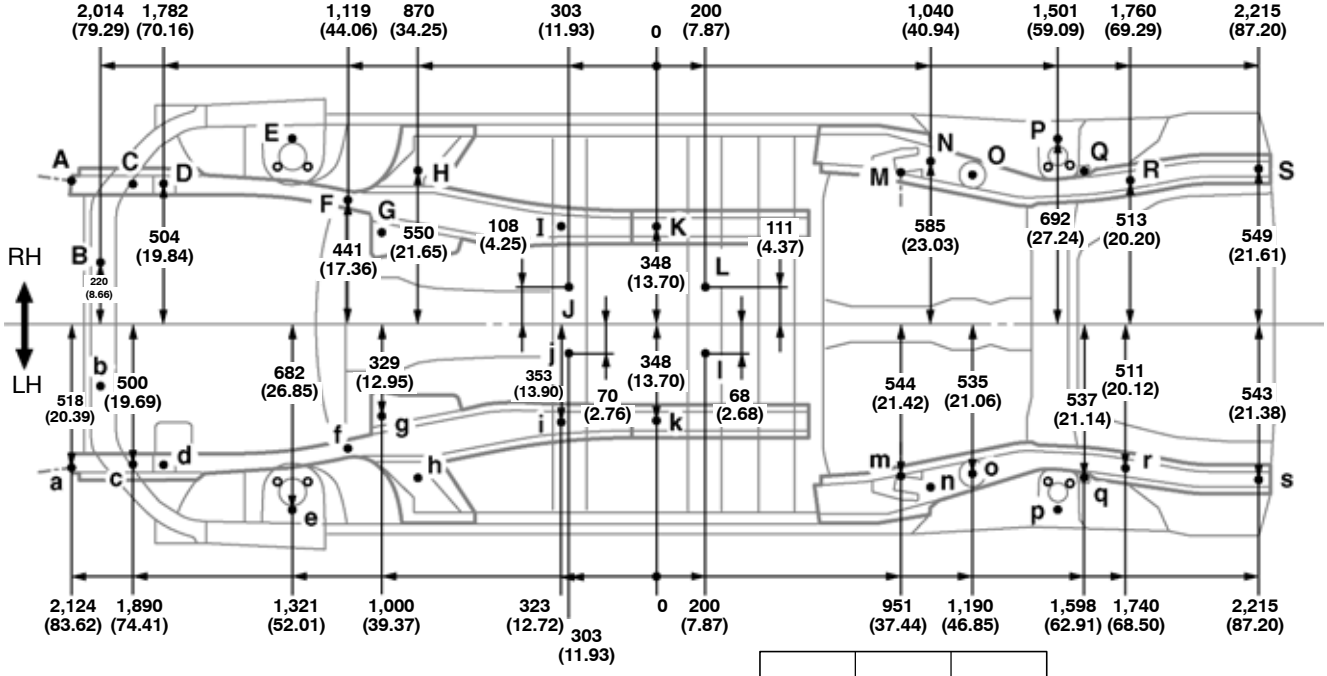

Wheel base	2,860 (112.60)

1	2	3
104 (4.09)	100 (3.94)	100 (3.94)

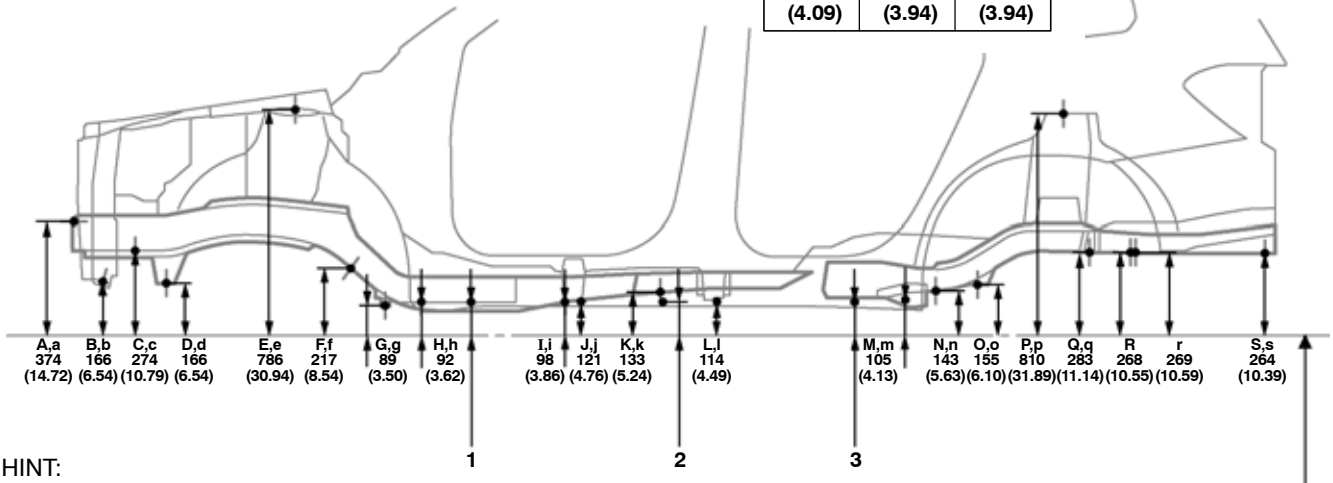


HINT:
1) For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (seen from rear).
2) Point J,j, L,l, R,r, S,s on the vehicle are asymmetrical.

mm (in.)

Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Front bumper reinforcement installation nut	M21 (0.83)	J, j	Propeller shaft center support bearing installation nut	M10 (0.39)
B, b	Front crossmember standard hole	ø15 (0.59)	K, k	Front floor under reinforcement standard hole	ø18 (0.71)
C, c	Front side member standard hole	ø18 (0.71)	L, l	Propeller shaft center support bearing installation nut	M10 (0.39)
D, d	Front suspension member installation nut	M16 (0.63)	M, m	Rear strut bar installation hole - inner	ø12 (0.47)
E, e	Front spring support hole - outer	ø13 (0.51)	N, n	Rear floor side member standard hole	ø18 (0.72)
F, f	Front side member standard hole	ø10 (0.39)	O, o	Rear suspension member installation nut	M14 (0.55)
G, g	Front suspension member installation nut	M16 (0.63)	P, p	Rear spring support hole - outer	ø12.5 (0.50)
H, h	Torque box front standard hole	ø25 (0.98)	Q, q	Rear suspension member installation nut	M10 (0.39)
I, i	Front side member standard hole	ø18 (0.71)	R, r	Rear floor side member standard hole	ø18 (0.71)
			S, s	Transport hook installation nut	M10 (0.39)

FRONT FRAME

(Three - Dimensional Distance)

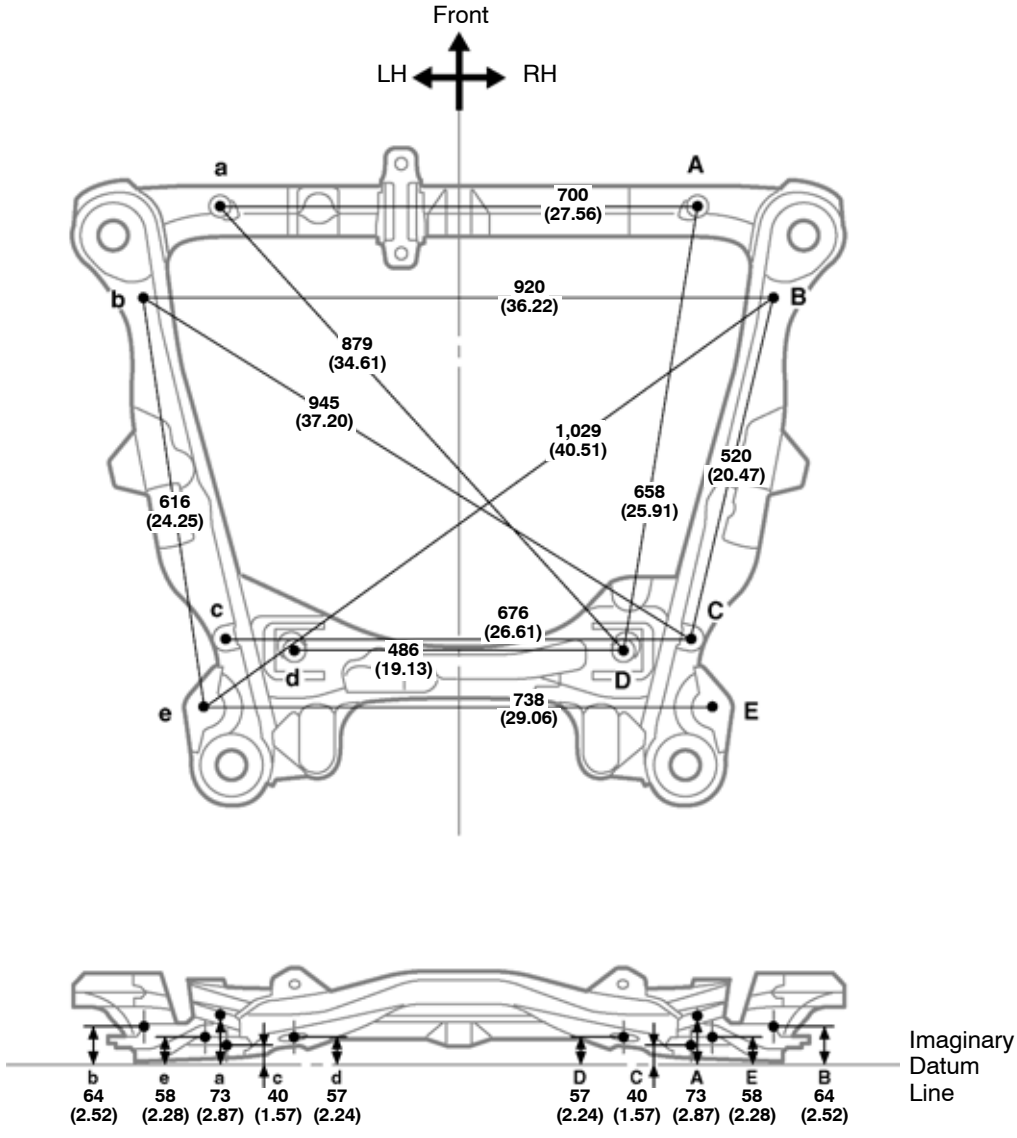


HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (seen from rear).

mm (in.)

Symbol	Name	Hole dia.			
A, a	Front frame standard hole	ø13 (0.51)	C, c	Front frame standard hole	ø13 (0.51)
B, b	Front frame standard hole	ø13 (0.51)	D, d	Front frame standard hole	ø13 (0.51)
			E, e	Lower arm installation hole	ø15 (0.59)

FRONT FRAME

(Two - Dimensional Distance)

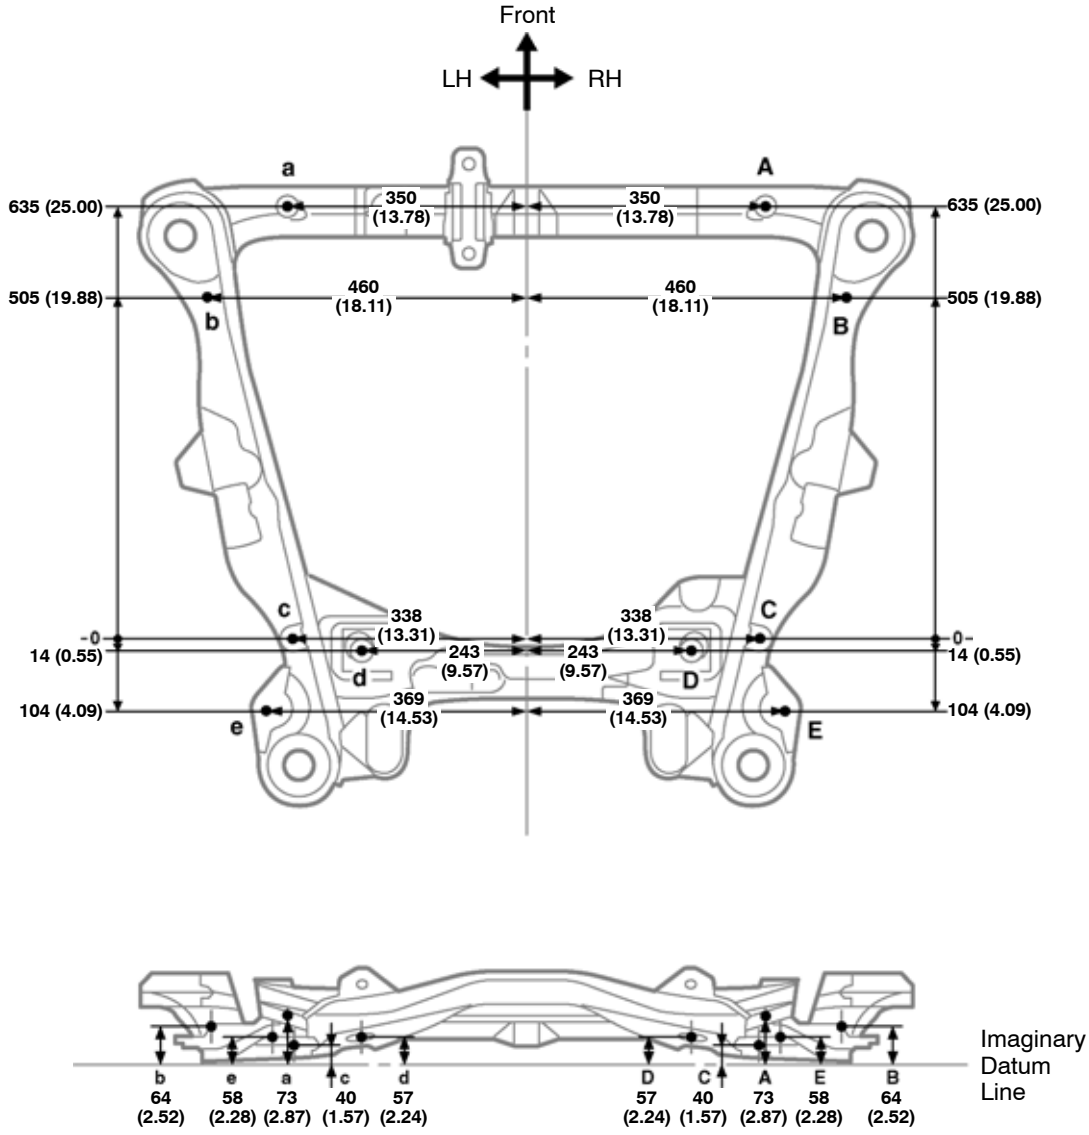

HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (seen from rear).

mm (in.)

Symbol	Name	Hole dia.				
A, a	Front frame standard hole	ø13 (0.51)		C, c	Front frame standard hole	ø13 (0.51)
B, b	Front frame standard hole	ø13 (0.51)		D, d	Front frame standard hole	ø13 (0.51)
				E, e	Lower arm installation hole	ø15 (0.59)