

(Cont. next page)

SRS (LHD)

∗3 : Before Jul. 2010 Production
∗4 : From Jul. 2010 Production

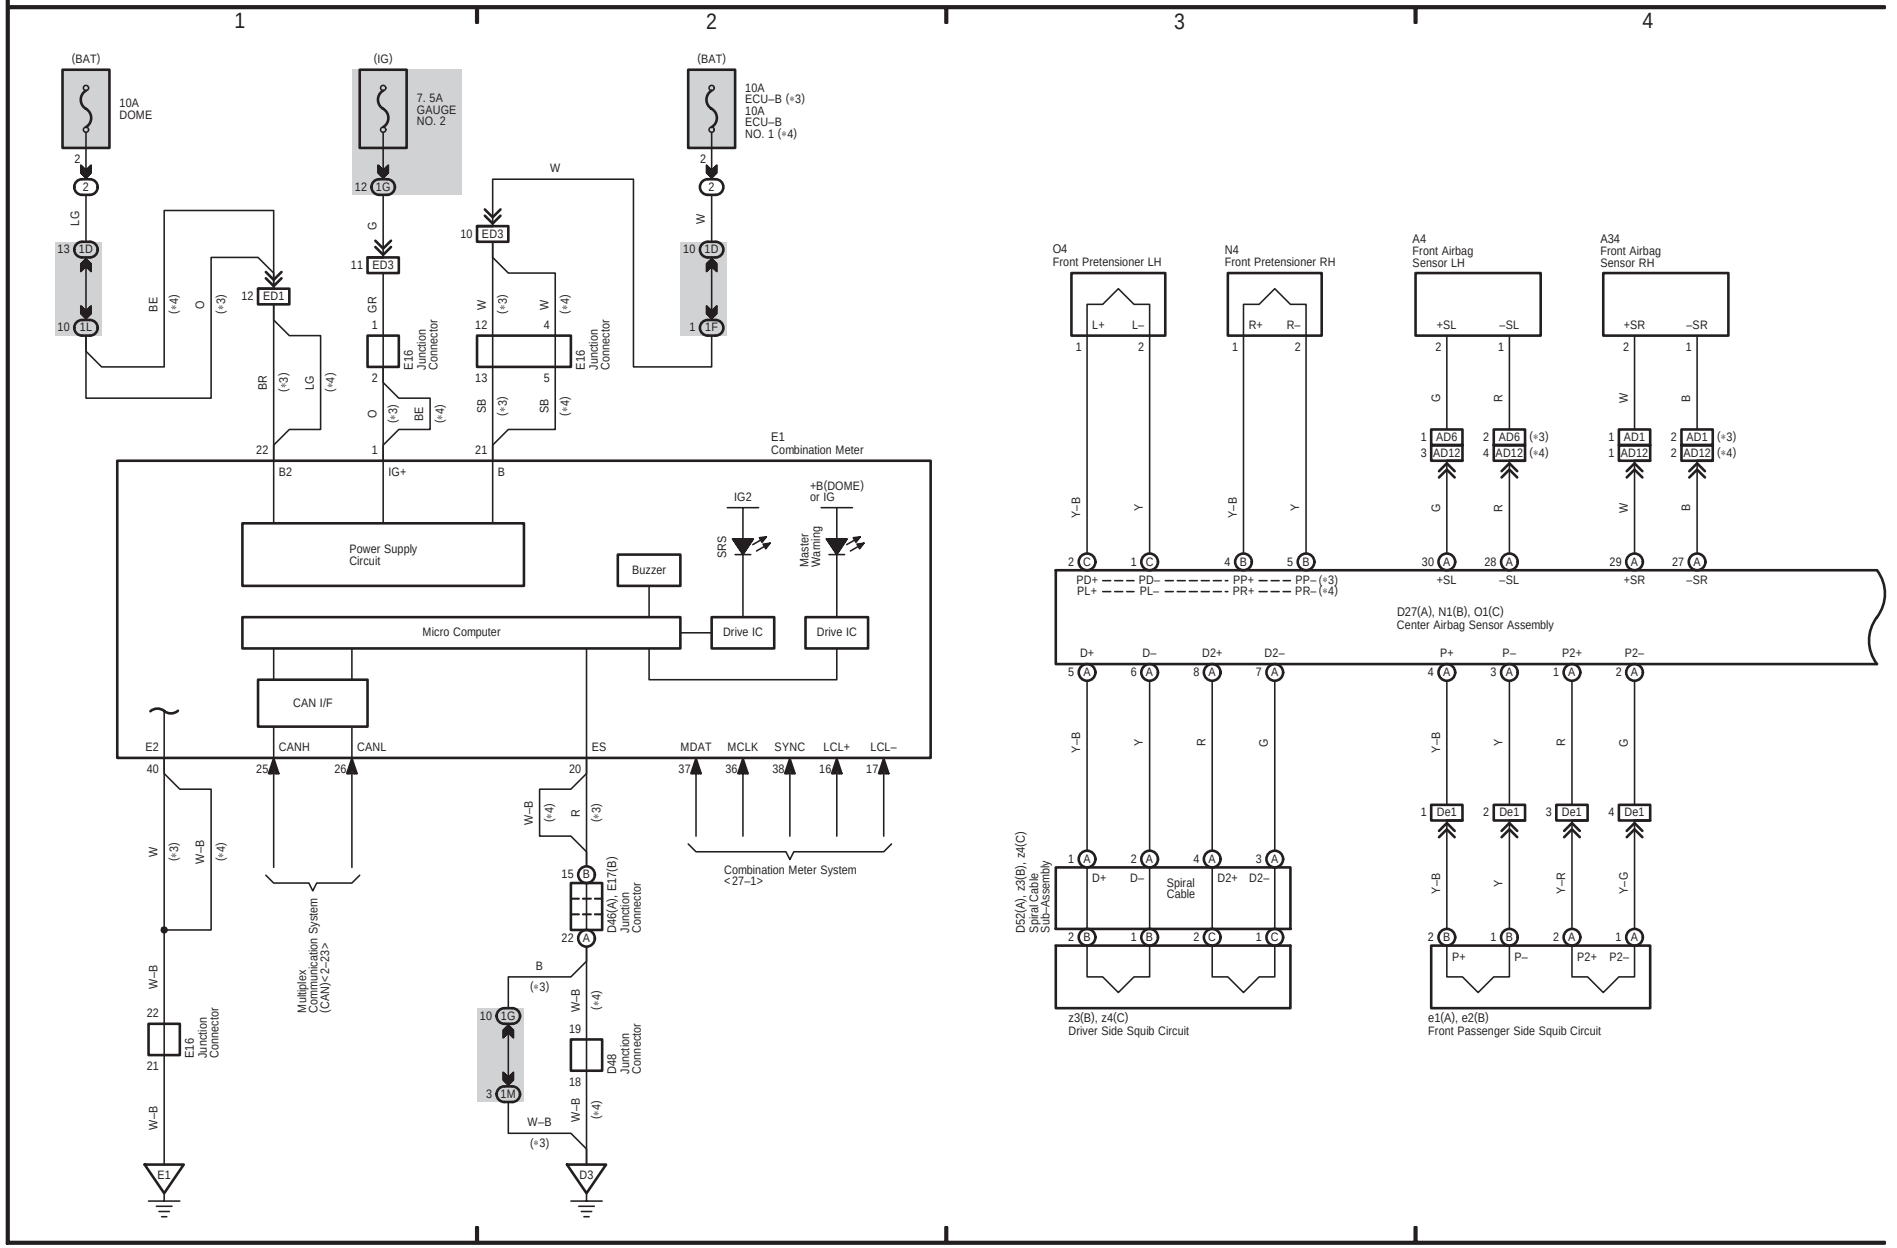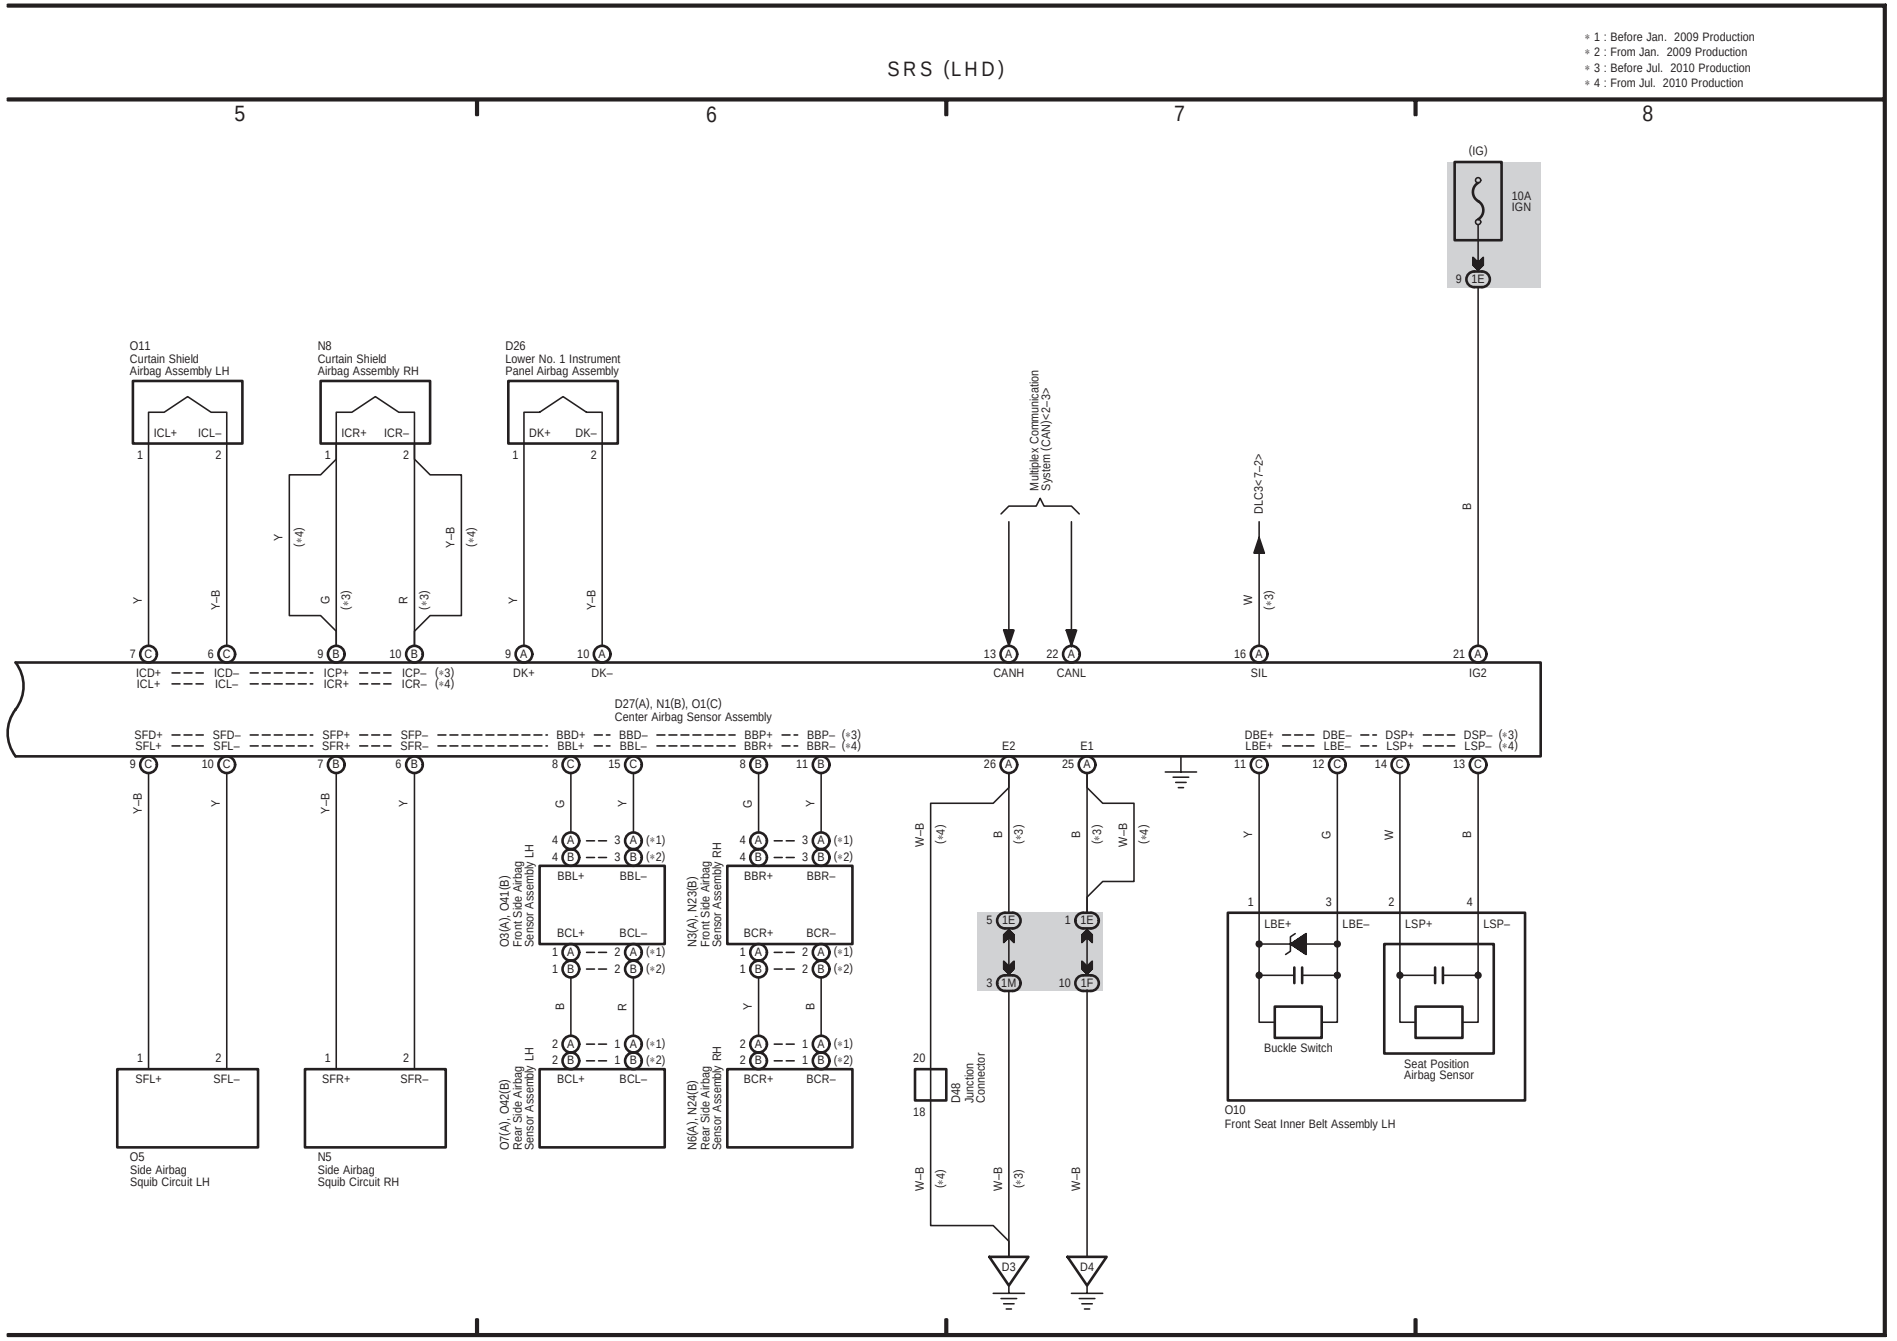


SRS (LHD)
5
6
7
8
* 1 : Before Jan. 2009 Production
* 2 : From Jan. 2009 Production
* 3 : Before Jul. 2010 Production
* 4 : From Jul. 2010 Production
(IG)
10A IGN
O11 Curtain Shield Airbag Assembly LH
N8 Curtain Shield Airbag Assembly RH
D26 Lower No. 1 Instrument Panel Airbag Assembly
Multiplex Communication System (CAN)<2-3>
DLC3<7-2>
ICL+ ICL–
ICR+ ICR–
DK+ DK–
ICD+ ICD–
ICL+ ICL–
ICP+ ICP– (*3)
ICR+ ICR– (*4)
DK+ DK–
CANH CANL
SIL
IG2
D27(A), N1(B), O1(C) Center Airbag Sensor Assembly
SFD+ SFD–
SFL+ SFL–
SFP+ SFP–
SFR+ SFR–
BBD+ BBD–
BBL+ BBL–
BBP+ BBP– (*3)
BBR+ BBR– (*4)
DBE+ DBE–
LBE+ LBE–
DSP+ DSP– (*3)
LSP+ LSP– (*4)
E2
E1
LBE+
LBE–
LSP+
LSP–
Buckle Switch
Seat Position Airbag Sensor
O10 Front Seat Inner Belt Assembly LH
O5 Side Airbag Squib Circuit LH
N5 Side Airbag Squib Circuit RH
O3(A), O41(B) Front Side Airbag Sensor Assembly LH
O7(A), O42(B) Rear Side Airbag Sensor Assembly LH
N3(A), N23(B) Front Side Airbag Sensor Assembly RH
N6(A), N24(B) Rear Side Airbag Sensor Assembly RH
BBL+ BBL–
BCL+ BCL–
BBR+ BBR–
BCR+ BCR–
D48 Junction Connector
D3
D4