

(Cont. next page)

SRS (RHD)

∗ 4 : Before Jul. 2010 Production
∗ 5 : From Jul. 2010 Production

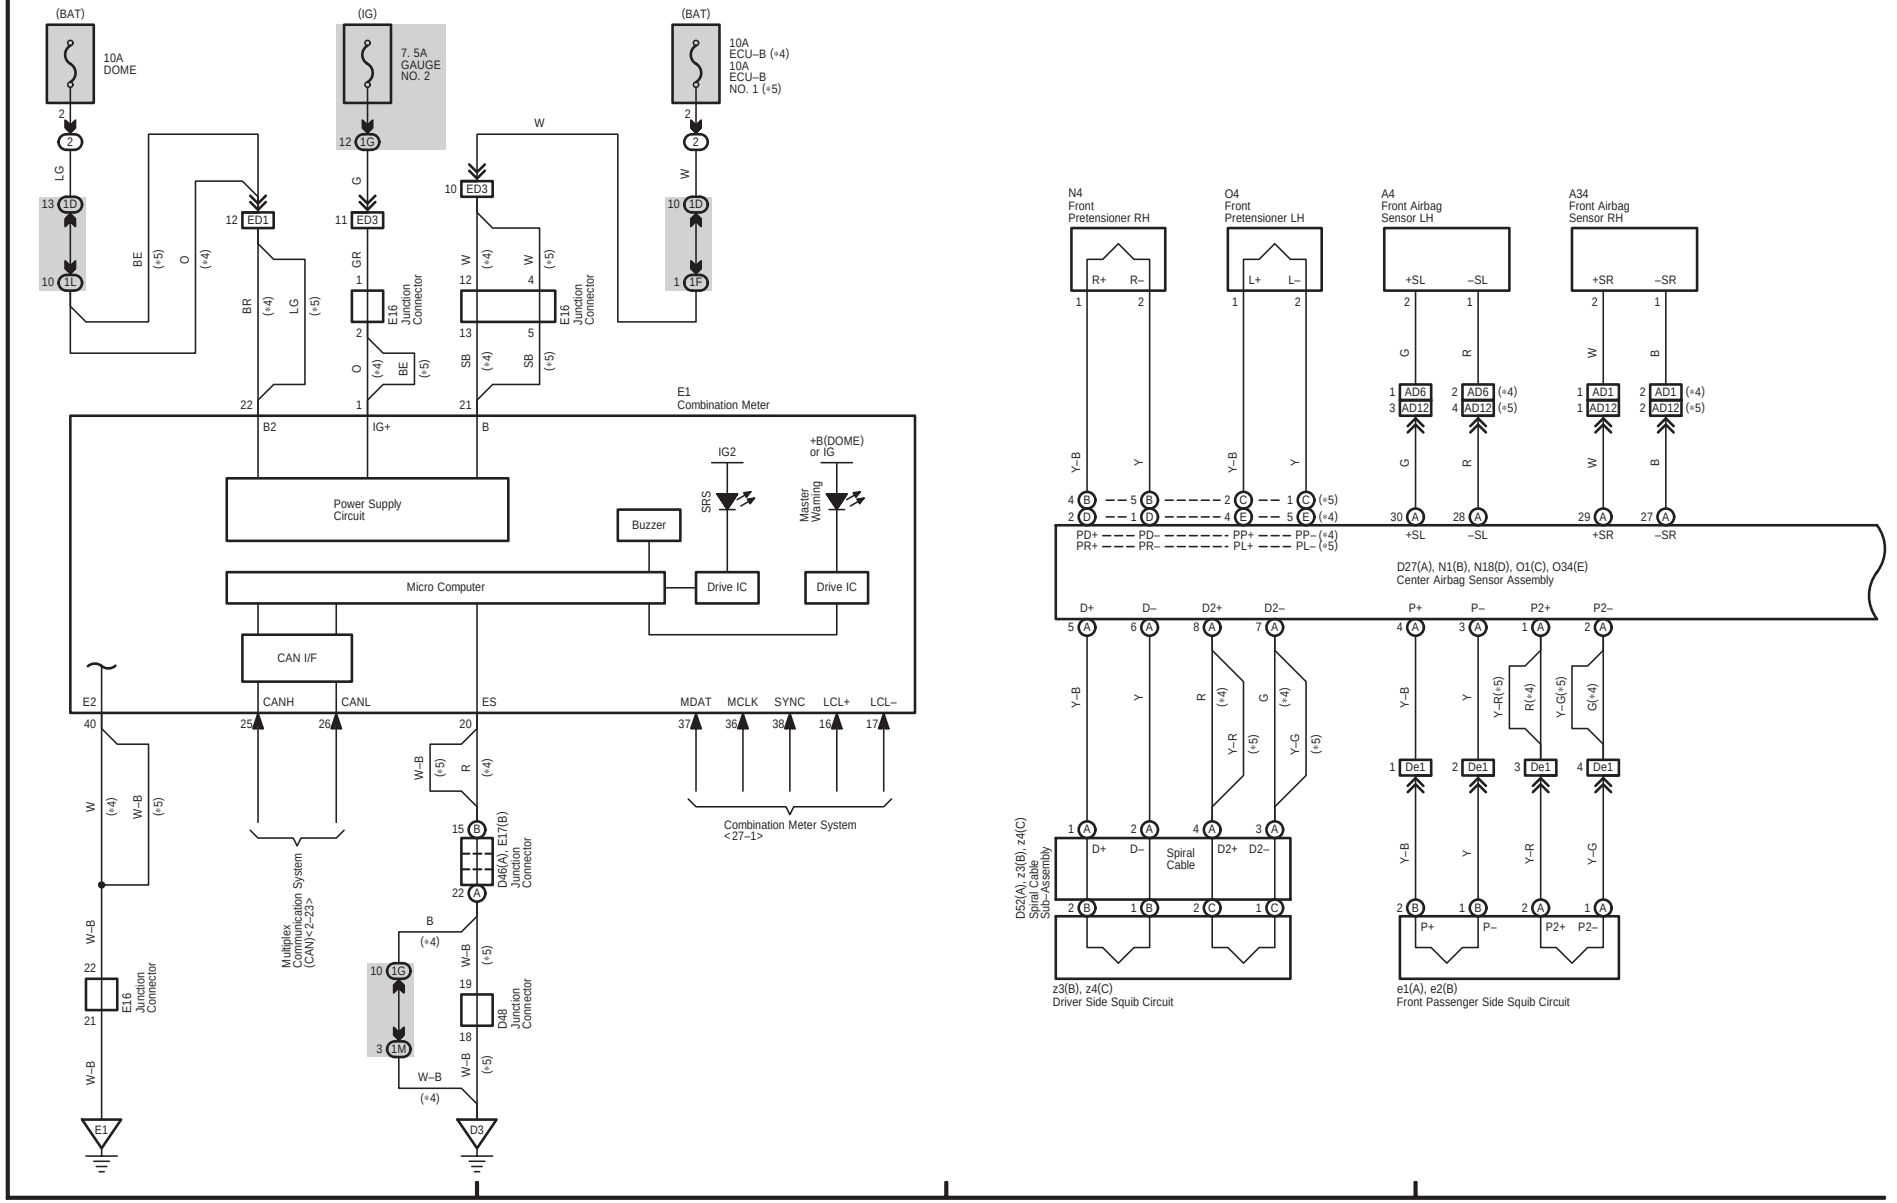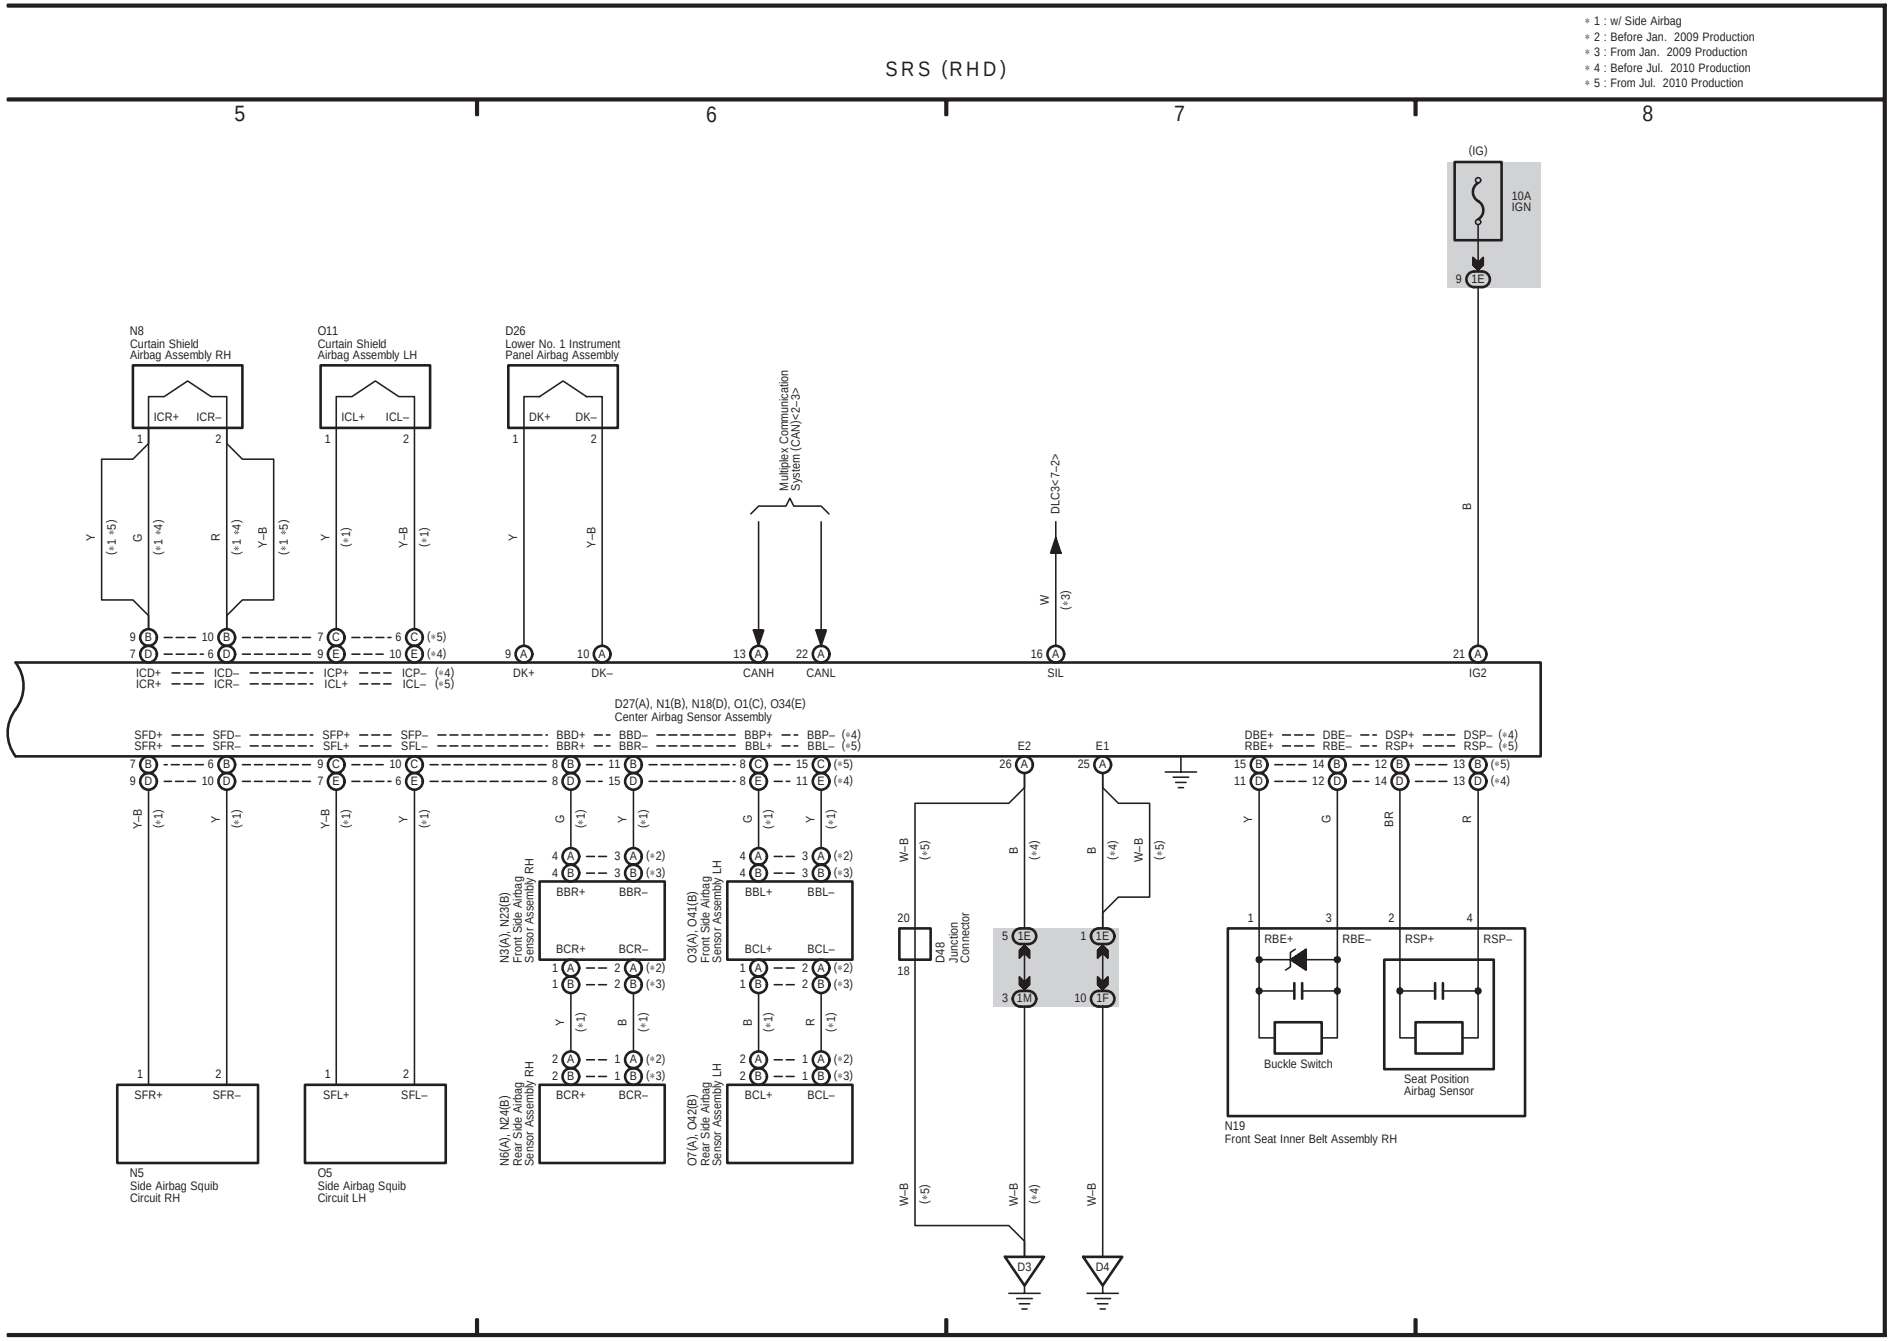


∗ 1 : w/ Side Airbag
∗ 2 : Before Jan. 2009 Production
∗ 3 : From Jan. 2009 Production
∗ 4 : Before Jul. 2010 Production
∗ 5 : From Jul. 2010 Production
SRS (RHD)
5
6
7
8
(IG)
10A IGN
N8 Curtain Shield Airbag Assembly RH
O11 Curtain Shield Airbag Assembly LH
D26 Lower No. 1 Instrument Panel Airbag Assembly
Multiplex Communication System (CAN)<2–3>
DLC3<7–2>
ICR+ ICR–
ICL+ ICL–
DK+ DK–
CANH CANL
SIL
IG2
ICD+ ICD– ICP+ ICP– (∗4)
ICR+ ICR– ICL+ ICL– (∗5)
D27(A), N1(B), N18(D), O1(C), O34(E) Center Airbag Sensor Assembly
SFD+ SFD– SFP+ SFP– BBD+ BBD– BBP+ BBP– (∗4)
SFR+ SFR– SFL+ SFL– BBR+ BBR– BBL+ BBL– (∗5)
DBE+ DBE– DSP+ DSP– (∗4)
RBE+ RBE– RSP+ RSP– (∗5)
E2
E1
N3(A), N23(B) Front Side Airbag Sensor Assembly RH
O3(A), O41(B) Front Side Airbag Sensor Assembly LH
N6(A), N24(B) Rear Side Airbag Sensor Assembly RH
O7(A), O42(B) Rear Side Airbag Sensor Assembly LH
D48 Junction Connector
D3
D4
N5 Side Airbag Squib Circuit RH
O5 Side Airbag Squib Circuit LH
Buckle Switch
Seat Position Airbag Sensor
N19 Front Seat Inner Belt Assembly RH