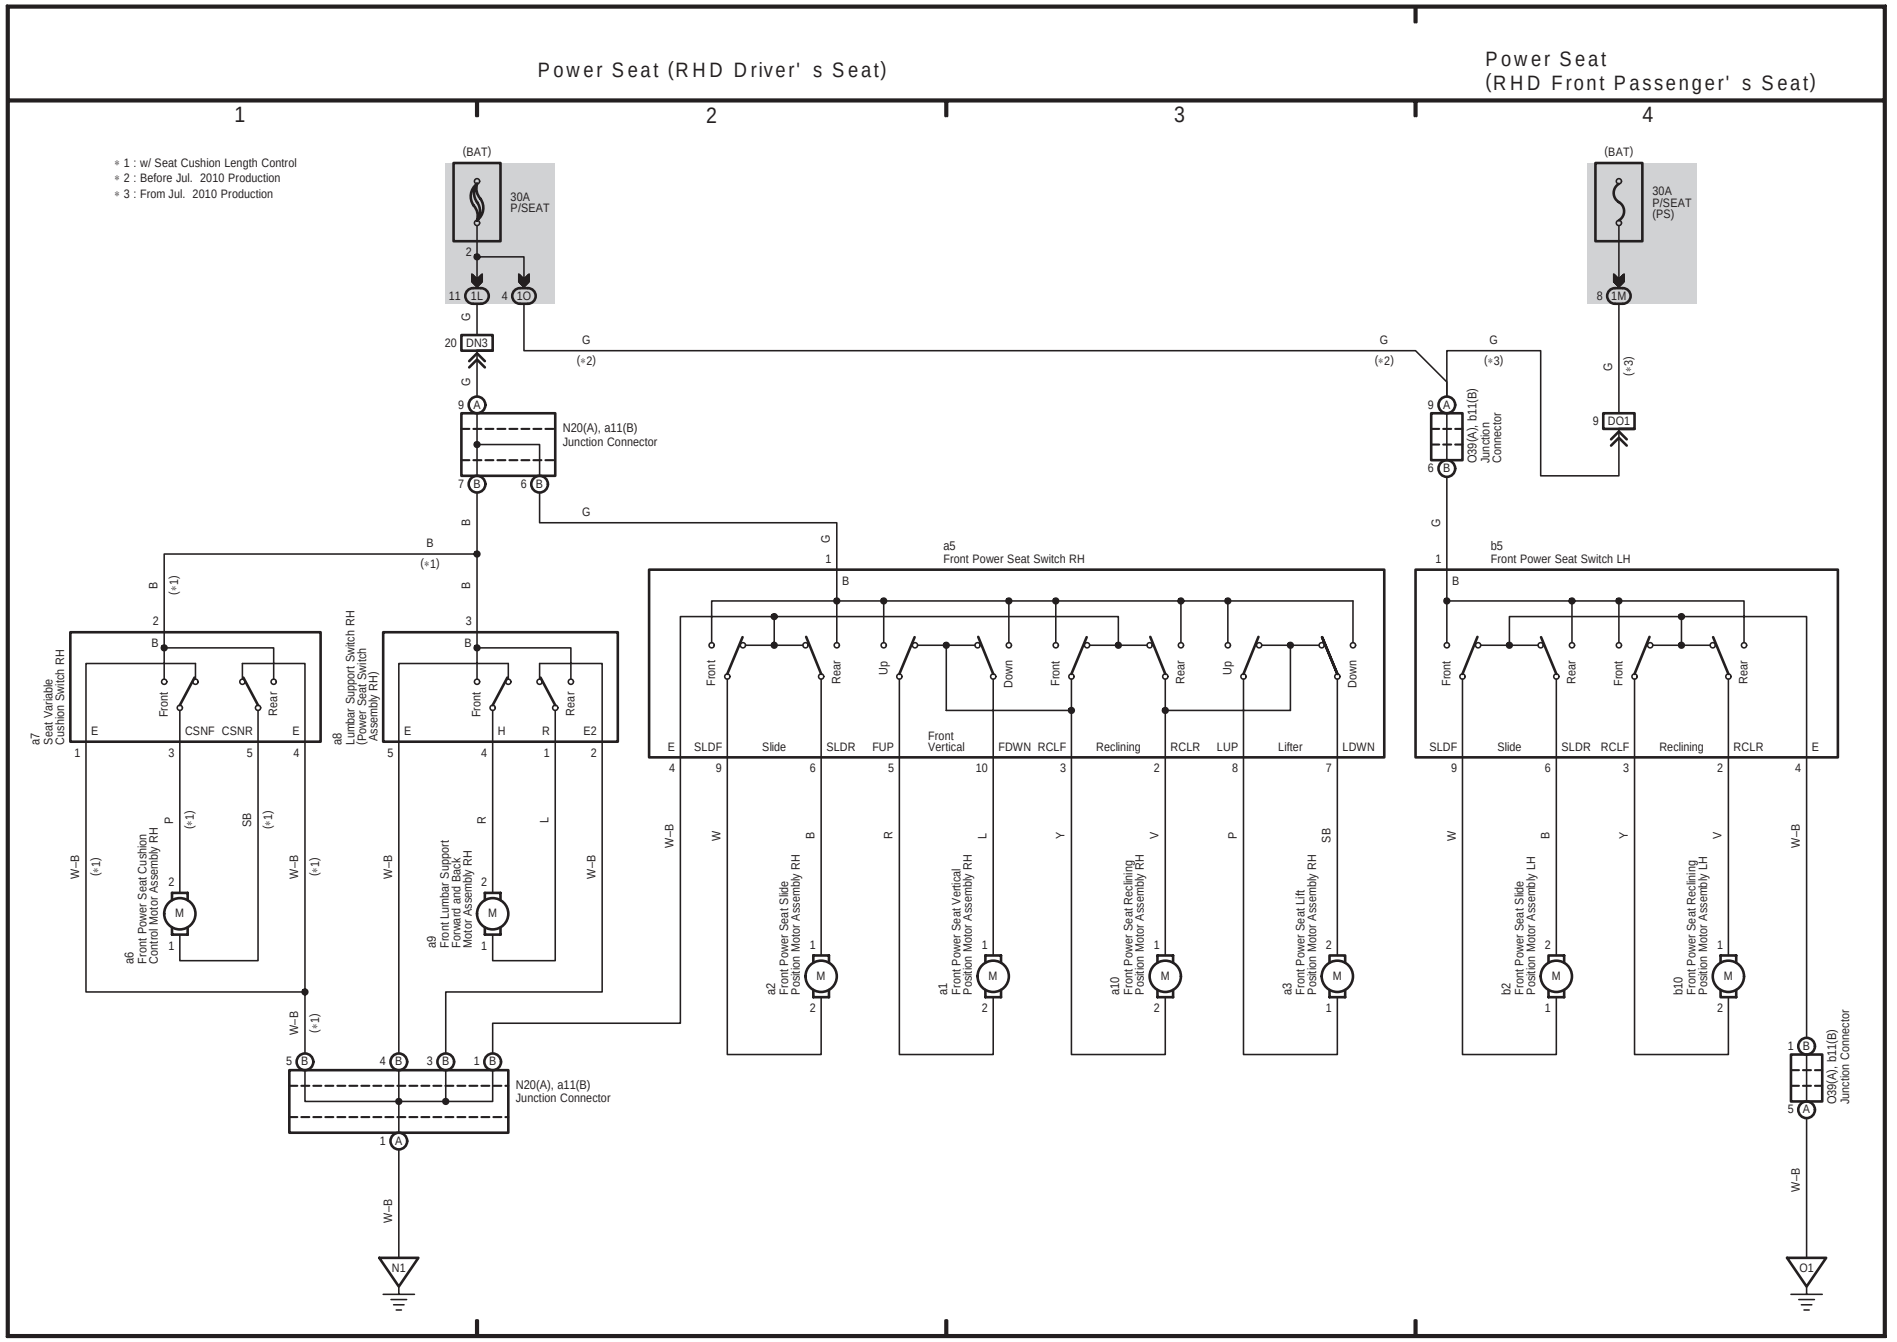

Power Seat (RHD Driver' s Seat)
Power Seat
(RHD Front Passenger' s Seat)
1
2
3
4
* 1 : w/ Seat Cushion Length Control
* 2 : Before Jul. 2010 Production
* 3 : From Jul. 2010 Production
(BAT)
30A P/SEAT
30A P/SEAT (PS)
N20(A), a11(B) Junction Connector
O39(A), b11(B) Junction Connector
a5 Front Power Seat Switch RH
b5 Front Power Seat Switch LH
a7 Seat Variable Cushion Switch RH
a8 Lumbar Support Switch RH (Power Seat Switch Assembly RH)
a6 Front Power Seat Cushion Control Motor Assembly RH
a9 Front Lumbar Support Forward and Back Motor Assembly RH
a2 Front Power Seat Slide Position Motor Assembly RH
a1 Front Power Seat Vertical Position Motor Assembly RH
a10 Front Power Seat Reclining Position Motor Assembly RH
a3 Front Power Seat Lift Position Motor Assembly RH
b2 Front Power Seat Slide Position Motor Assembly LH
b10 Front Power Seat Reclining Position Motor Assembly LH
Front
Rear
Up
Down
SLDF
Slide
SLDR
FUP
Front Vertical
FDWN
RCLF
Reclining
RCLR
LUP
Lifter
LDWN
CSNF
CSNR
E
H
R
E2
N1
O1