




(BAT)
30A
P/SEAT
2
4 1O
G
9 A
O39(A), b11(B)
Junction
Connector
7 B
6 B
G
G
B
B
(*1)
B
(*1)
2
3
b7
Seat Variable
Cushion Switch LH
B
Front
Rear
E
CSNF
CSNR
E
1
5
3
4
P
(*1)
SB
(*1)
W–B
(*1)
W–B
(*1)
b6
Front Power Seat Cushion
Control Motor Assembly LH
M
1
2
b8
Lumbar Support Switch
LH (Power Seat Switch
Assembly LH)
B
Front
Rear
E
H
R
E2
5
4
1
2
R
L
W–B
W–B
b9
Front Lumbar Support
Forward and Back Motor
Assembly LH
M
1
2
W–B
W–B
(*1)
5 B
2 B
3 B
1 B
O39(A), b11(B)
Junction
Connector
5 A
W–B
O1
* 1 : w/ Seat Cushion Length Control


G
G
1
b5
Front Power Seat Switch LH
B
Front
Rear
Up
Down
Front
Rear
Up
Down
E
SLDF
Slide
SLDR
FUP
Front Vertical
FDWN
RCLF
Reclining
RCLR
LUP
Lifter
LDWN
4
9
6
10
5
3
2
7
8
W–B
W
B
R
L
Y
V
P
SB
W–B
b2
Front Power Seat Slide Position Motor Assembly LH
b1
Front Power Seat Vertical Position Motor Assembly LH
b10
Front Power Seat Reclining Position Motor Assembly LH
b3
Front Power Seat Lift Position Motor Assembly LH
M
2
1


O 39
White

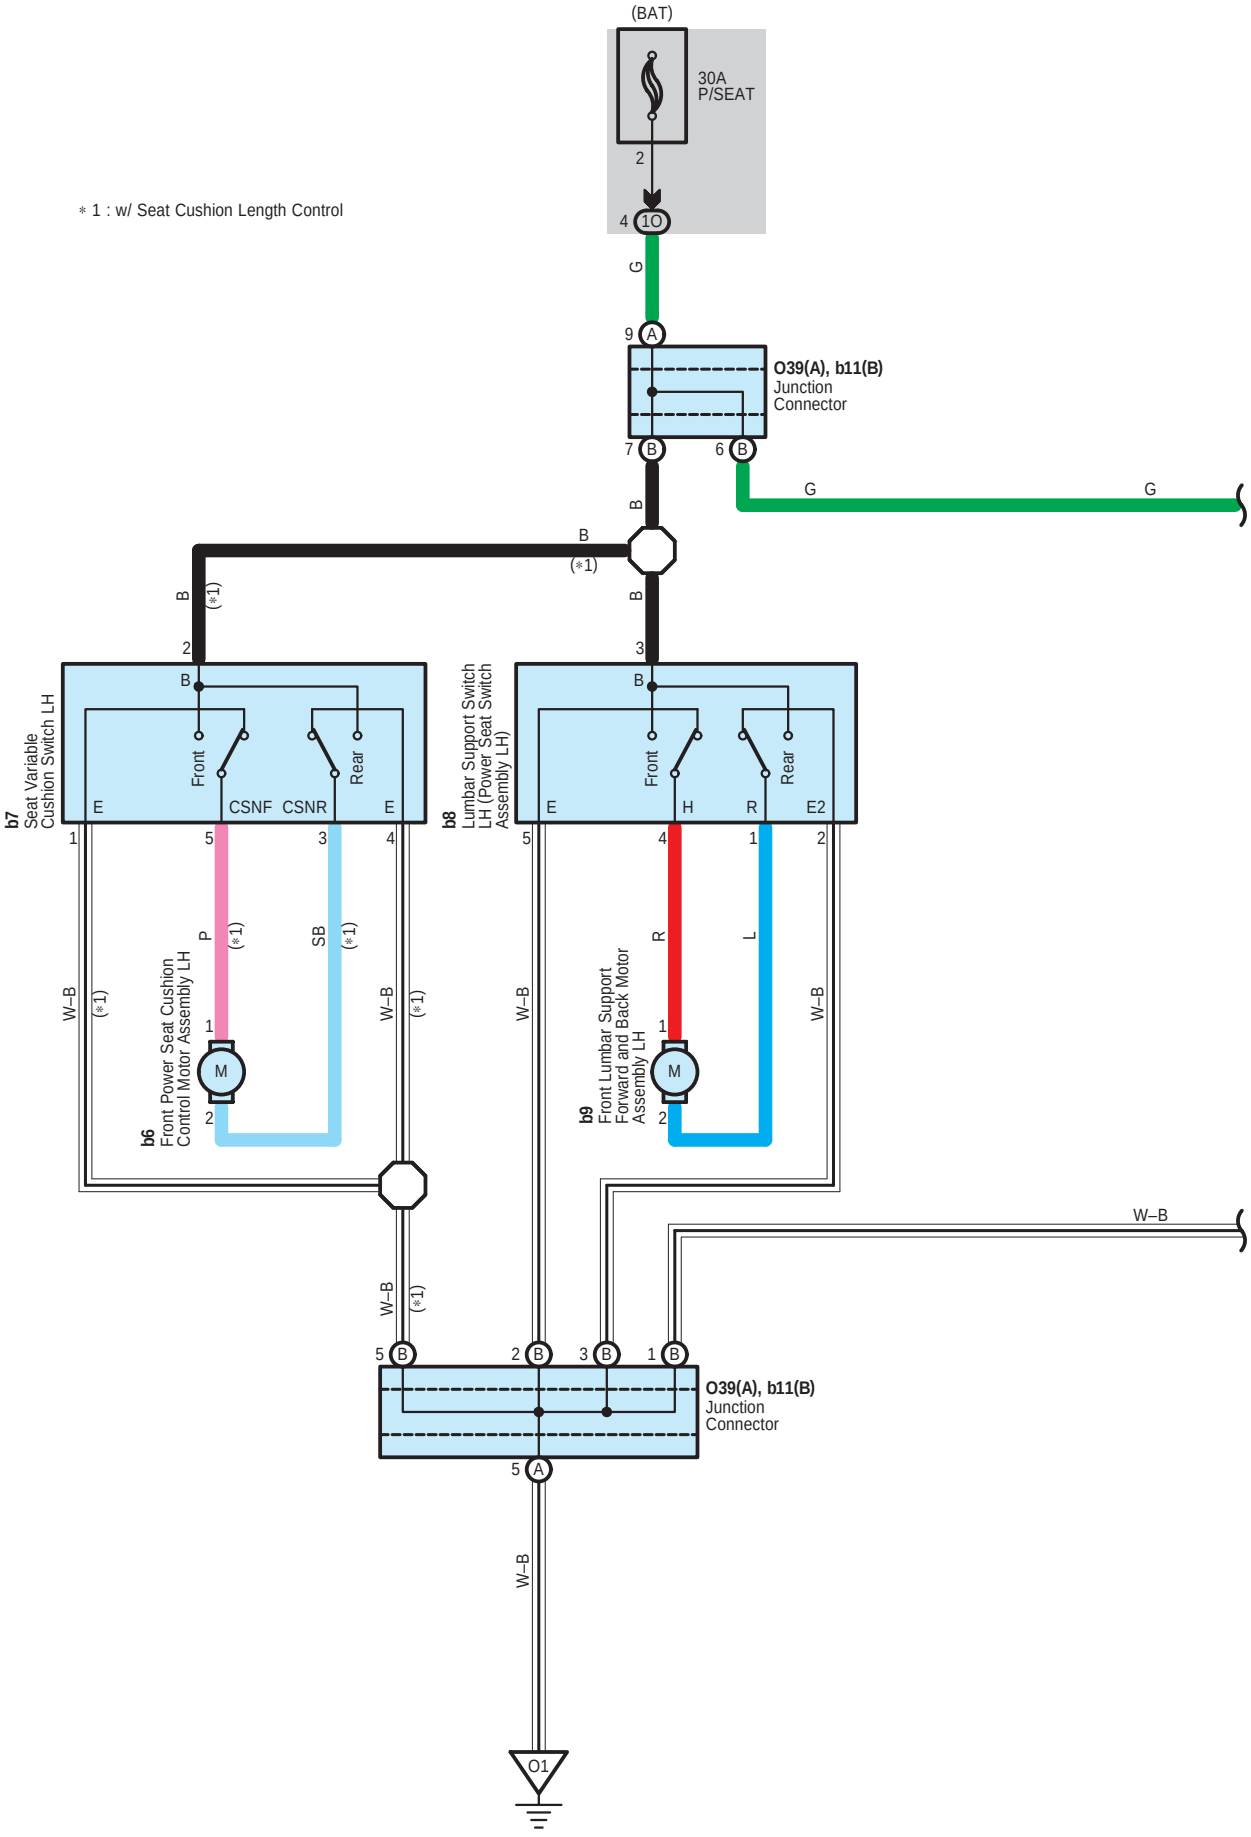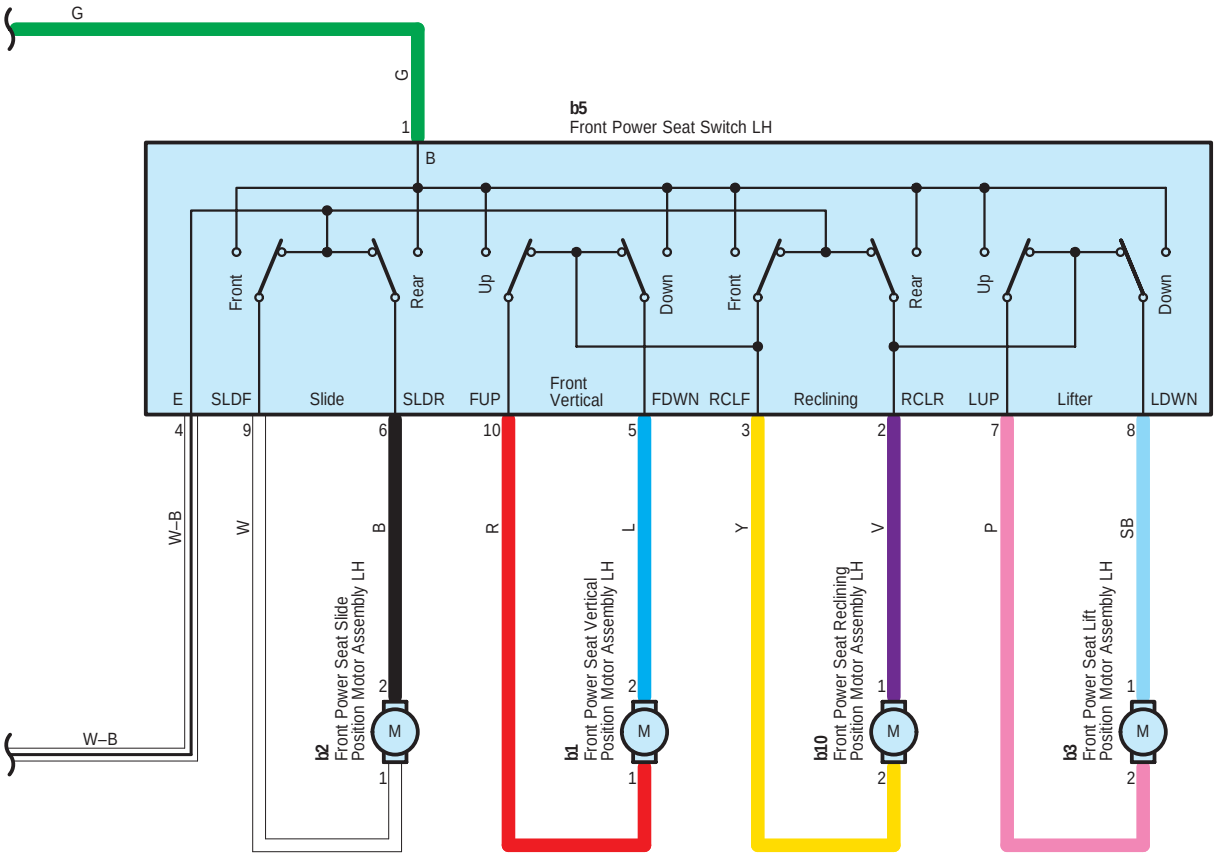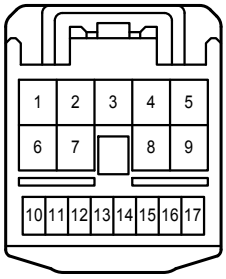


b 1
Black




b 2
Black




b 3
White




b 5
Black

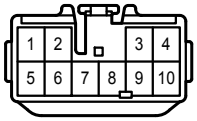


b 6
White




b 7
White

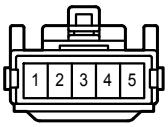


b 8
White

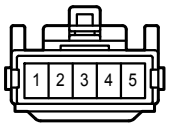


b 9
White



b 10
Black



b 11
White

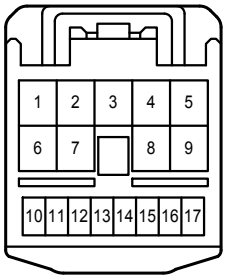

1O
White

