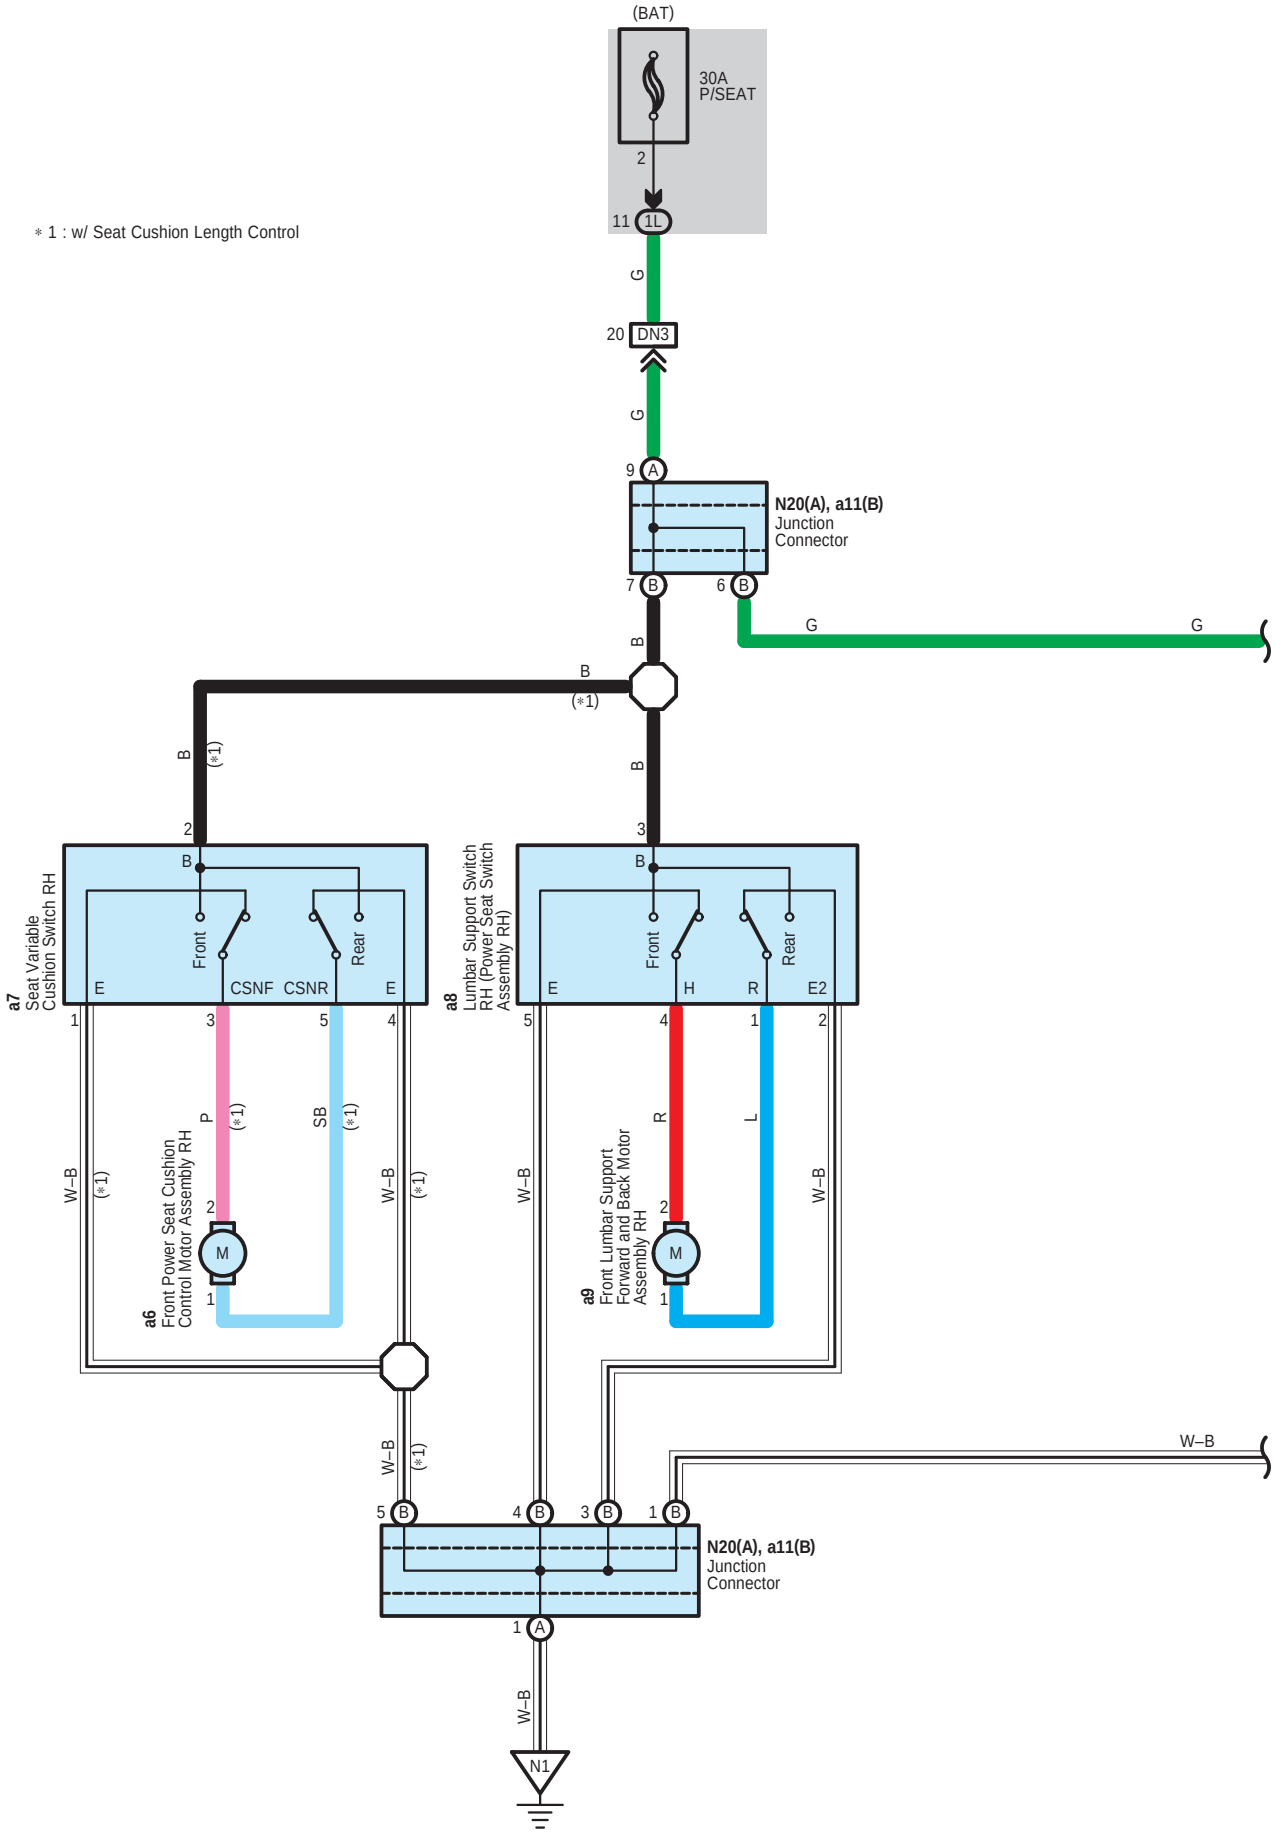
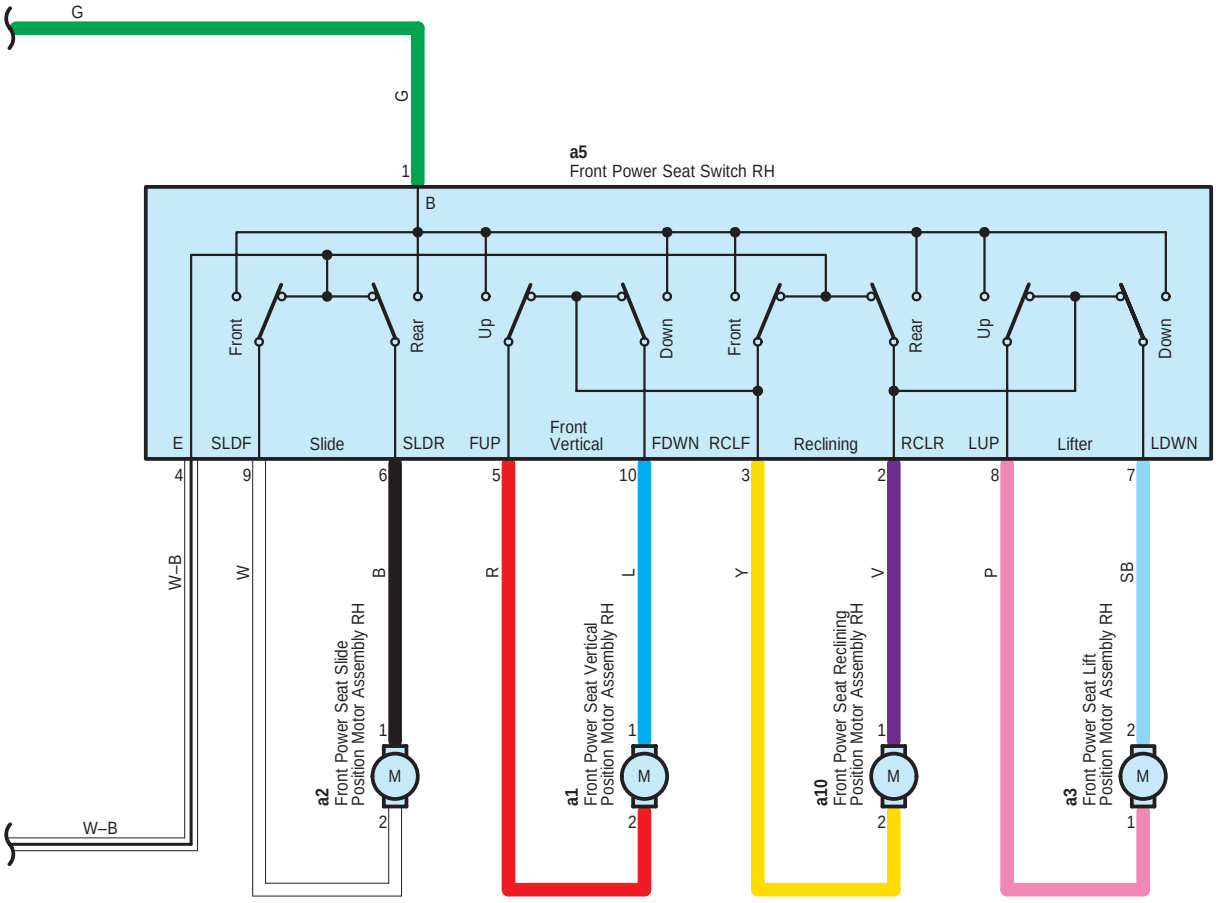
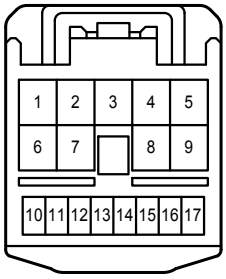


(BAT)
30A
P/SEAT
2
11
1L
* 1 : w/ Seat Cushion Length Control
G
20
DN3
G
9
A
N20(A), a11(B)
Junction
Connector
7
B
6
B
G
G
B
B
(*1)
B
(*1)
B
2
3
a7
Seat Variable
Cushion Switch RH
B
Front
Rear
E
CSNF
CSNR
E
a8
Lumbar Support Switch
RH (Power Seat Switch
Assembly RH)
B
Front
Rear
E
H
R
E2
1
3
5
4
5
4
1
2
W–B
(*1)
P
(*1)
SB
(*1)
W–B
(*1)
W–B
R
L
W–B
2
M
1
a6
Front Power Seat Cushion
Control Motor Assembly RH
a9
Front Lumbar Support
Forward and Back Motor
Assembly RH
W–B
W–B
(*1)
W–B
5
B
4
B
3
B
1
B
N20(A), a11(B)
Junction
Connector
1
A
W–B
N1


G
G
1
a5
Front Power Seat Switch RH
B
Front
Rear
Up
Down
Front
Rear
Up
Down
E
SLDF
Slide
SLDR
FUP
Front Vertical
FDWN
RCLF
Reclining
RCLR
LUP
Lifter
LDWN
4
9
6
5
10
3
2
8
7
W–B
W
B
R
L
Y
V
P
SB
a2
Front Power Seat Slide Position Motor Assembly RH
a1
Front Power Seat Vertical Position Motor Assembly RH
a10
Front Power Seat Reclining Position Motor Assembly RH
a3
Front Power Seat Lift Position Motor Assembly RH
M
1
2
W–B


N 20
White





a 1
Black



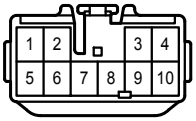

a 2
Black





a 3
White



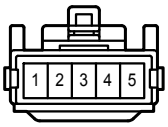

a 5
Black



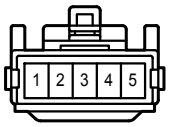

a 6
White





a 7
White





a 8
White



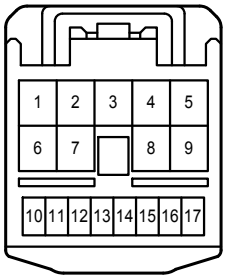

a 9
White



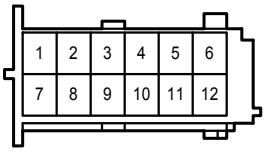

a 10
Black




a 11
White




1L
White




DN3
Blue

