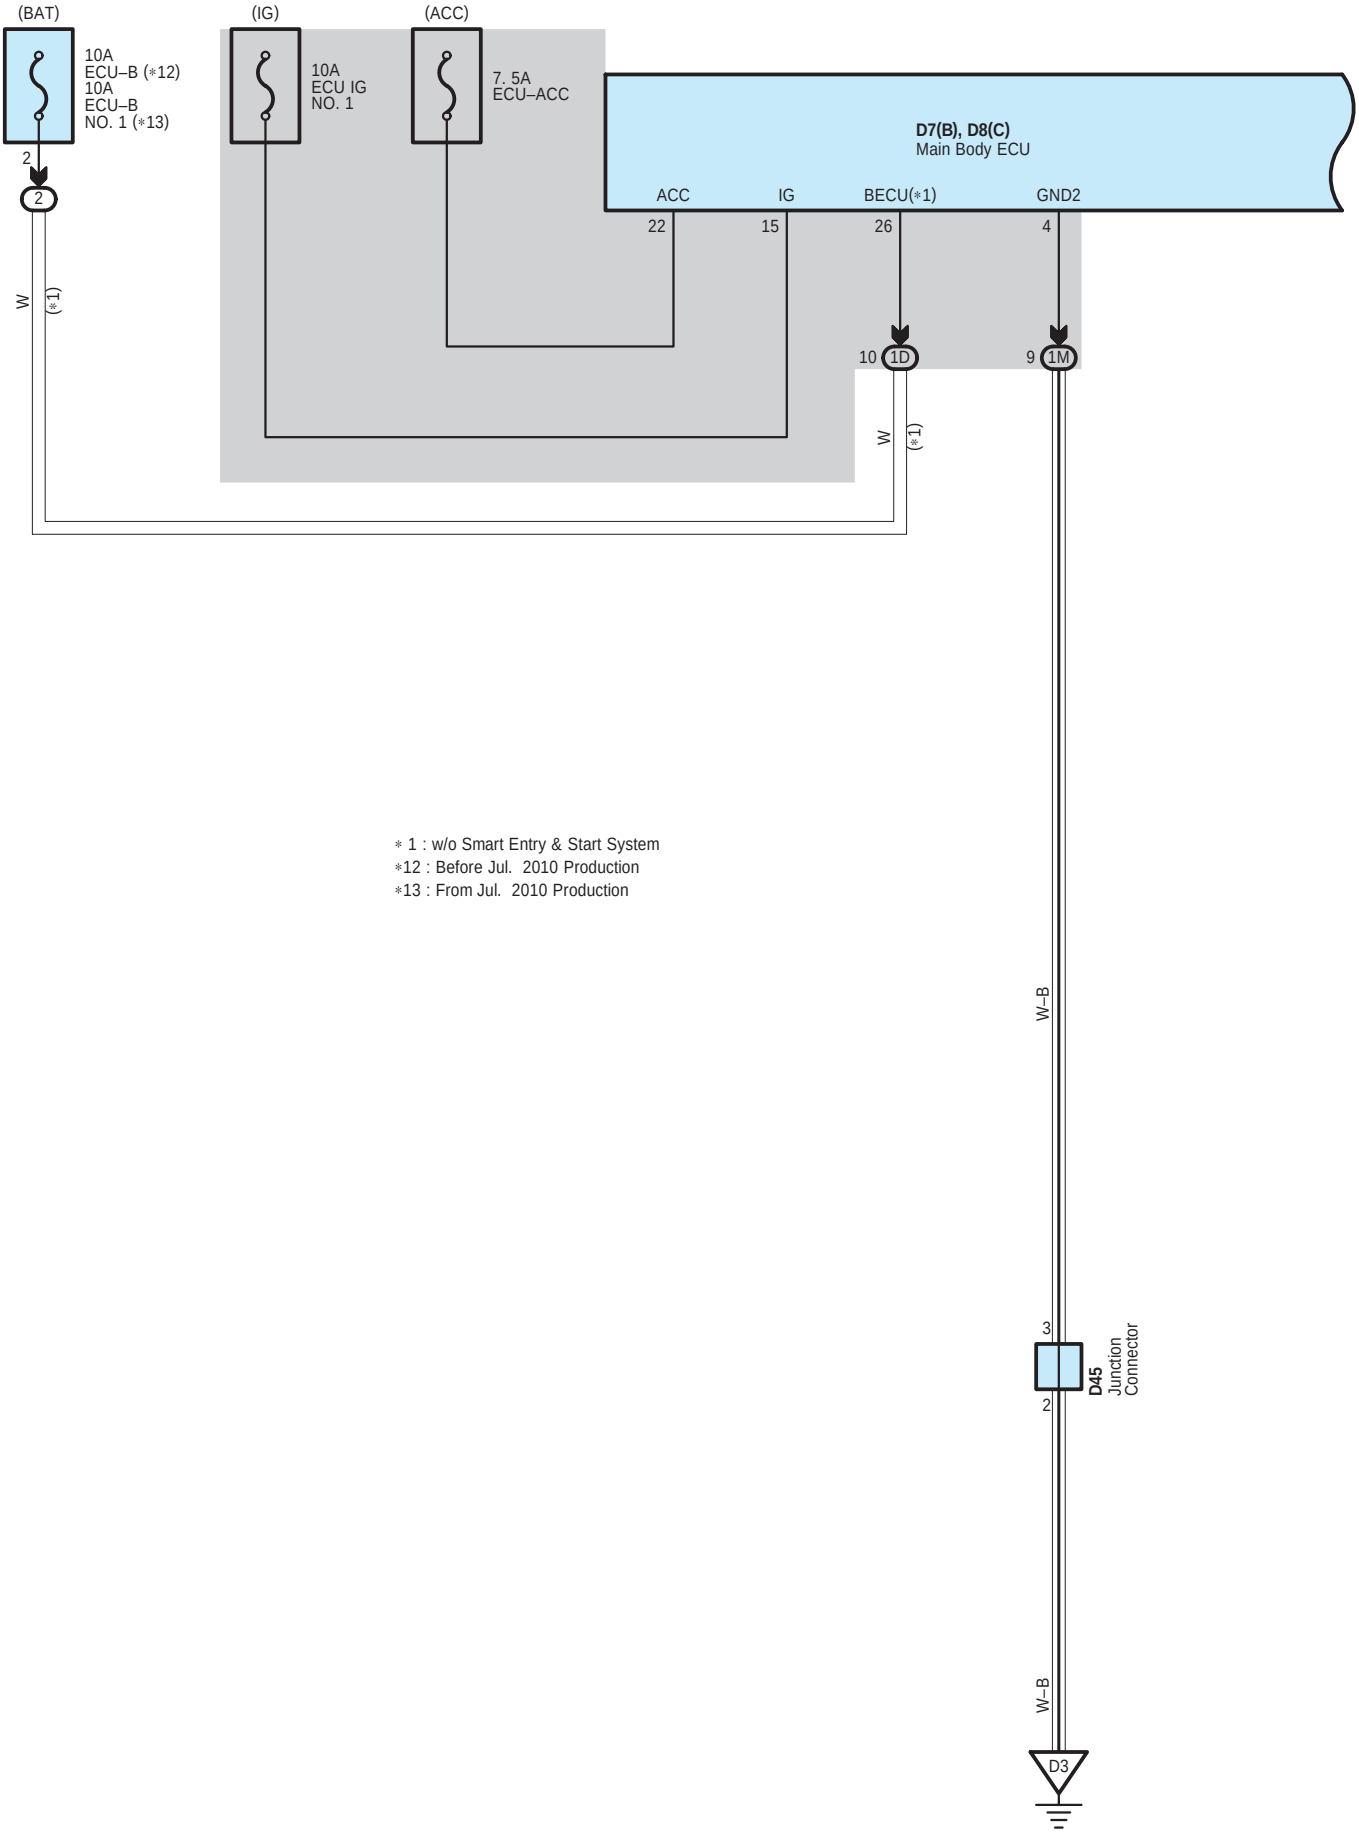
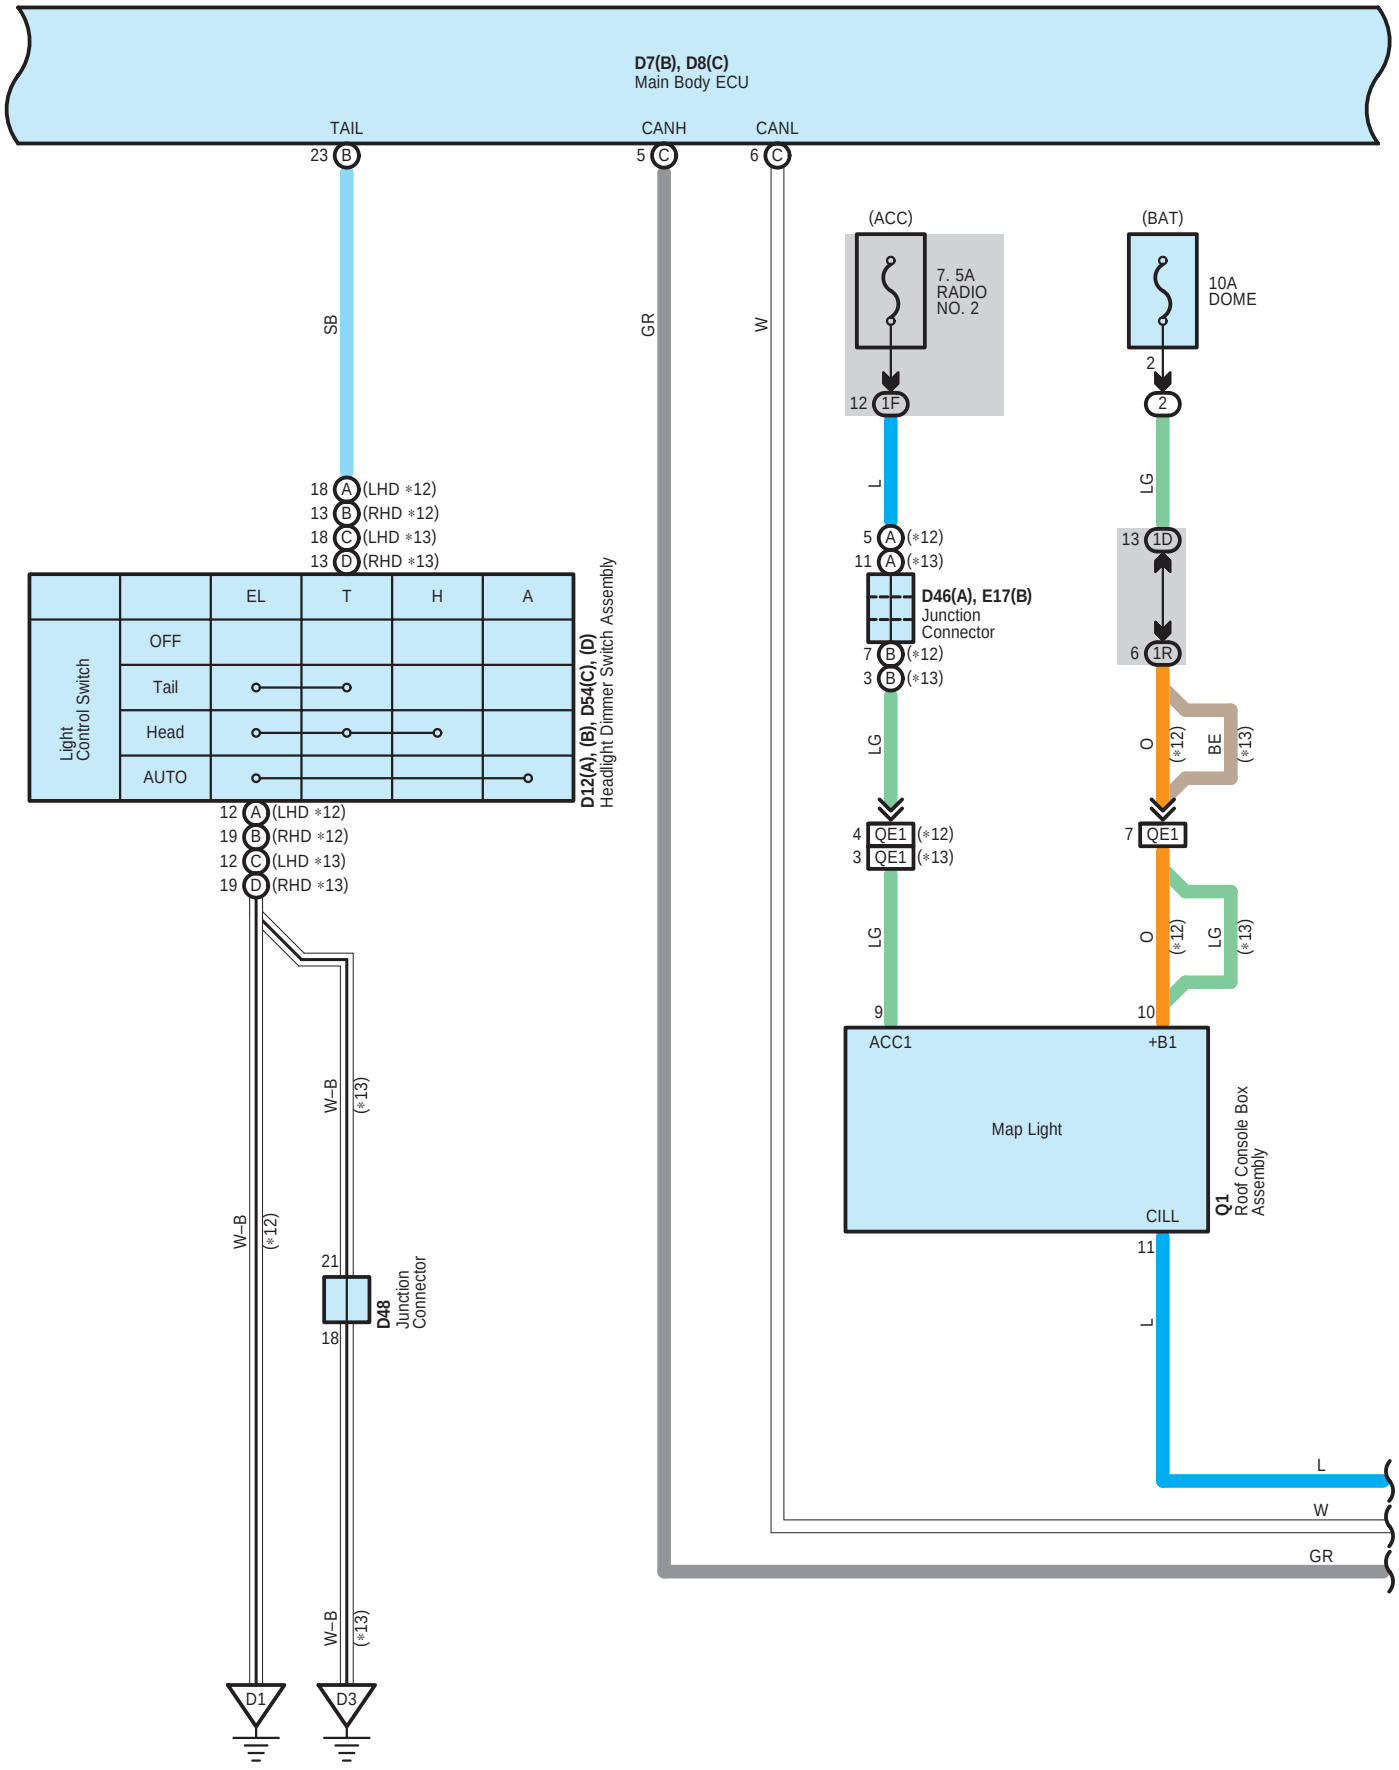
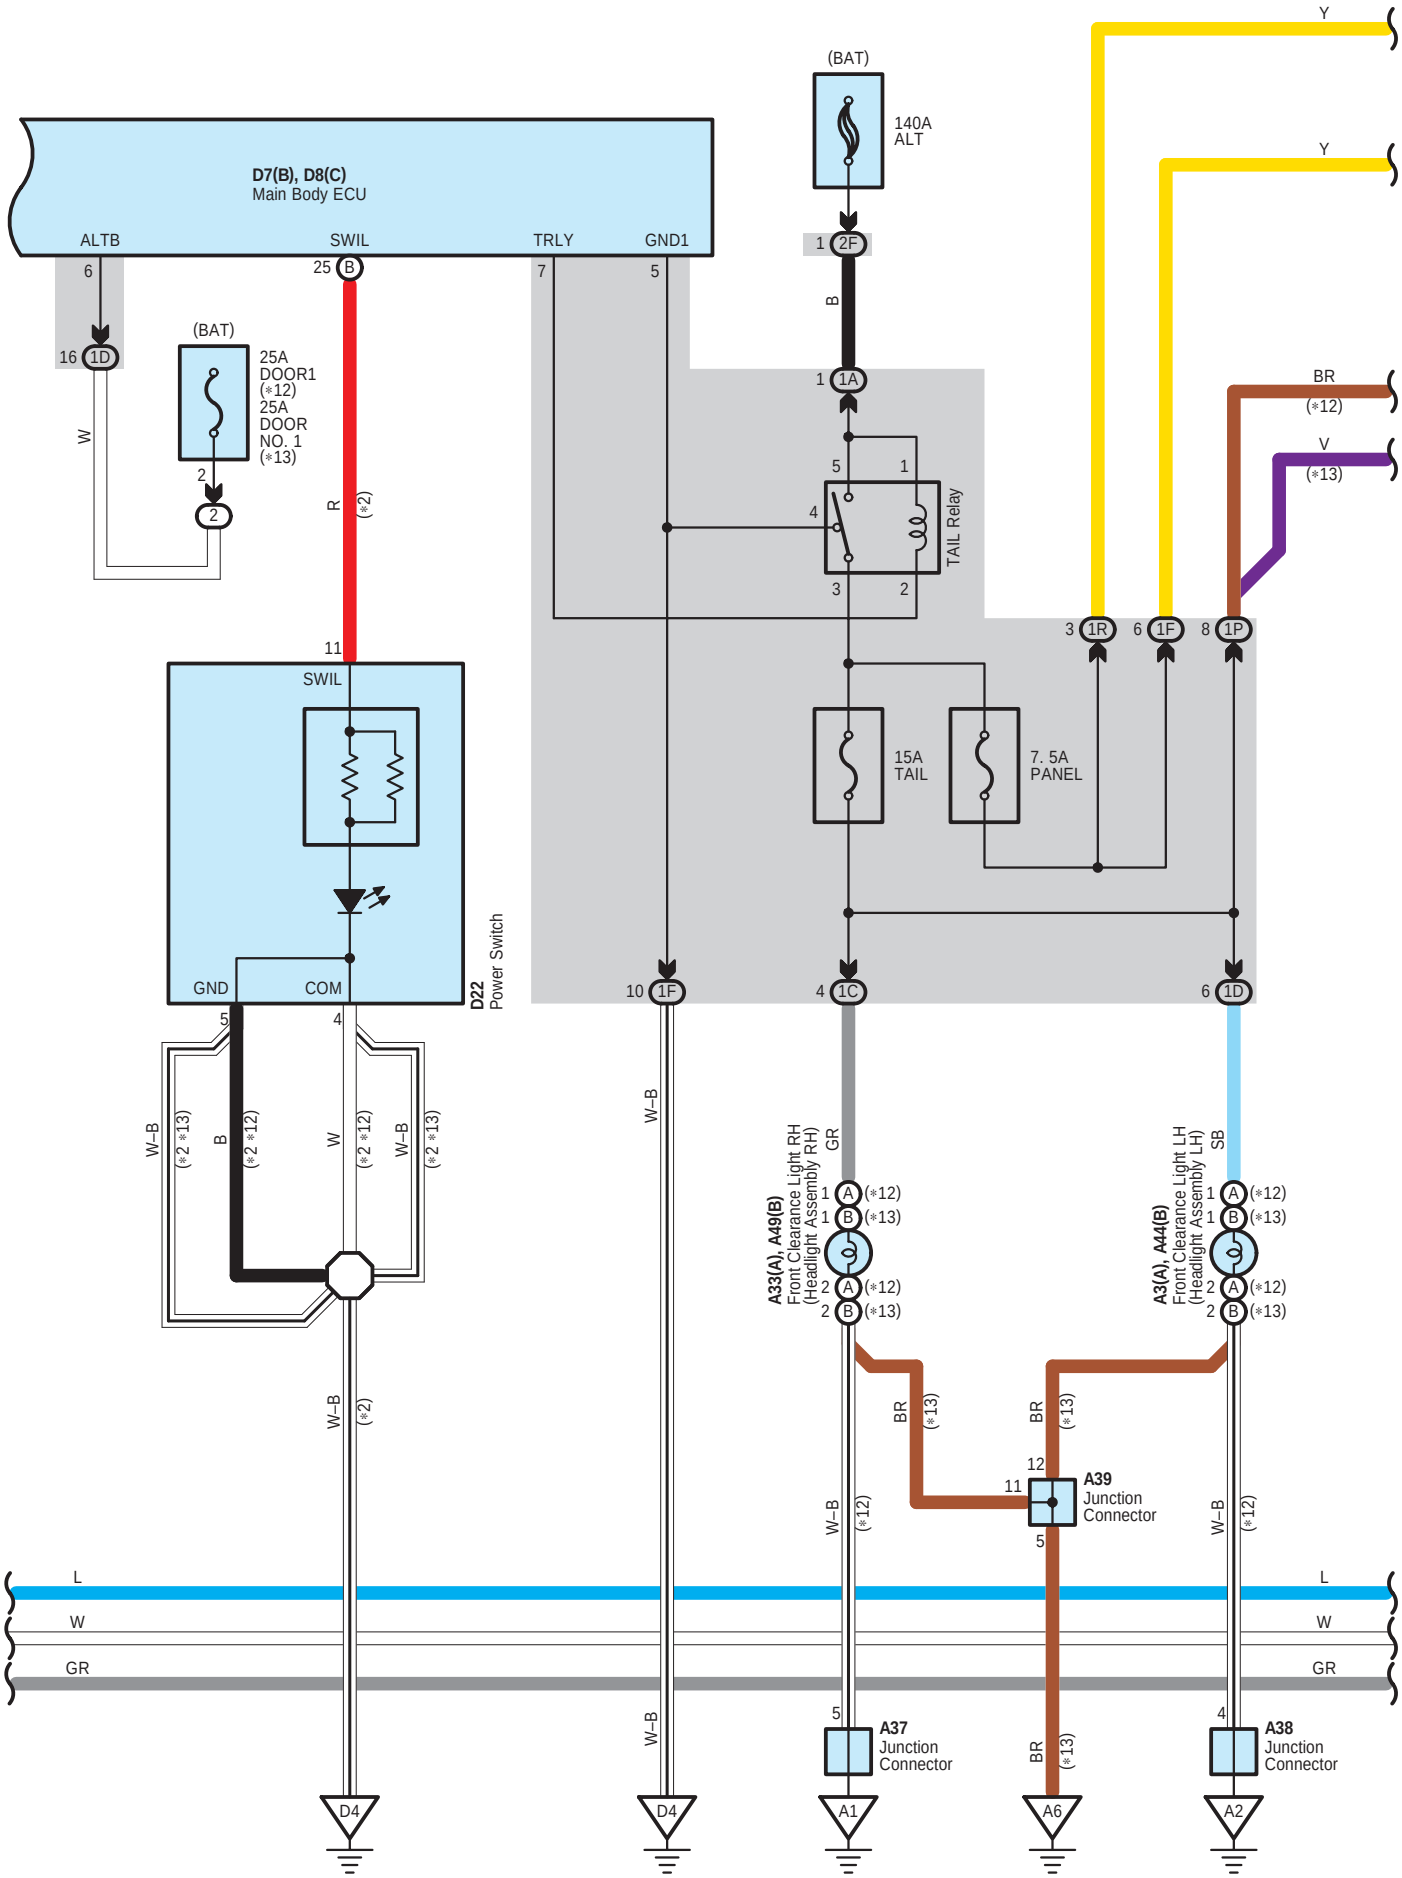
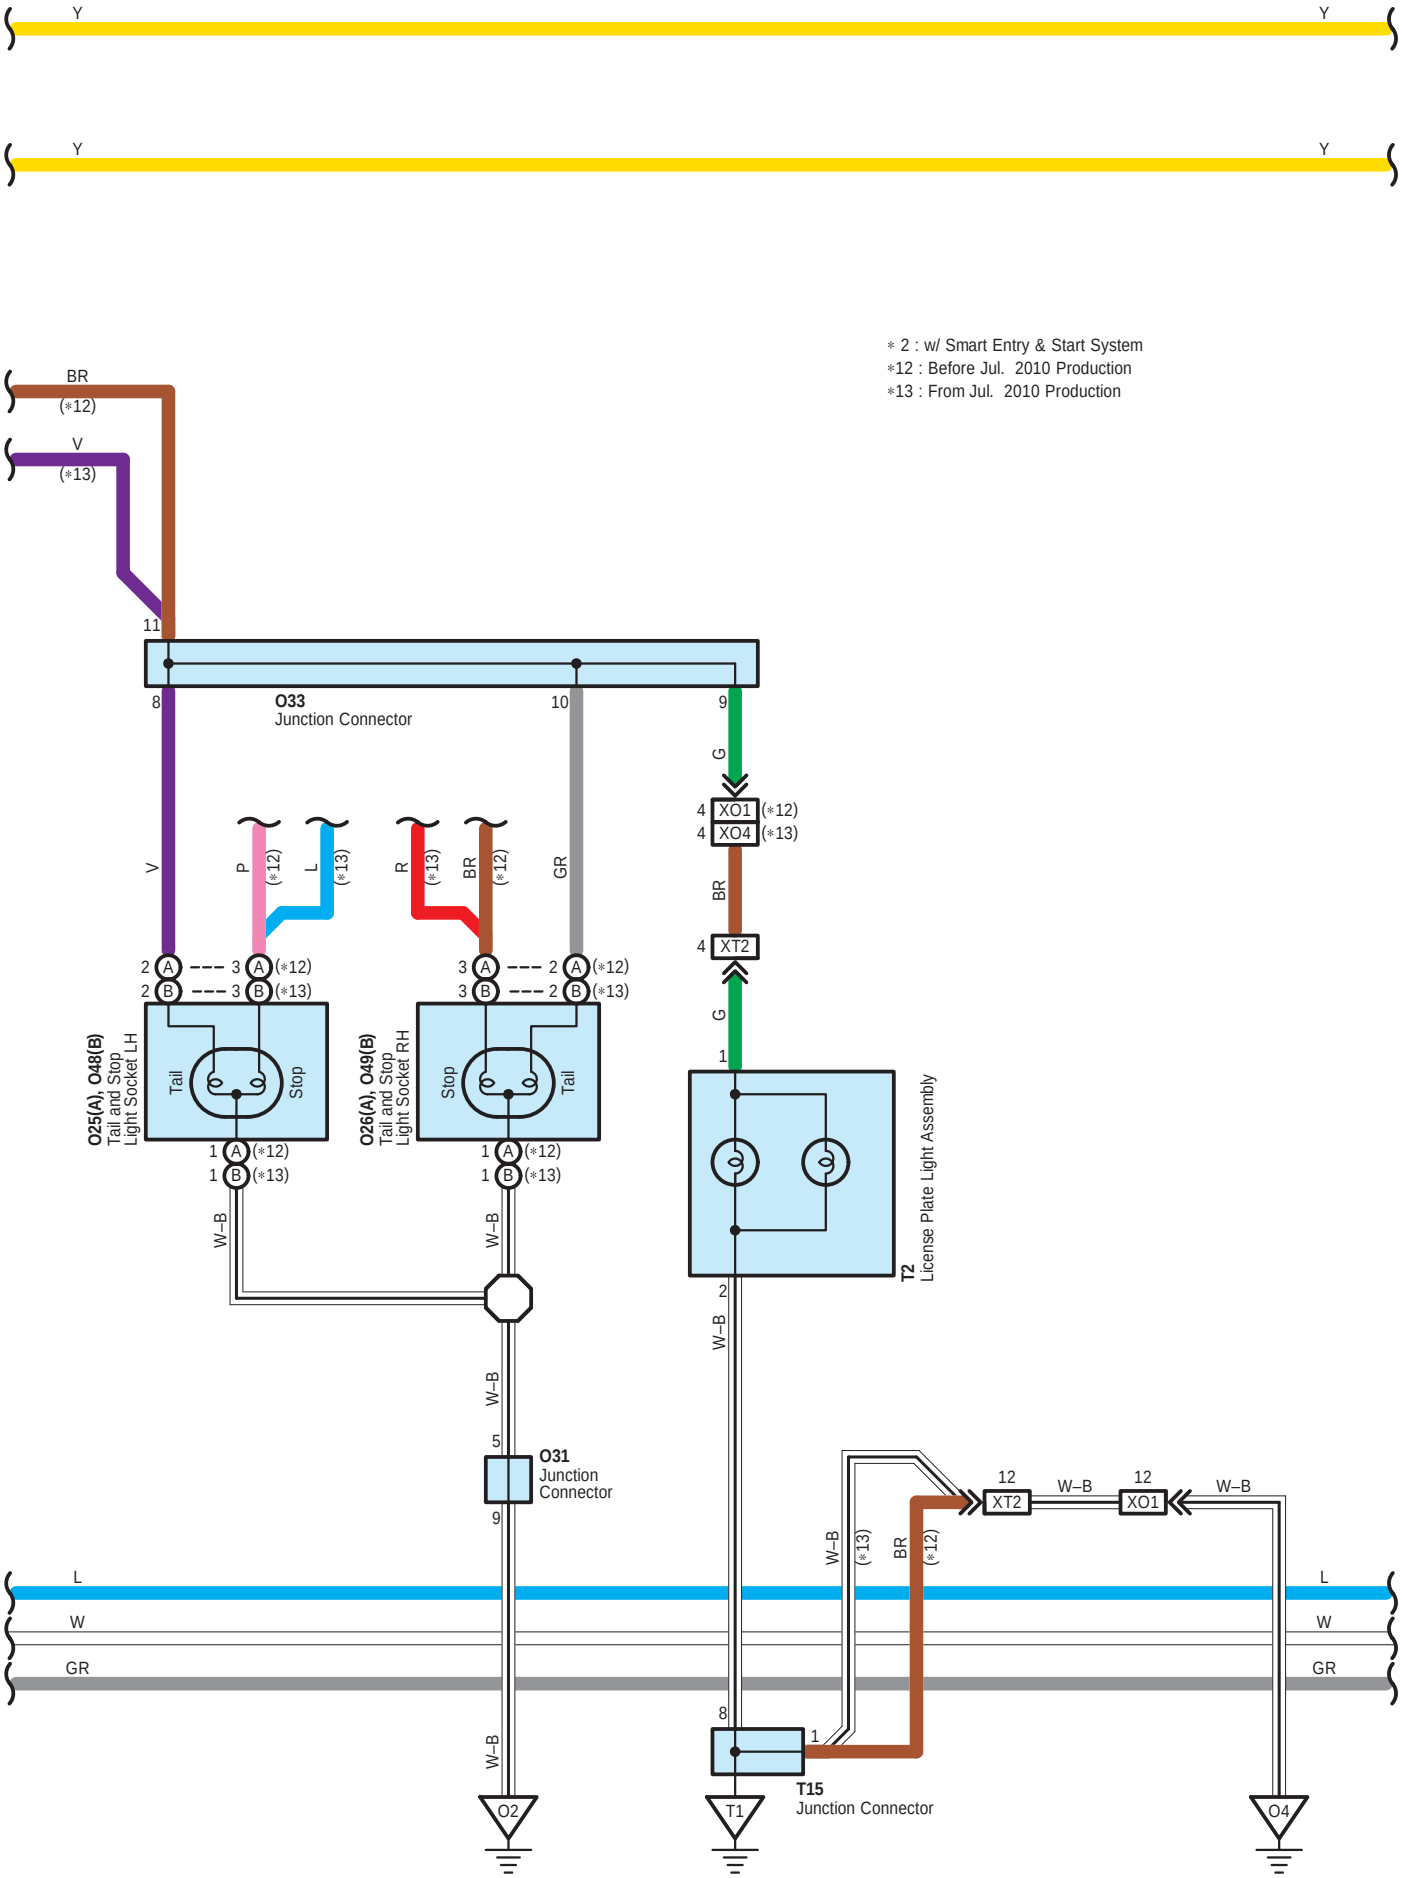
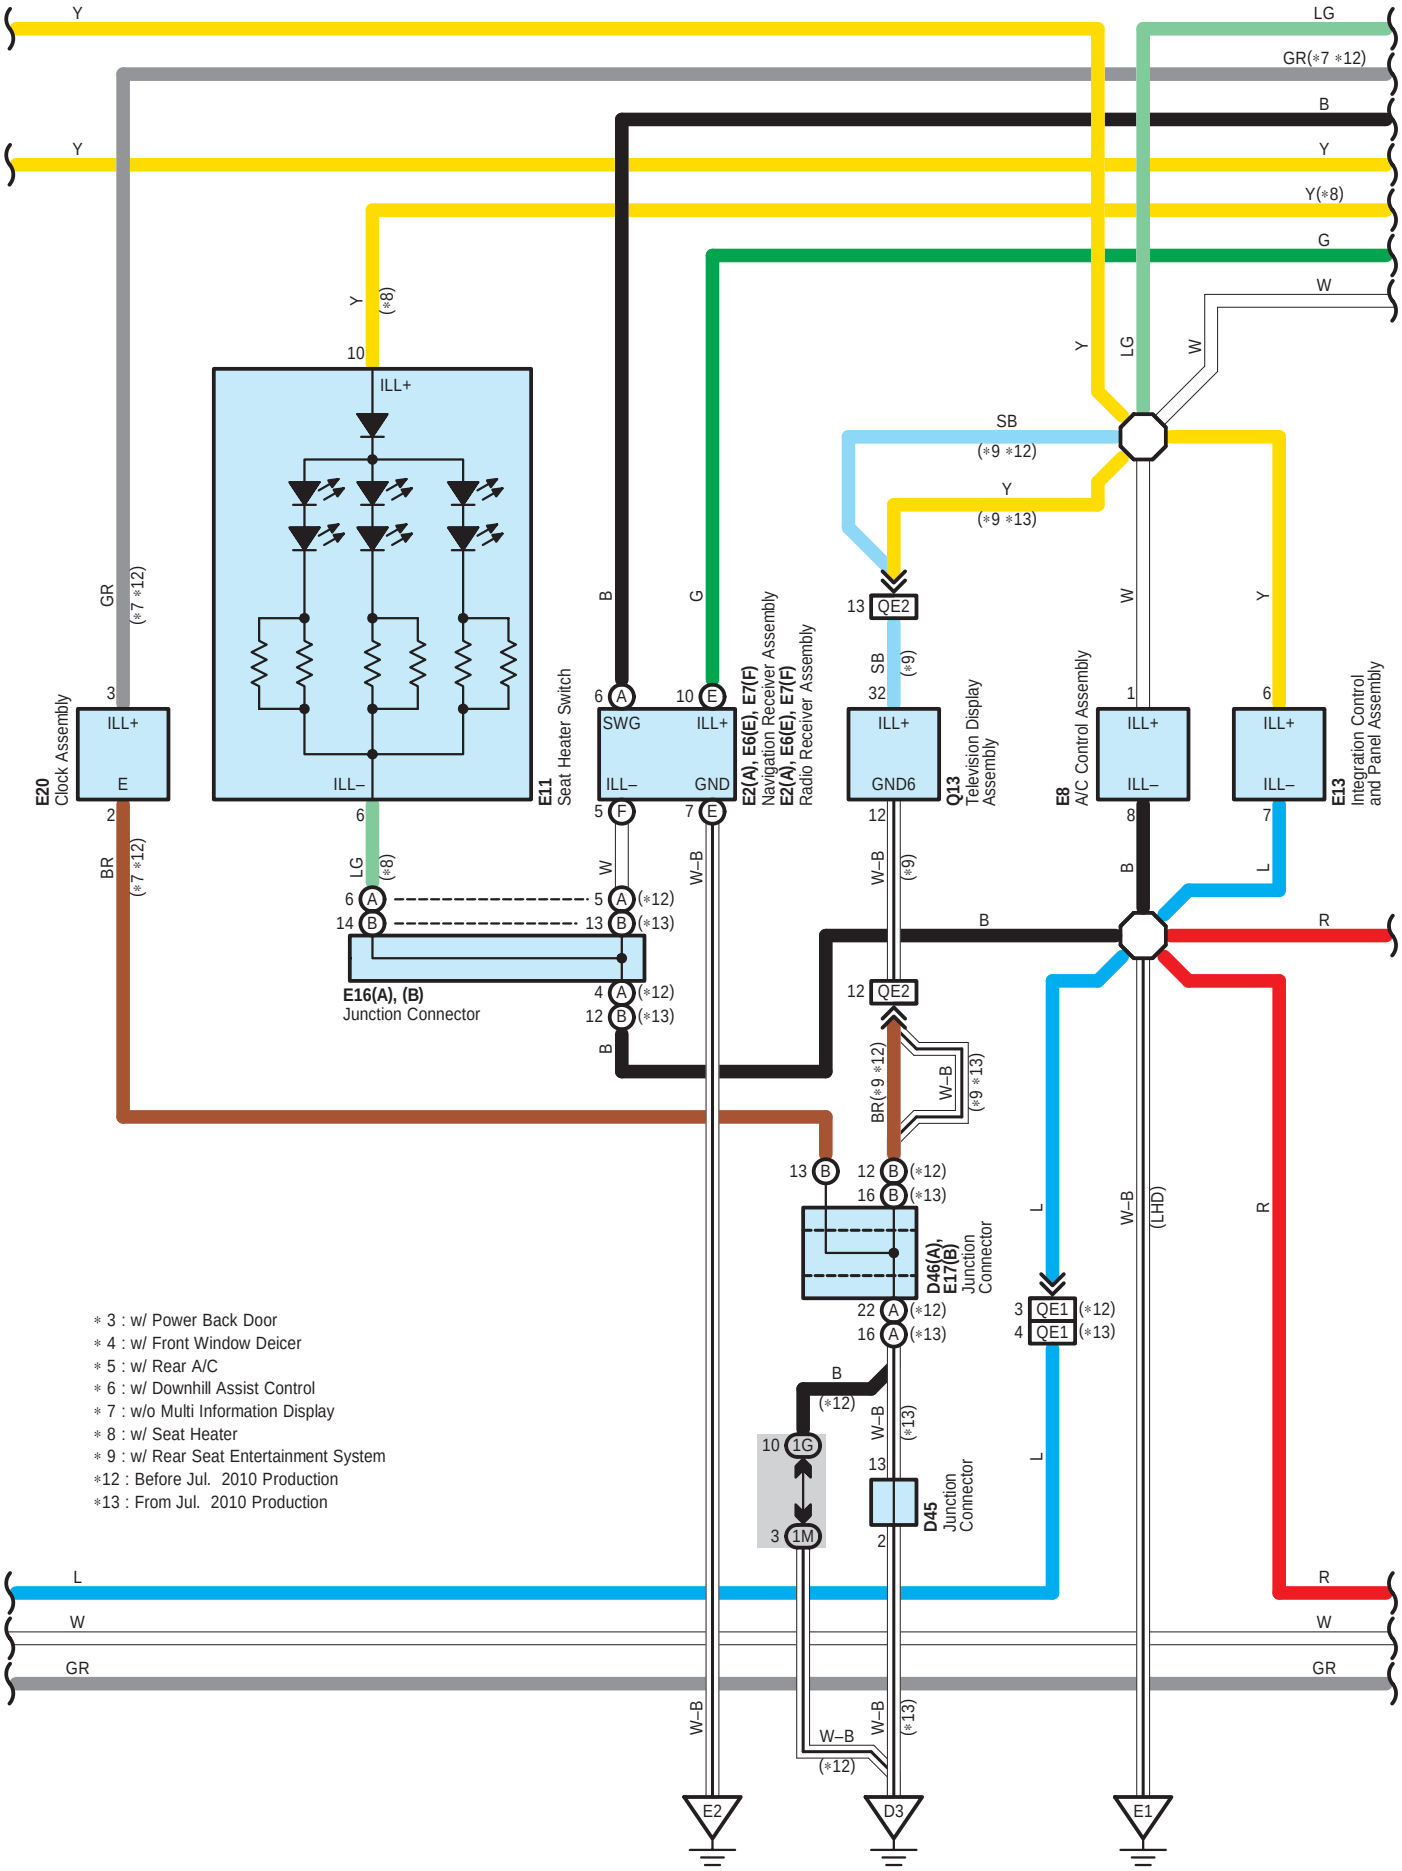



* 1 : w/o Smart Entry & Start System
*12 : Before Jul. 2010 Production
*13 : From Jul. 2010 Production



D7(B), D8(C)
Main Body ECU
TAIL
CANH
CANL
23 B
5 C
6 C
SB
GR
W
(ACC)
(BAT)
7. 5A
RADIO
NO. 2
10A
DOME
12 1F
2
2
L
LG
18 A (LHD *12)
13 B (RHD *12)
18 C (LHD *13)
13 D (RHD *13)
5 A (*12)
11 A (*13)
13 1D
6 1R
D46(A), E17(B)
Junction
Connector
7 B (*12)
3 B (*13)
EL
T
H
A
OFF
Tail
Head
AUTO
Light
Control Switch
D12(A), (B), D54(C), (D)
Headlight Dimmer Switch Assembly
LG
O
(*12)
BE
(*13)
12 A (LHD *12)
19 B (RHD *12)
12 C (LHD *13)
19 D (RHD *13)
4 QE1 (*12)
3 QE1 (*13)
7 QE1
LG
O
(*12)
LG
(*13)
W-B
(*13)
9
10
ACC1
+B1
W-B
(*12)
Map Light
Q1
Roof Console Box
Assembly
CILL
21
D48
Junction
Connector
18
11
L
L
W
GR
W-B
(*13)
D1
D3



D7(B), D8(C)
Main Body ECU
ALTB
SWIL
TRLY
GND1
(BAT)
140A
ALT
25A
DOOR1
(*12)
25A
DOOR
NO. 1
(*13)
TAIL Relay
15A
TAIL
7. 5A
PANEL
SWIL
GND
COM
D22
Power Switch
A33(A), A49(B)
Front Clearance Light RH
(Headlight Assembly RH)
A3(A), A44(B)
Front Clearance Light LH
(Headlight Assembly LH)
A39
Junction
Connector
A37
Junction
Connector
A38
Junction
Connector
D4
A1
A6
A2


Y
Y
Y
Y
∗ 2 : w/ Smart Entry & Start System
∗12 : Before Jul. 2010 Production
∗13 : From Jul. 2010 Production
BR
(∗12)
V
(∗13)
11
8
O33
Junction Connector
10
9
G
4 XO1 (∗12)
4 XO4 (∗13)
BR
4 XT2
G
1
T2
License Plate Light Assembly
2
W–B
V
P (∗12)
L (∗13)
R (∗13)
BR (∗12)
GR
2 A 3 A (∗12)
2 B 3 B (∗13)
3 A 2 A (∗12)
3 B 2 B (∗13)
O25(A), O48(B)
Tail and Stop
Light Socket LH
Tail
Stop
O26(A), O49(B)
Tail and Stop
Light Socket RH
Stop
Tail
1 A (∗12)
1 B (∗13)
1 A (∗12)
1 B (∗13)
W–B
W–B
W–B
5
O31
Junction
Connector
9
W–B
(∗13)
BR
(∗12)
12
XT2
W–B
12
XO1
W–B
L
W
GR
L
W
GR
8
1
T15
Junction Connector
W–B
O2
T1
O4



Y
LG
GR(∗7 ∗12)
B
Y
Y(∗8)
G
W
SB
(∗9 ∗12)
Y
(∗9 ∗13)
E20
Clock Assembly
ILL+
E
GR
(∗7 ∗12)
BR
(∗7 ∗12)
ILL+
ILL−
E11
Seat Heater Switch
SWG
ILL−
ILL+
GND
E2(A), E6(E), E7(F)
Navigation Receiver Assembly
E2(A), E6(E), E7(F)
Radio Receiver Assembly
LG
(∗8)
W
B
G
E16(A), (B)
Junction Connector
QE2
SB
(∗9)
ILL+
GND6
Q13
Television Display Assembly
W–B
(∗9)
BR(∗9 ∗12)
W–B
(∗9 ∗13)
E8
A/C Control Assembly
ILL+
ILL–
ILL+
ILL–
E13
Integration Control and Panel Assembly
B
L
R
D46(A), E17(B)
Junction Connector
QE1
(∗12)
(∗13)
W–B
(LHD)
L
R
B
(∗12)
W–B
(∗13)
1G
1M
D45
Junction Connector
L
W
GR
R
W
GR
W–B
W–B
(∗12)
W–B
(∗13)
E2
D3
E1
∗ 3 : w/ Power Back Door
∗ 4 : w/ Front Window Deicer
∗ 5 : w/ Rear A/C
∗ 6 : w/ Downhill Assist Control
∗ 7 : w/o Multi Information Display
∗ 8 : w/ Seat Heater
∗ 9 : w/ Rear Seat Entertainment System
∗12 : Before Jul. 2010 Production
∗13 : From Jul. 2010 Production

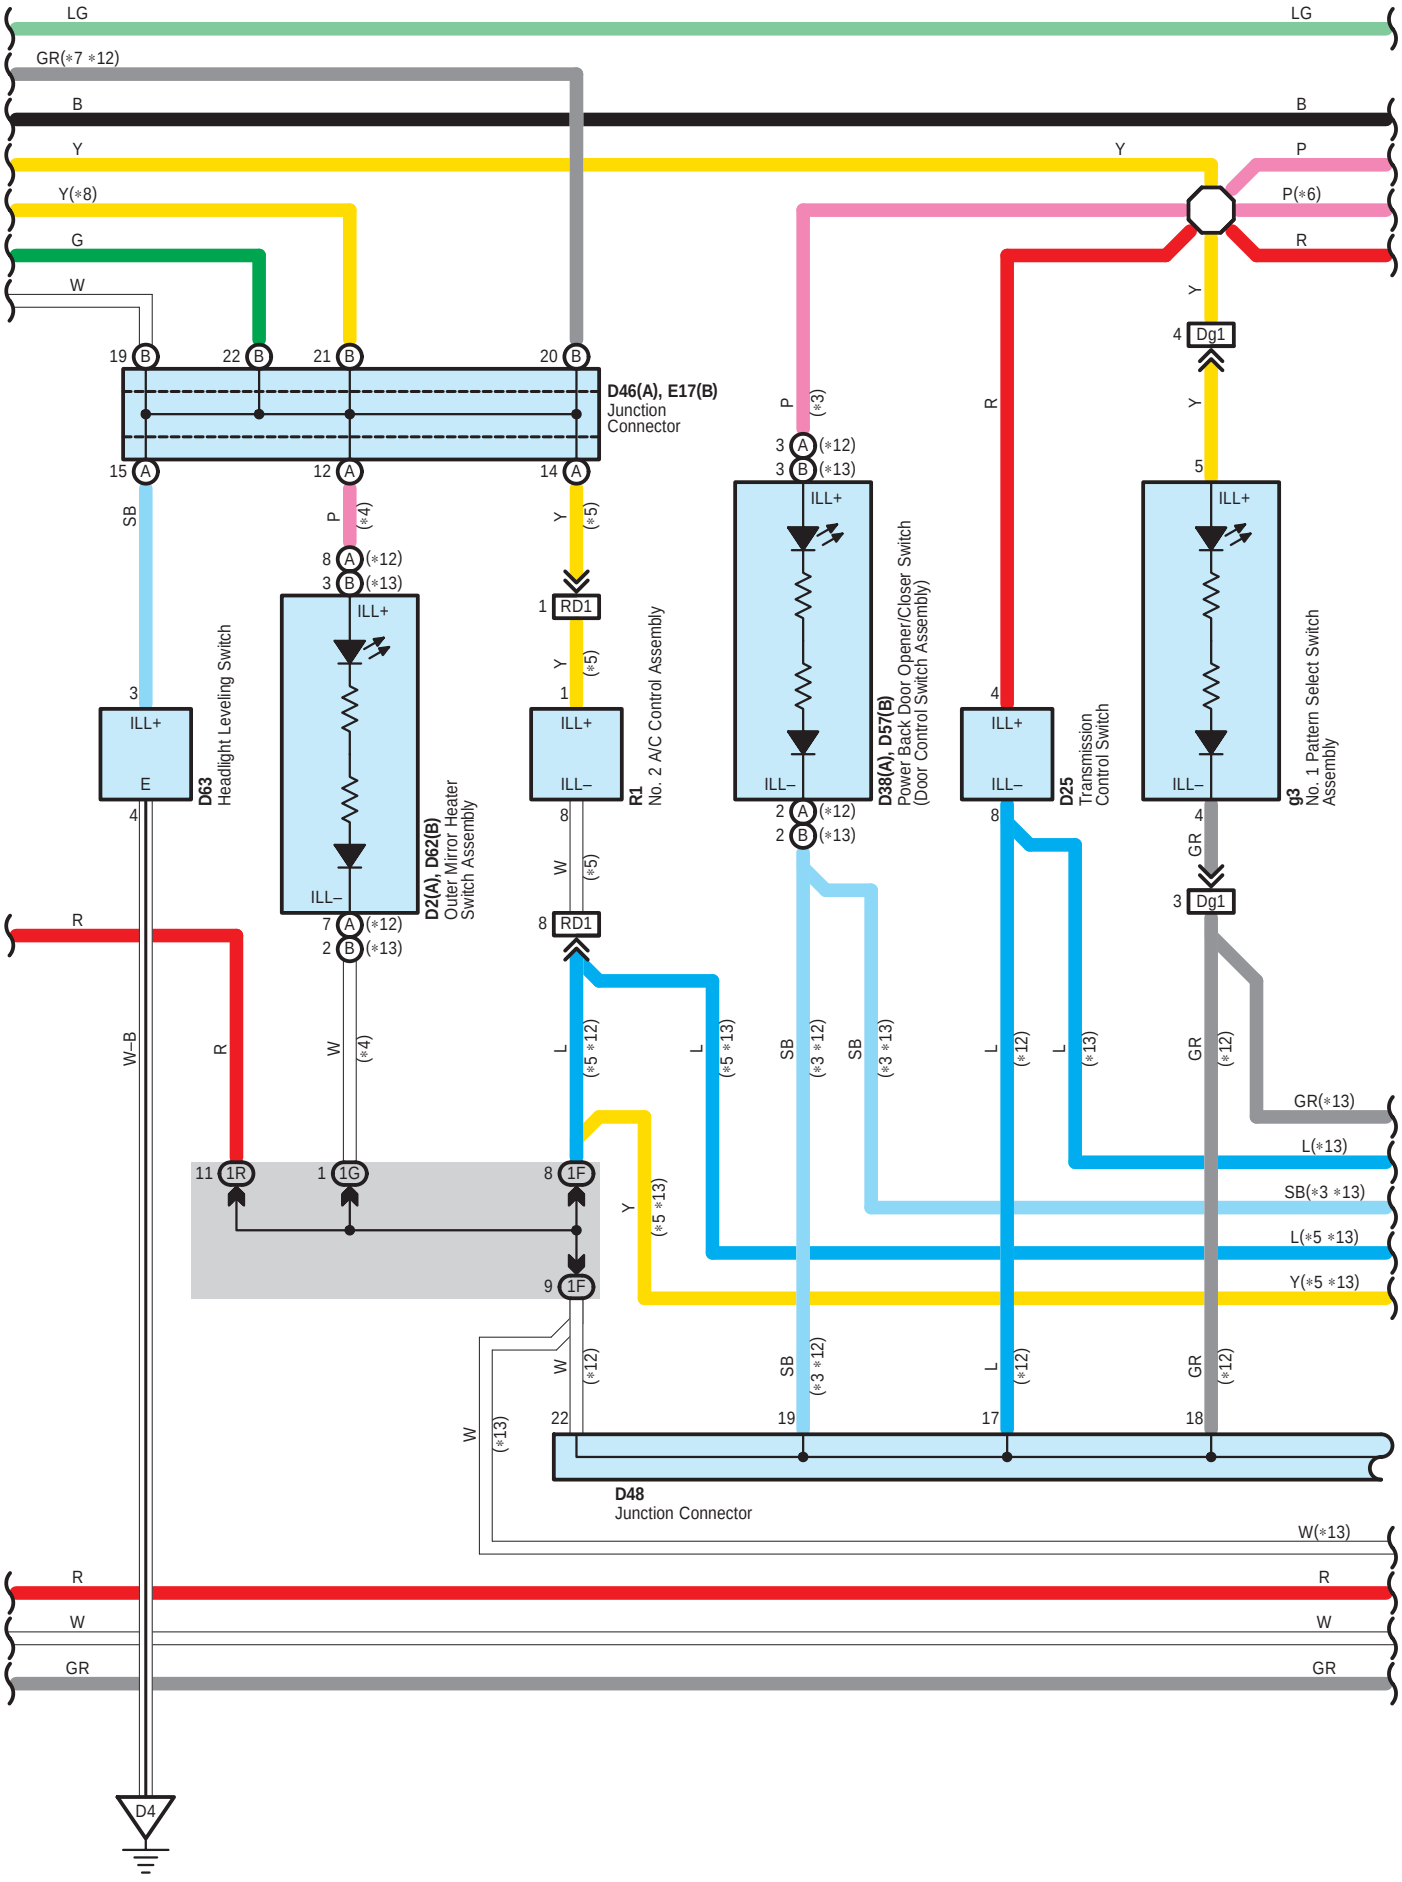

LG
GR(∗7 ∗12)
B
Y
Y(∗8)
G
W
P
P(∗6)
R
D46(A), E17(B)
Junction Connector
D63
Headlight Leveling Switch
D2(A), D62(B)
Outer Mirror Heater Switch Assembly
R1
No. 2 A/C Control Assembly
D38(A), D57(B)
Power Back Door Opener/Closer Switch (Door Control Switch Assembly)
D25
Transmission Control Switch
g3
No. 1 Pattern Select Switch Assembly
ILL+
ILL–
RD1
Dg1
D48
Junction Connector
W–B
GR(∗13)
L(∗13)
SB(∗3 ∗13)
L(∗5 ∗13)
Y(∗5 ∗13)
W(∗13)
D4

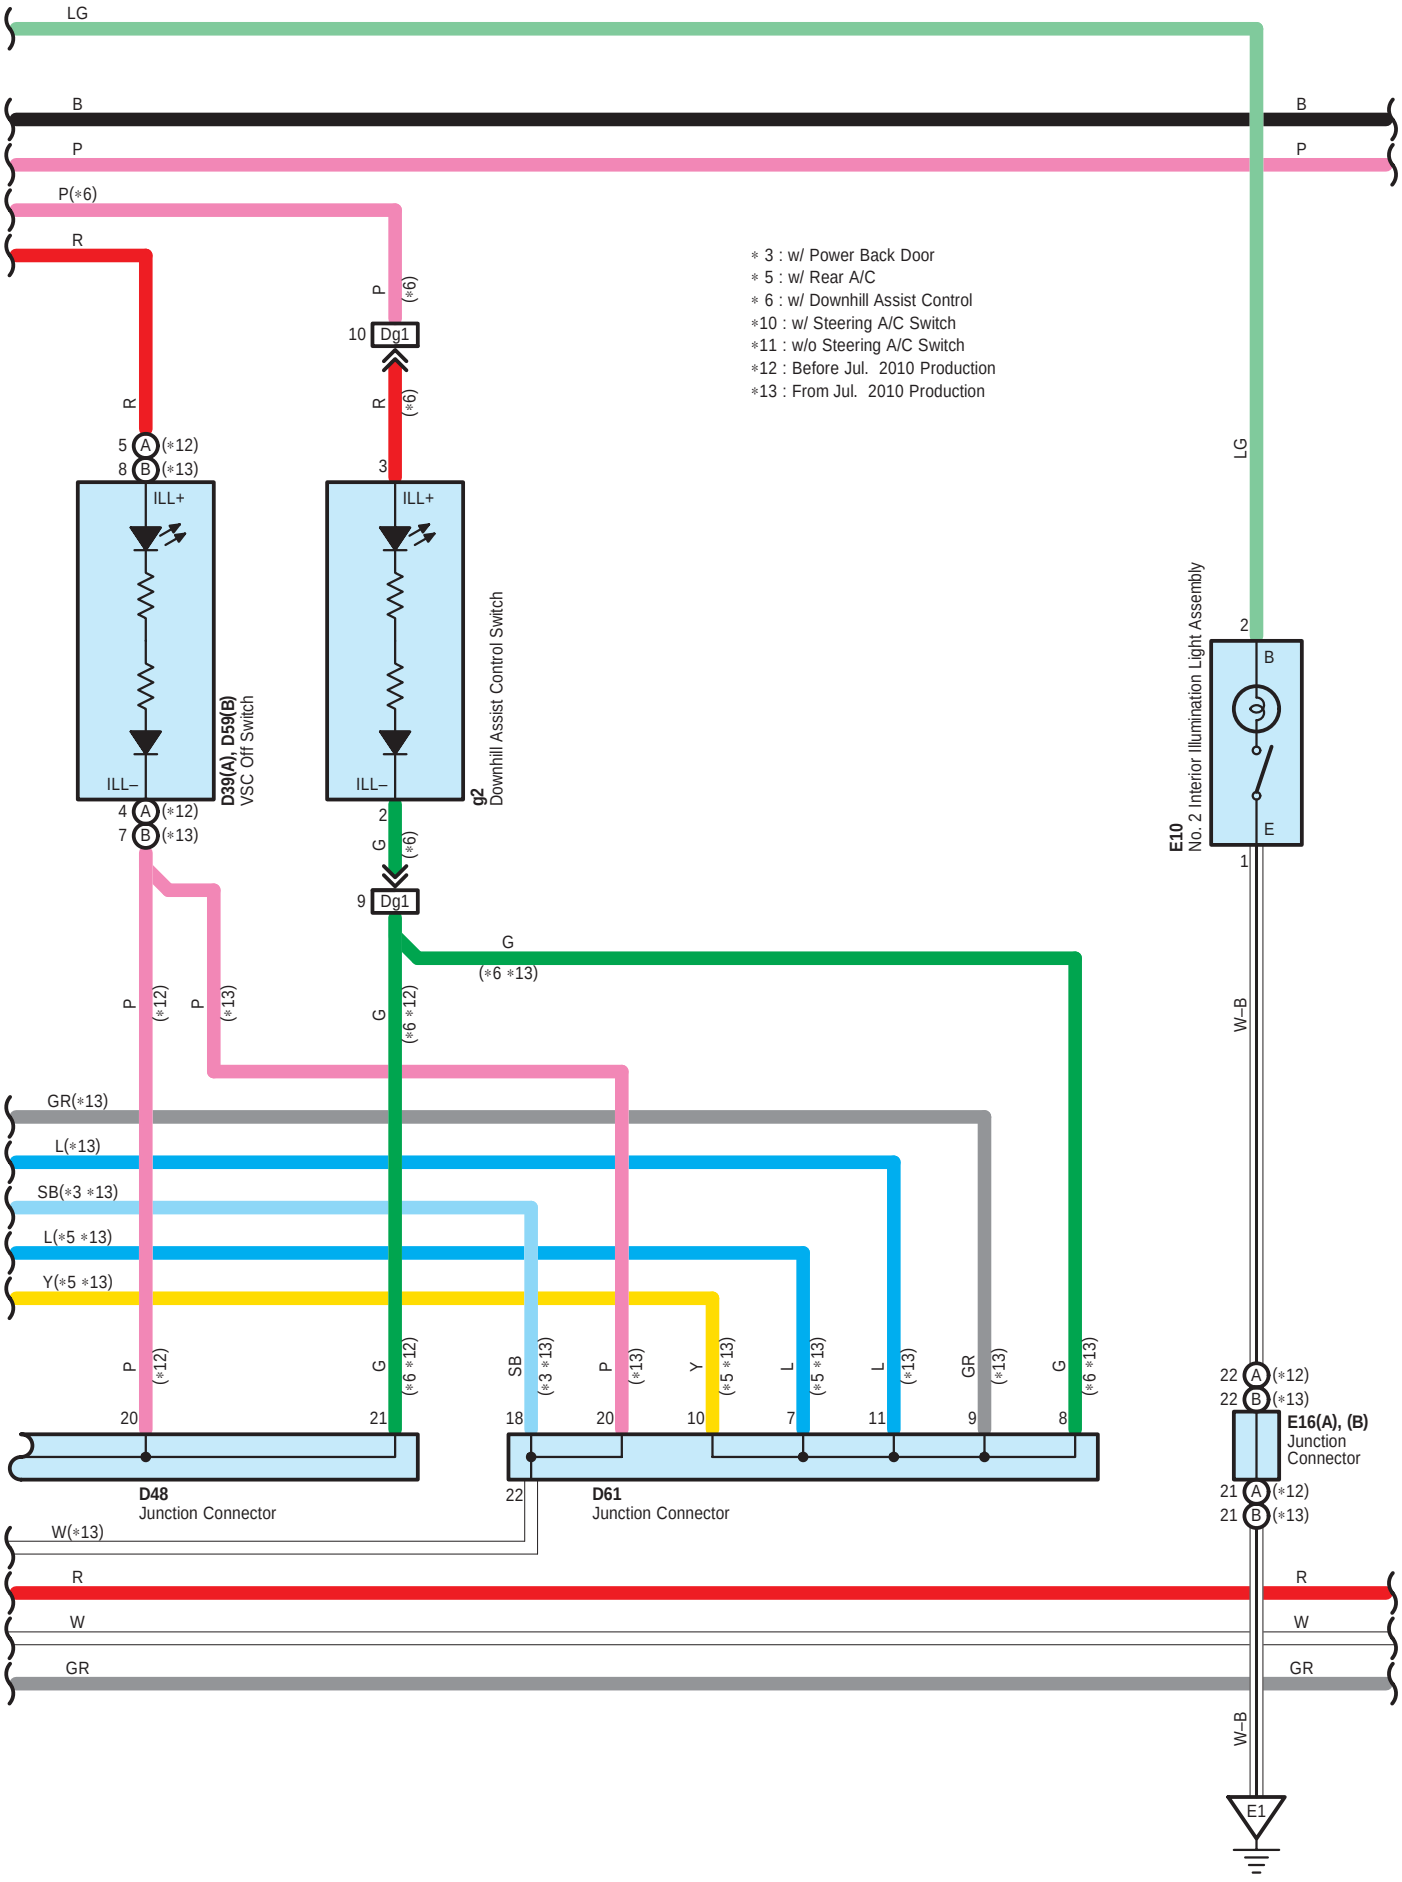
LG
B
P
P(∗6)
R
∗ 3 : w/ Power Back Door
∗ 5 : w/ Rear A/C
∗ 6 : w/ Downhill Assist Control
∗10 : w/ Steering A/C Switch
∗11 : w/o Steering A/C Switch
∗12 : Before Jul. 2010 Production
∗13 : From Jul. 2010 Production
10 Dg1
3
5 A (∗12)
8 B (∗13)
ILL+
ILL–
4 A (∗12)
7 B (∗13)
D39(A), D59(B)
VSC Off Switch
g2
Downhill Assist Control Switch
2
9 Dg1
E10
No. 2 Interior Illumination Light Assembly
1
G
(∗6 ∗13)
GR(∗13)
L(∗13)
SB(∗3 ∗13)
L(∗5 ∗13)
Y(∗5 ∗13)
20
21
18
20
10
7
11
9
8
22
D48
Junction Connector
D61
Junction Connector
W(∗13)
W–B
22 A (∗12)
22 B (∗13)
E16(A), (B)
Junction
Connector
21 A (∗12)
21 B (∗13)
W
E1

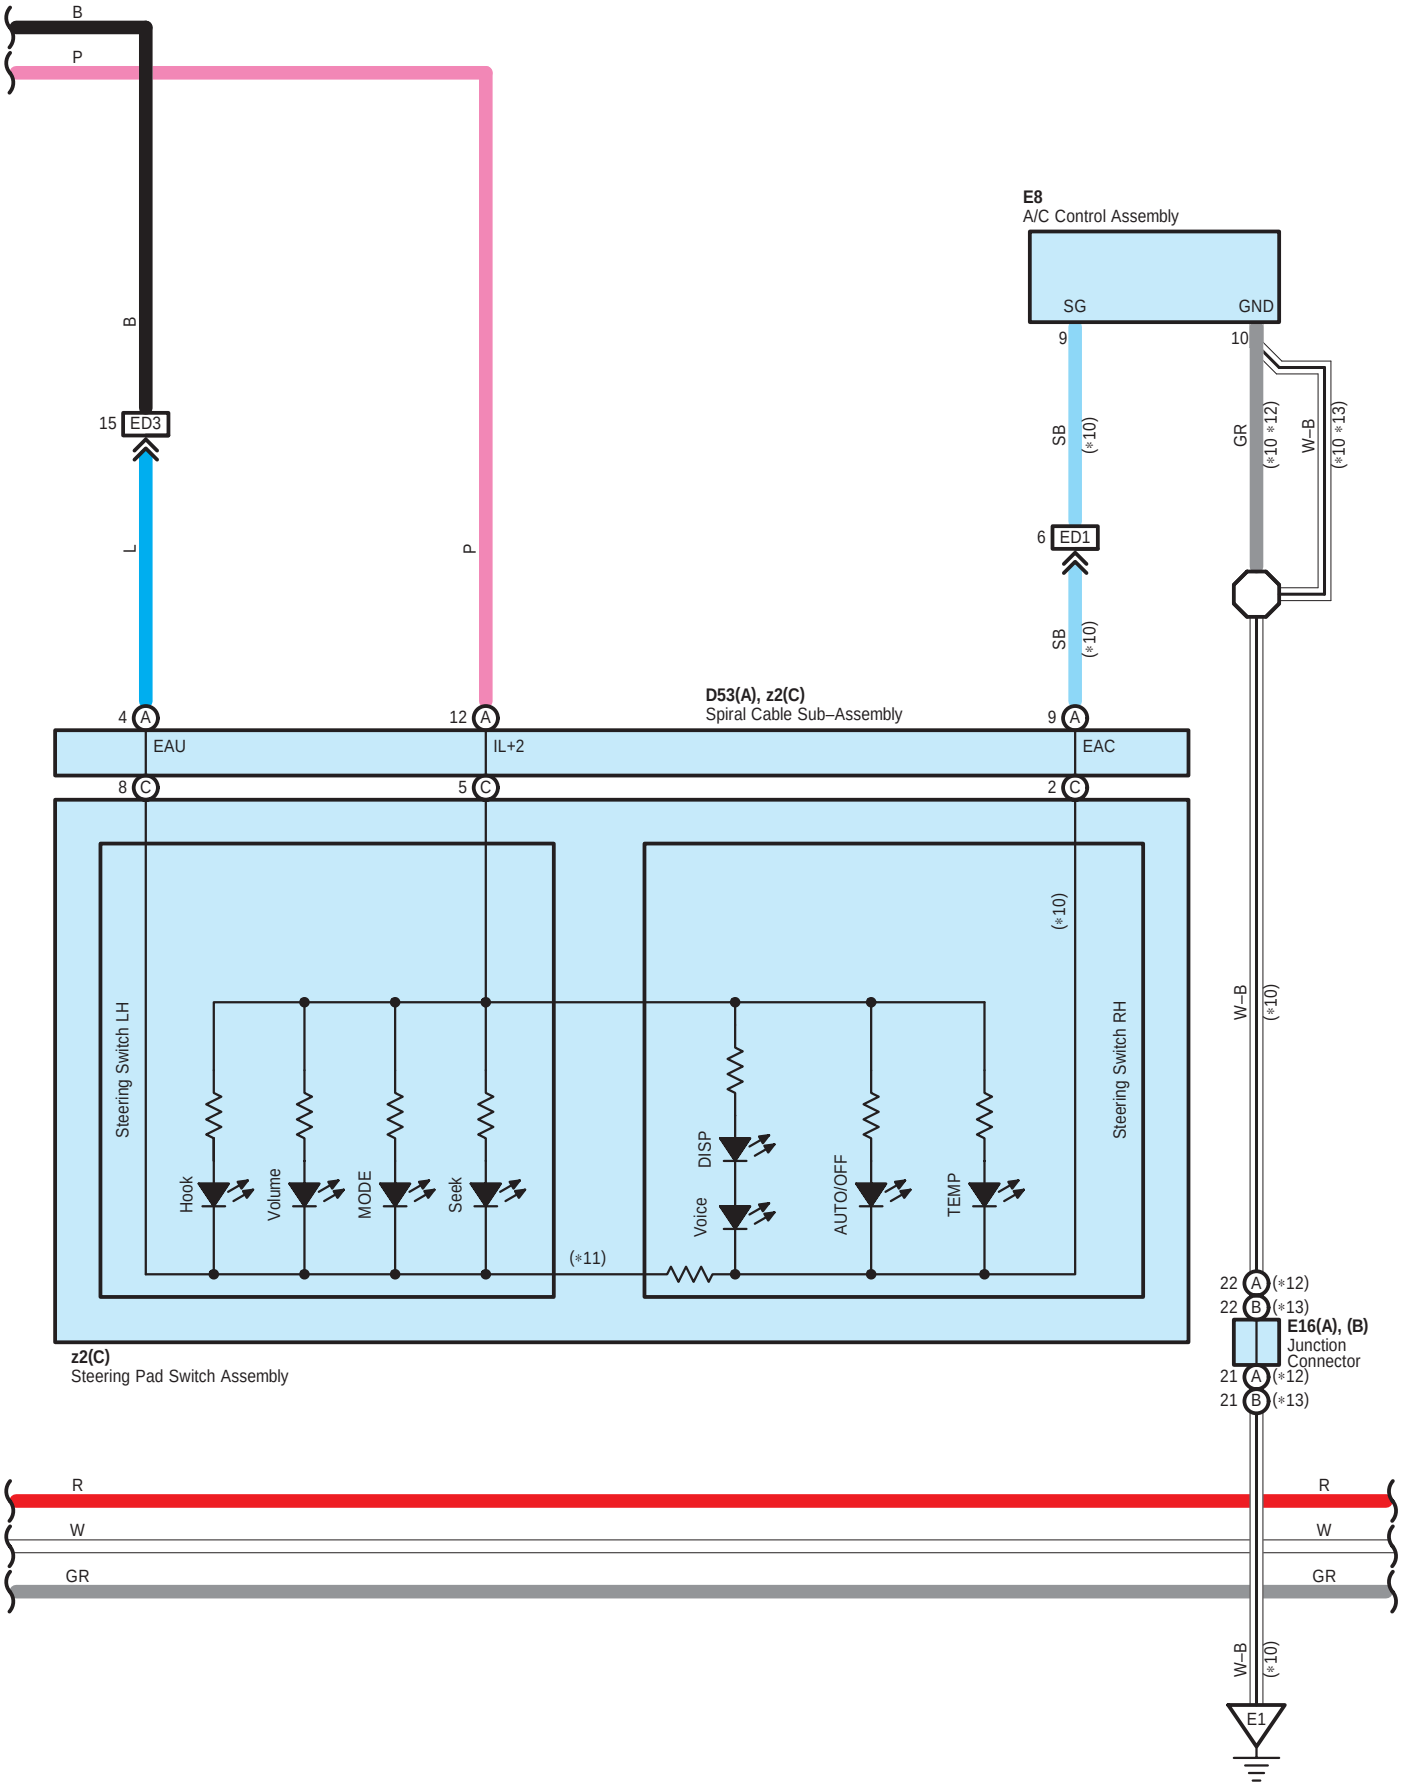

B
P
B
15 ED3
L
P
E8
A/C Control Assembly
SG
GND
9
10
SB
(*10)
GR
(*10 *12)
W–B
(*10 *13)
6 ED1
SB
(*10)
4 A
EAU
12 A
IL+2
D53(A), z2(C)
Spiral Cable Sub–Assembly
9 A
EAC
8 C
5 C
2 C
(*10)
Steering Switch LH
Hook
Volume
MODE
Seek
DISP
Voice
AUTO/OFF
TEMP
Steering Switch RH
(*11)
W–B
(*10)
22 A (*12)
22 B (*13)
E16(A), (B)
Junction
Connector
21 A (*12)
21 B (*13)
z2(C)
Steering Pad Switch Assembly
R
W
GR
R
W
GR
W–B
(*10)
E1

∗12 : Before Jul. 2010 Production
∗13 : From Jul. 2010 Production

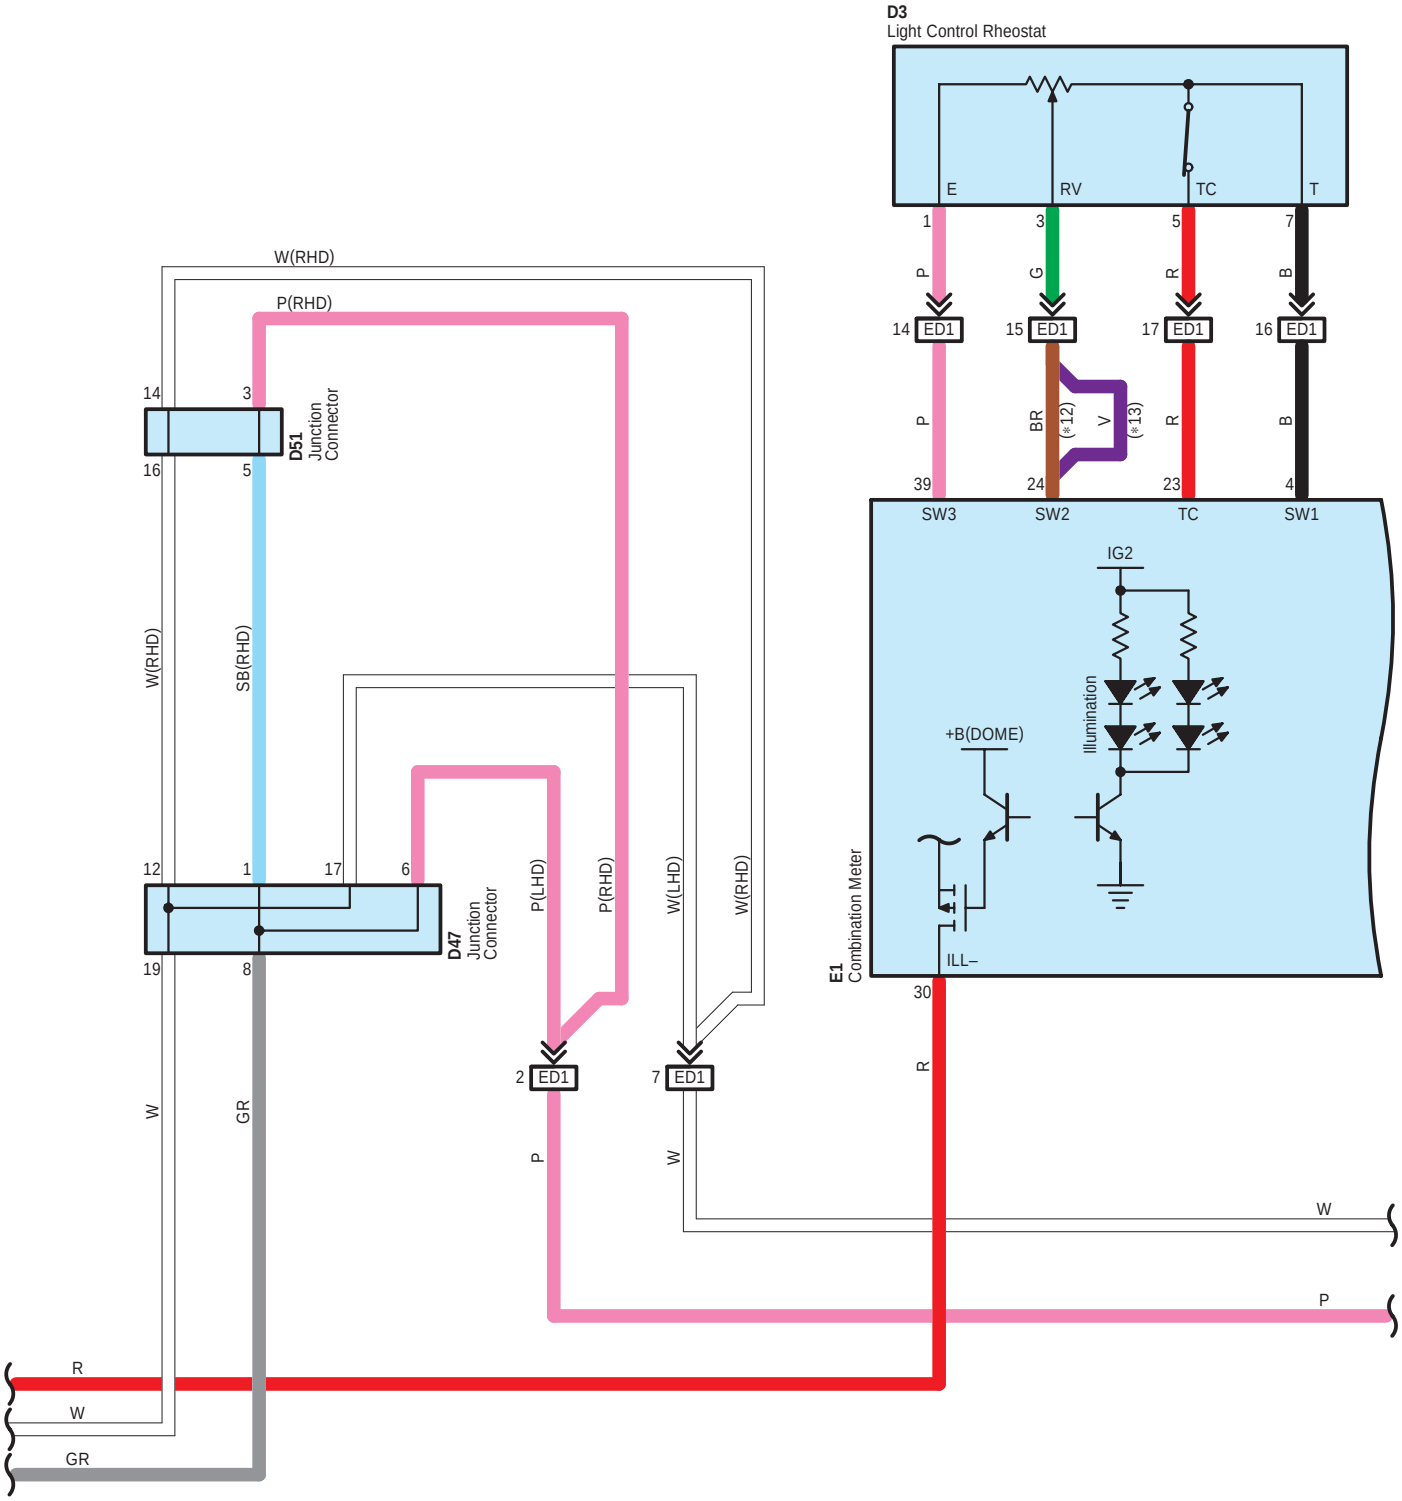


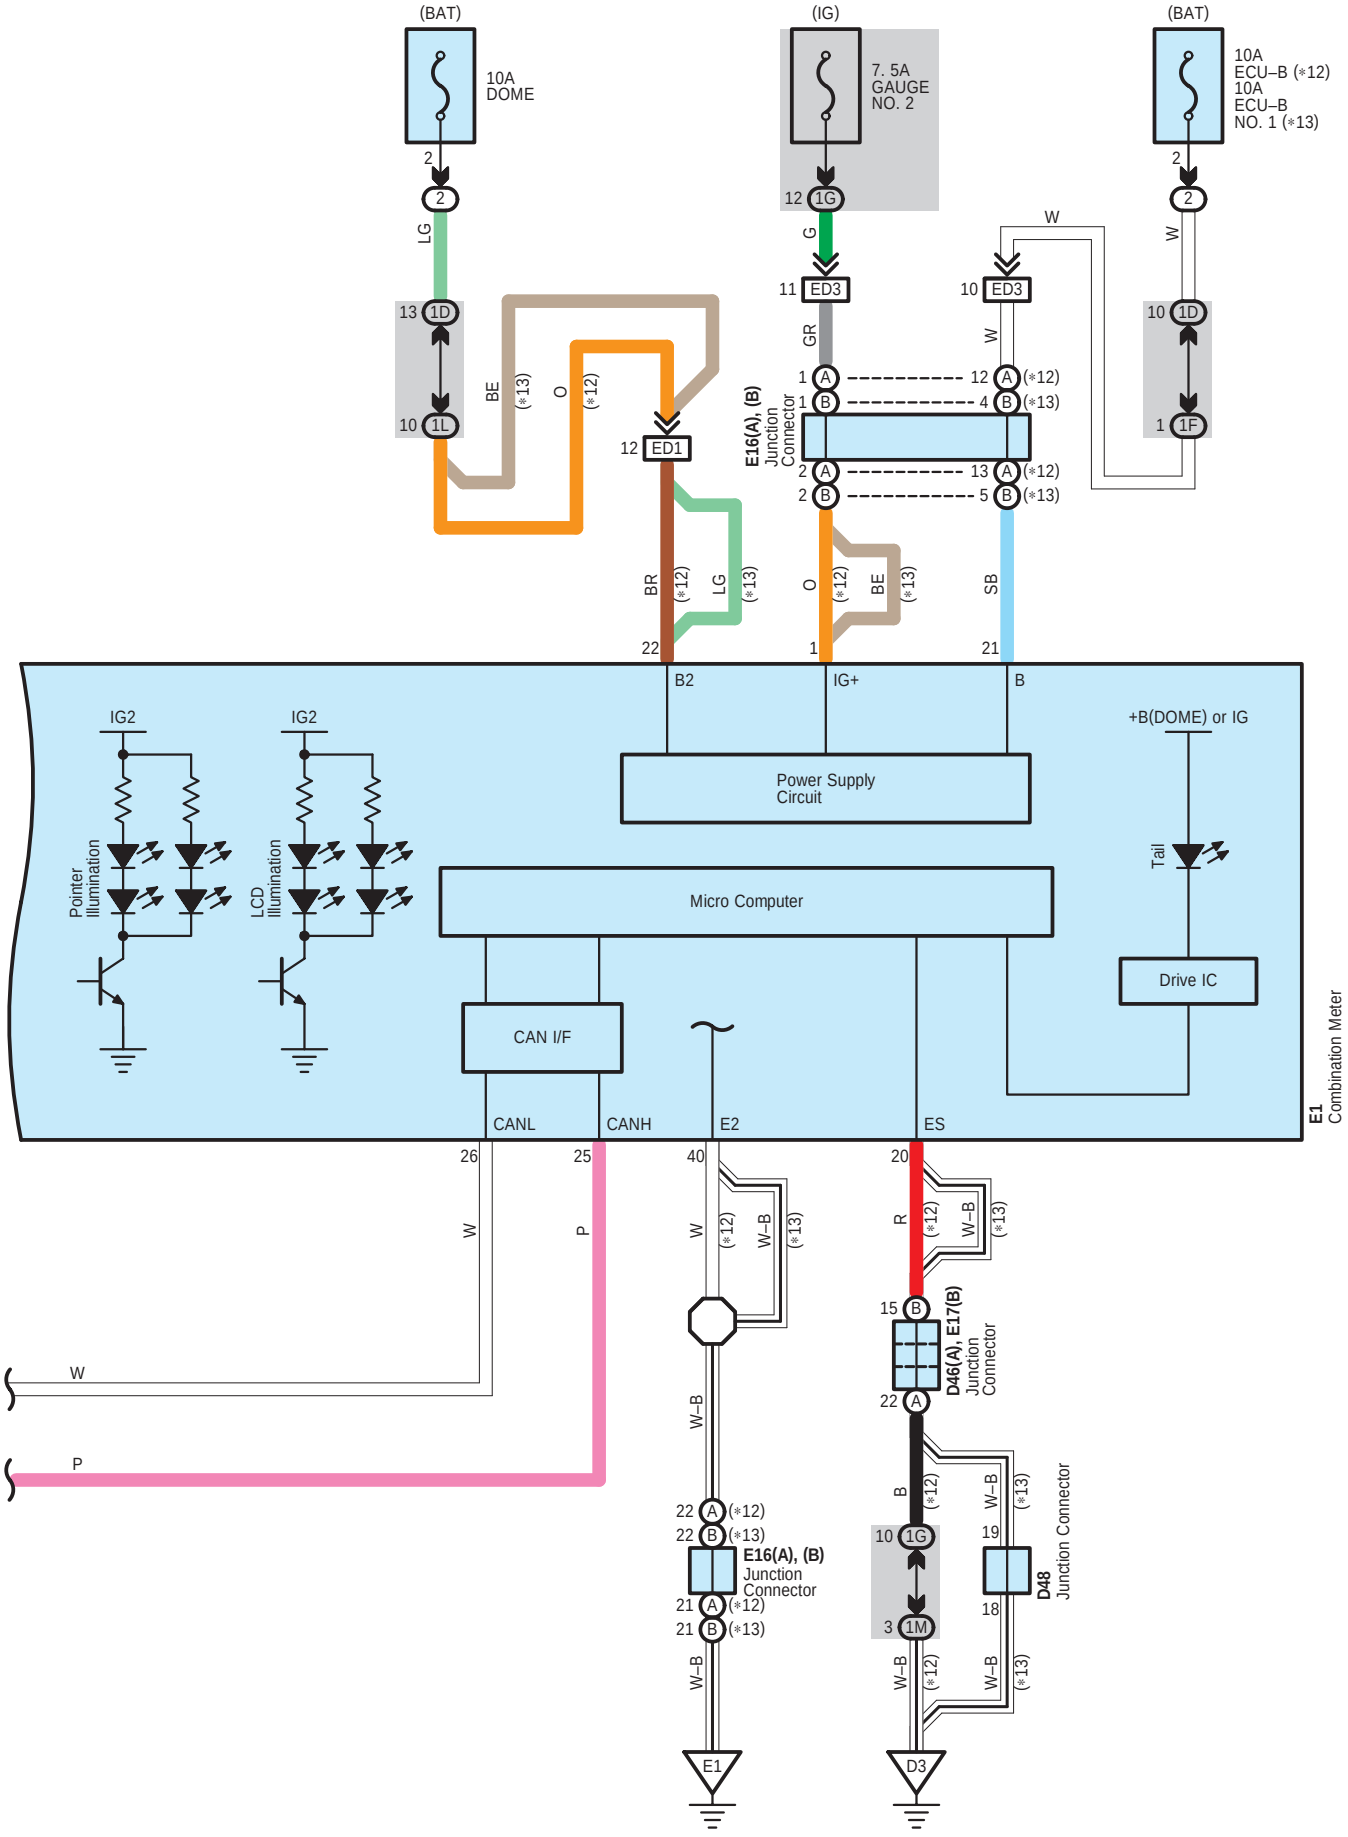
(BAT)
10A
DOME
(IG)
7. 5A
GAUGE
NO. 2
(BAT)
10A
ECU–B (*12)
10A
ECU–B
NO. 1 (*13)
LG
G
W
W
BE
(*13)
O
(*12)
BR
(*12)
LG
(*13)
O
(*12)
BE
(*13)
SB
GR
W
E16(A), (B)
Junction
Connector
B2
IG+
B
IG2
IG2
Pointer
Illumination
LCD
Illumination
Power Supply
Circuit
+B(DOME) or IG
Tail
Micro Computer
Drive IC
CAN I/F
CANL
CANH
E2
ES
E1
Combination Meter
W
P
W
W–B
R
B
W–B
D46(A), E17(B)
Junction
Connector
D48
Junction Connector
E1
D3

A 3
Black

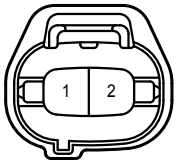

A 33
Black

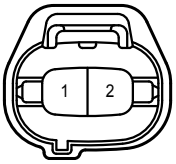


A 37
Gray




A 38
Gray




A 39
White

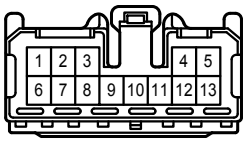


A 44
Blue

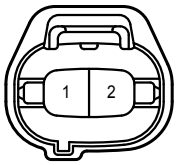


A 49
Blue

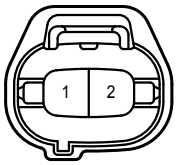


D 2
White

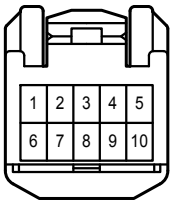


D 3
Gray

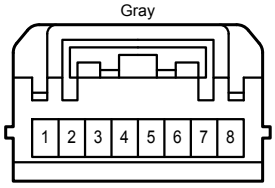


D 7
White

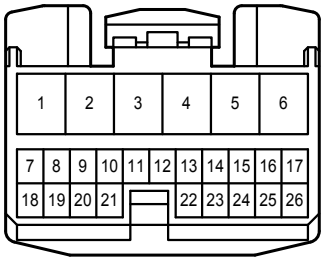


D 8
White

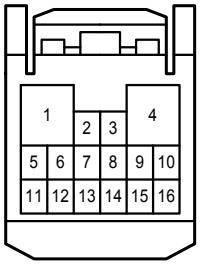


D 12
White

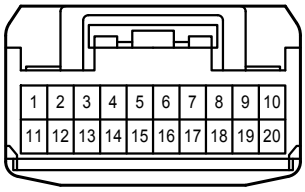


D 22
Black

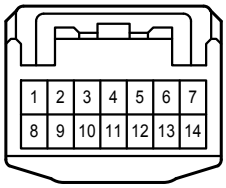


D 25
White

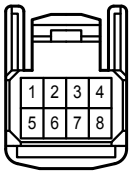


D 38
Blue

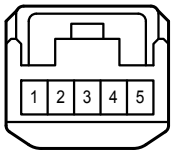


D 39
White

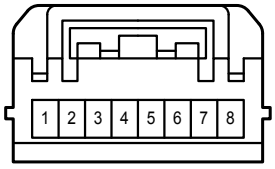


D 45
Black

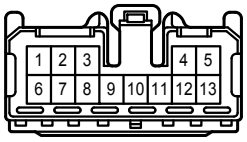


D 46
White

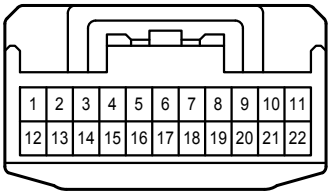


D 47
Gray

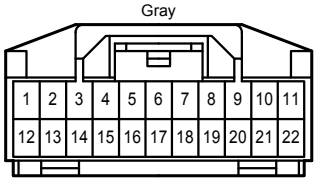

D 48
White

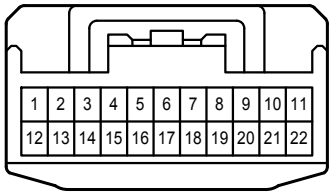


D 51
Gray

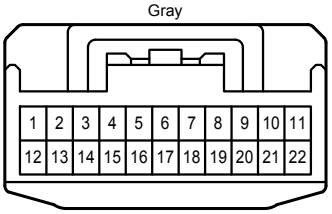


D 53
Black




D 54
Black

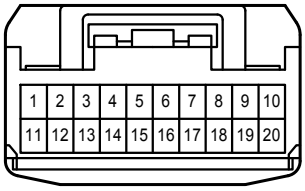


D 57
Black

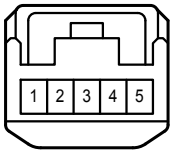


D 59
Black

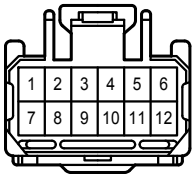


D 61
Black

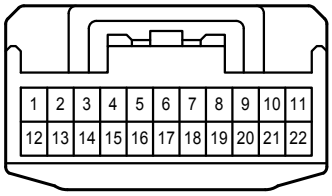


D 62
Blue

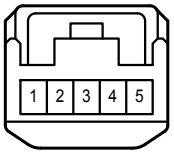


D 63
Black




E 1
White

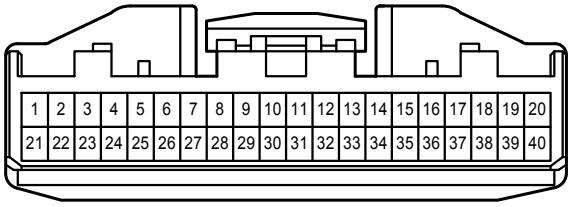

E 2
White

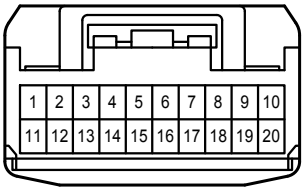


E 6
White

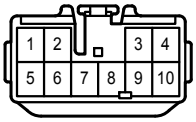


E 7
White



E 8
White

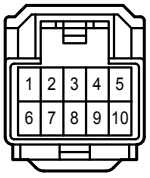


E 10
White




E 11
Black




E 13
Black

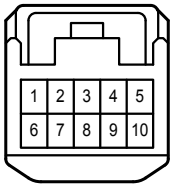


E 16
White

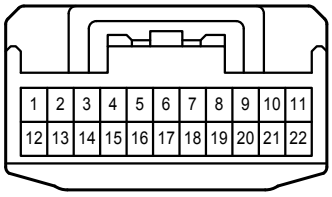


E 17
White

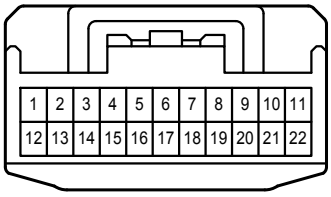


E 20
Black

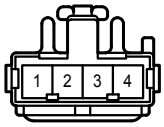


O 25
Black

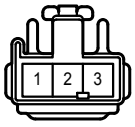


O 26
Black

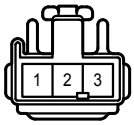


O 31
Black

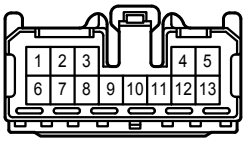


O 33
White

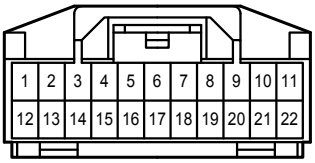


O 48
White

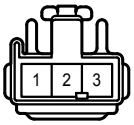


O 49
White

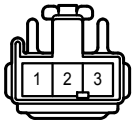


Q 1
Black

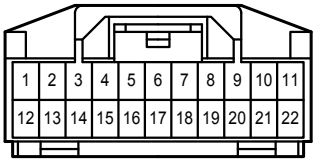

Q 13
White

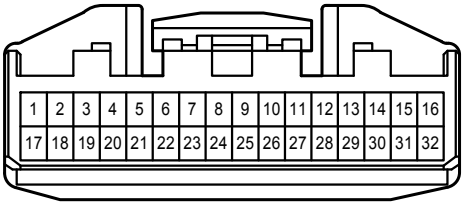


R 1
White

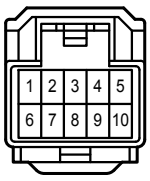


T 2
White




T 15
White

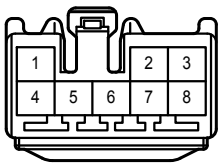


g 2
Gray

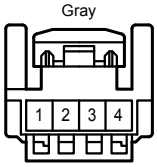


g 3
Black

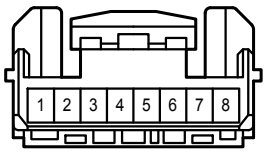


z 2
White

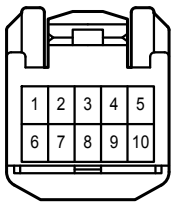


1A
White




1C
White

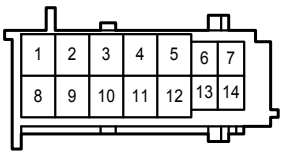


1D
White

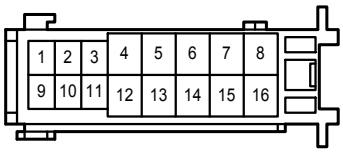


1F
White

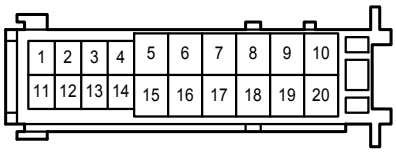


1G
White

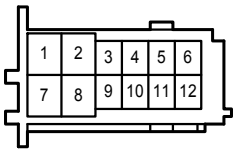


1L
White

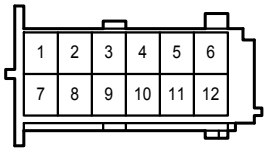


1M
White

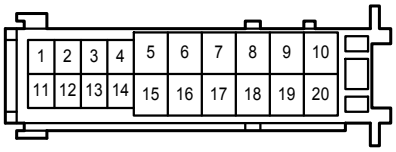


1P
White

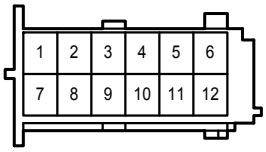


1R
White

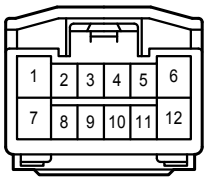


2F




Dg1
White

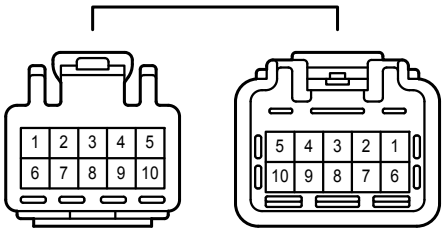


ED1
White

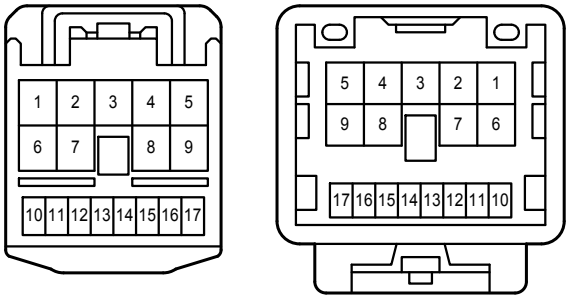


ED3
Black

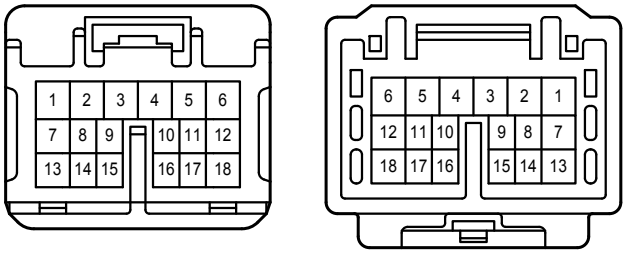


QE1
White

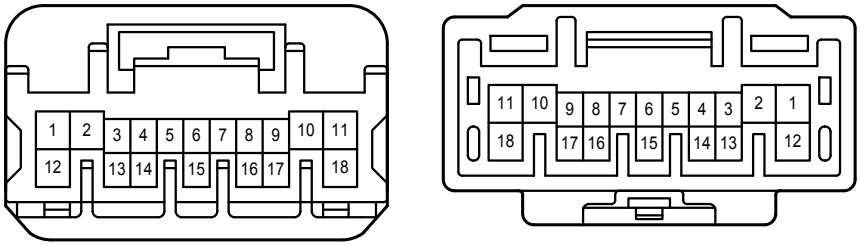


QE2
Blue

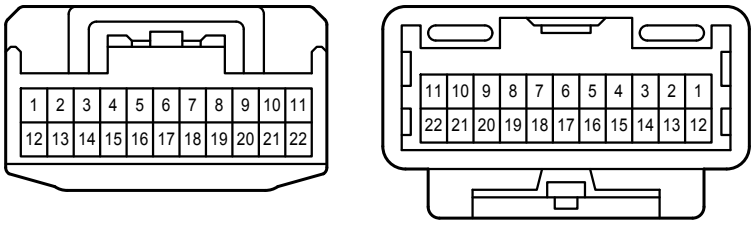


RD1
White

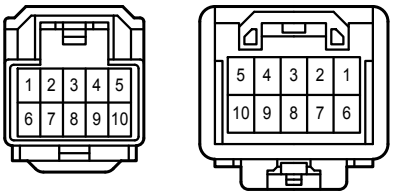

XO1
White

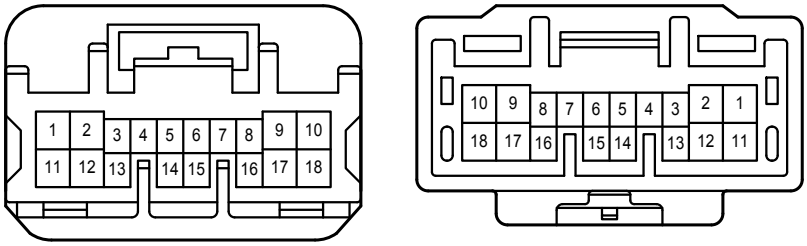

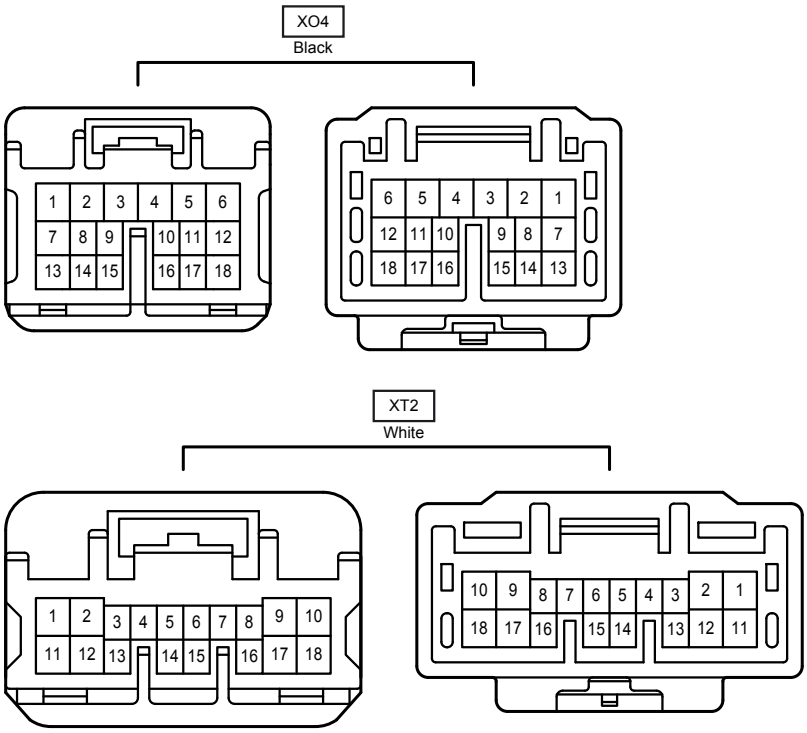
XO4
Black
1 2 3 4 5 6
7 8 9 10 11 12
13 14 15 16 17 18
6 5 4 3 2 1
12 11 10 9 8 7
18 17 16 15 14 13
XT2
White
1 2 3 4 5 6 7 8 9 10
11 12 13 14 15 16 17 18
10 9 8 7 6 5 4 3 2 1
18 17 16 15 14 13 12 11