
ROCKER PANEL (CUT-H)

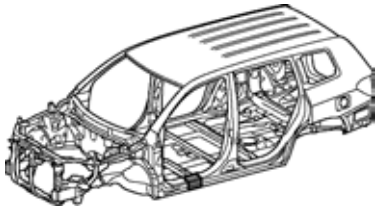


F28408A

Symbol meaning

	: Remove Weld Points : Cut and Join Location
REMOVAL	: Cut Location for Supply Parts
INSTALLATION	: Plug Weld : Butt Weld

F28408B

REMOVAL·INSTALLATION

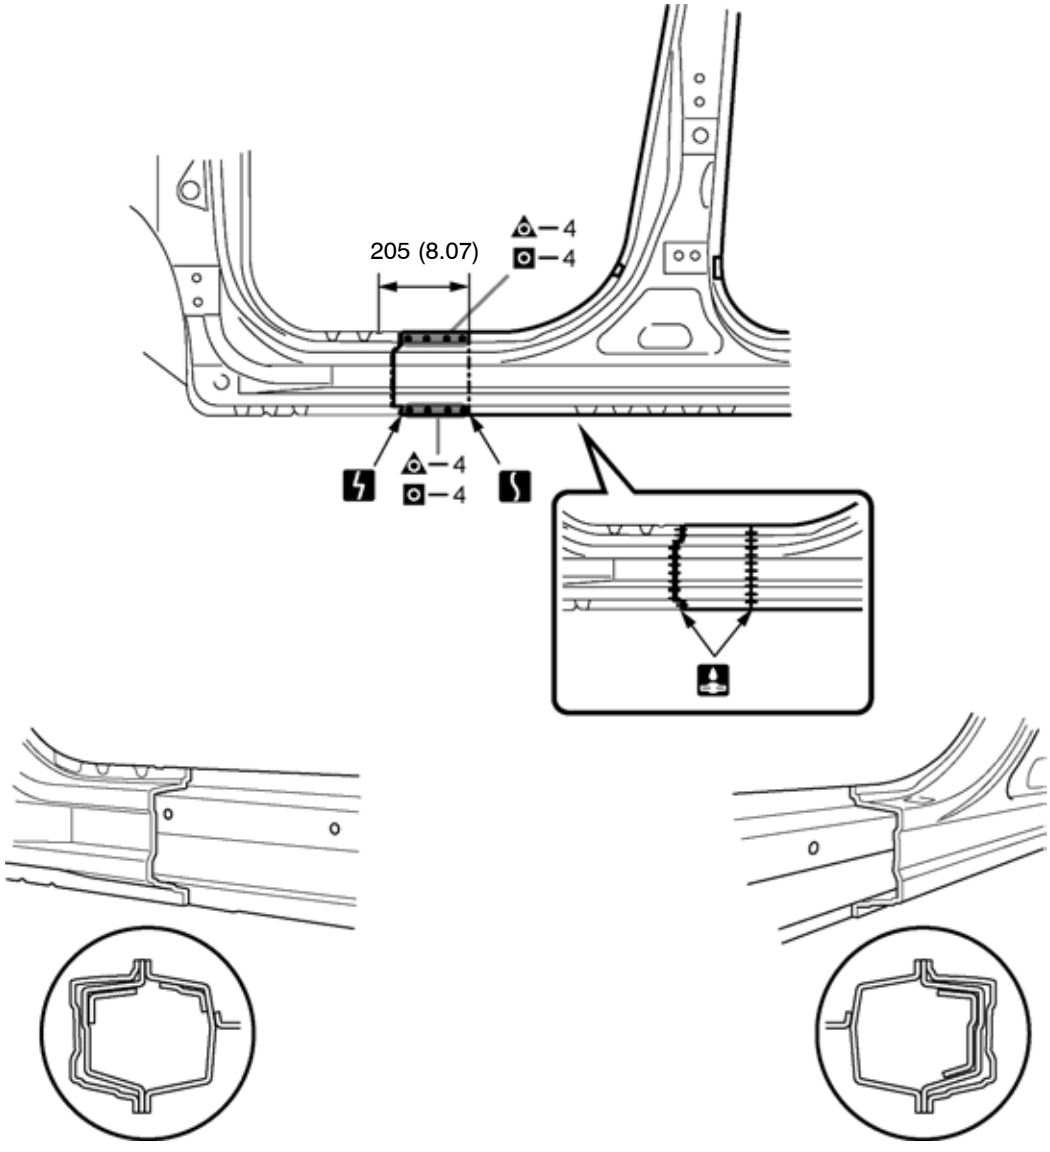

mm (in.)

F28408

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.