■ILLUMINATED ENTRY SYSTEM

1. General

The illuminated entry system has the following control functions:


Control	Outline	Lights that Operate
Actuation Area-linked*1	When the key enters any actuation area around the doors, the lights that operate turn on.	• Foot Lights • Engine Switch Illumination • Personal Lights • Room Lamps
Door Control Transmitter-linked	When any door is unlocked using the door control transmitter, the lights that operate turn on.	• Key Illumination • Engine Switch Illumination*1 • Personal Lights • Room Lamps • Foot Lights*1
Door Open-linked	When any door is opened, the lights that operate turn on.	• Key Illumination • Engine Switch Illumination*1 • Personal Lights • Room Lamps • Door Courtesy Light • Foot Lights*1
Door Close-linked	When all doors are closed, the lights that operate turn off*2.	
Door Lock-linked	When all doors are locked, the operation lights turn off*3.	
Ignition/Engine*1 Switch-linked	When the ignition/engine*1 switch is changed from OFF to ACC or ON, the lights that operate turn off*3.	
	When the power source switch is changed from IG-ON to OFF, the lights that operate turn on.	• Personal Lights • Room Lamps
	When the ignition/engine*1 switch is changed from OFF to ACC or ON, the lights that operate turn on.	Console Illumination
Battery Saving	When no changes occur in the condition of the doors for 20 minutes, these lights turn off.	• Key Illumination • Engine Switch Illumination*1 • Personal Lights • Room Lamps • Door Courtesy Light • Foot Lights*1

*1: Limited Grade only (Models with Smart Key System)

*2: Illuminates for approximately 15 seconds, fades out over approximately 3 seconds and goes off. Illumination time can be selected from 15, 30, and 7.5 seconds using the customize function. For details, see page BE-17.

*3: Stops the illumination, starts to fade out immediately (fades out over approximately 3 seconds) and goes off.

2. System Diagram

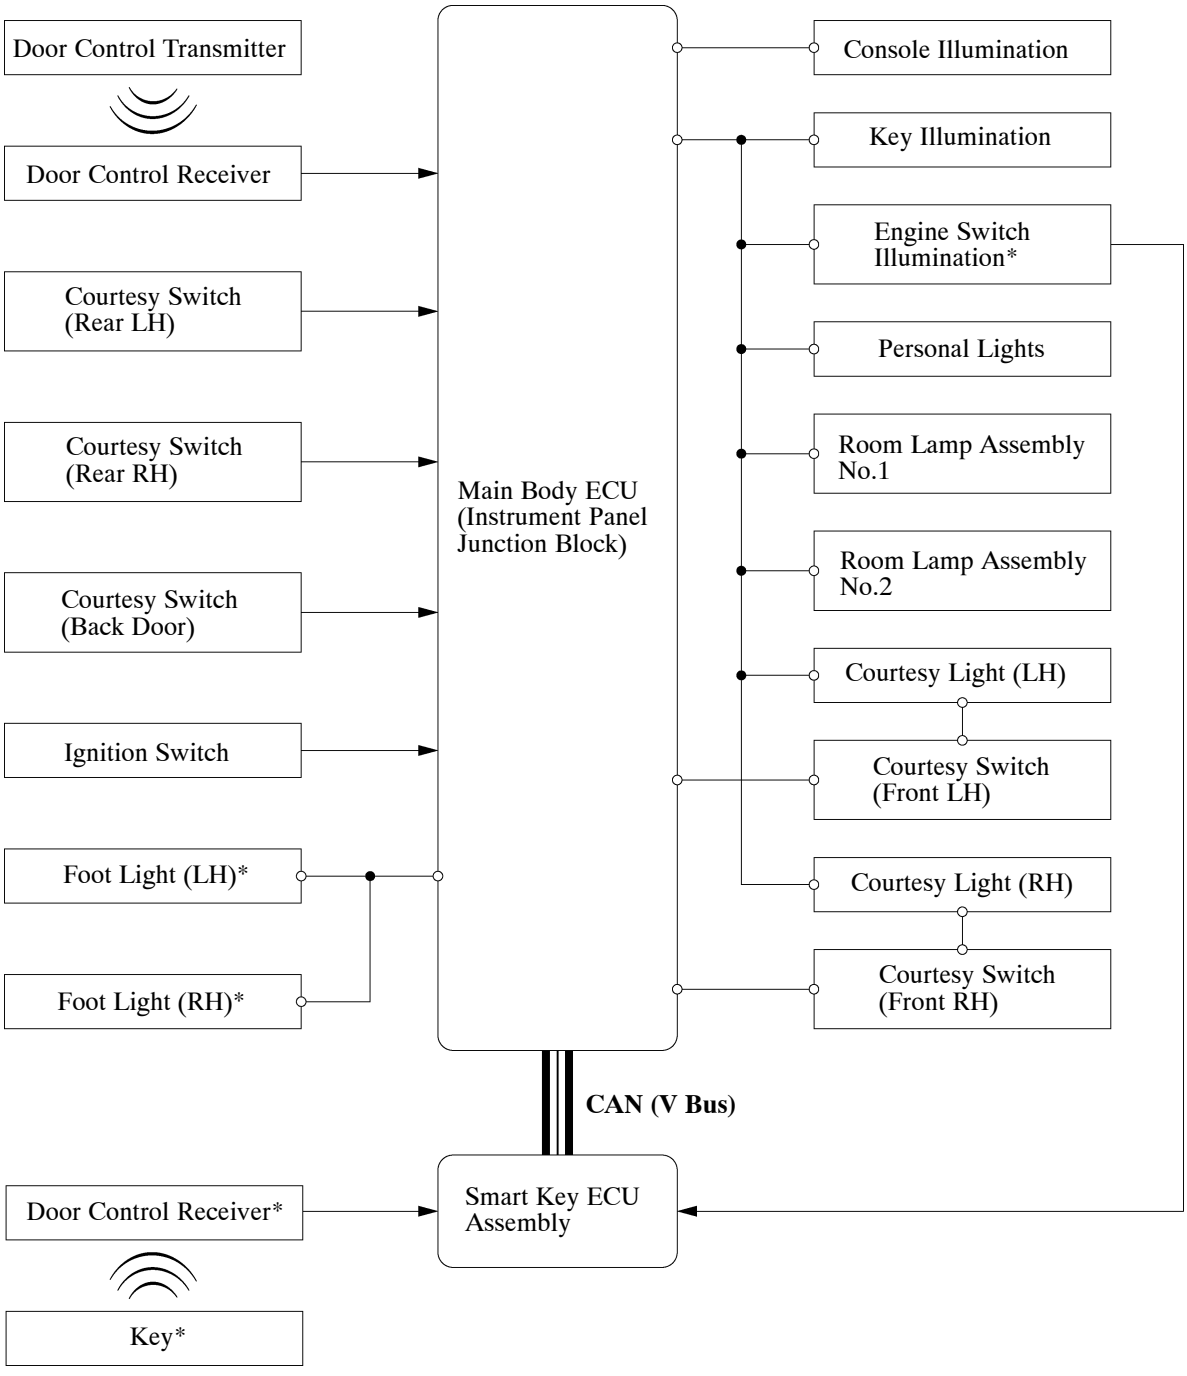


*: Limited Grade only (Models with Smart Key System)

06J0BE47C


BE

3. Layout of Main Components


Roof Console Box Assembly

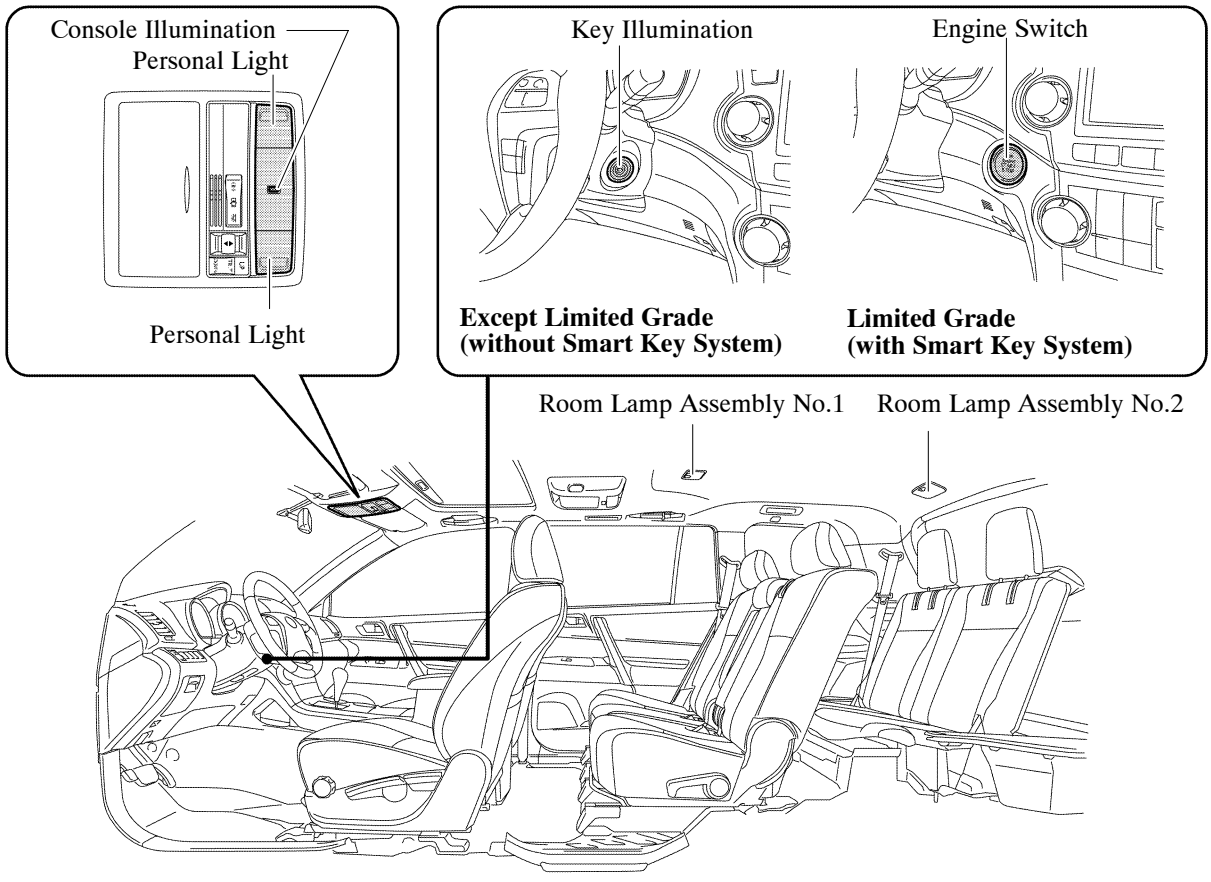

06J0BE21Z

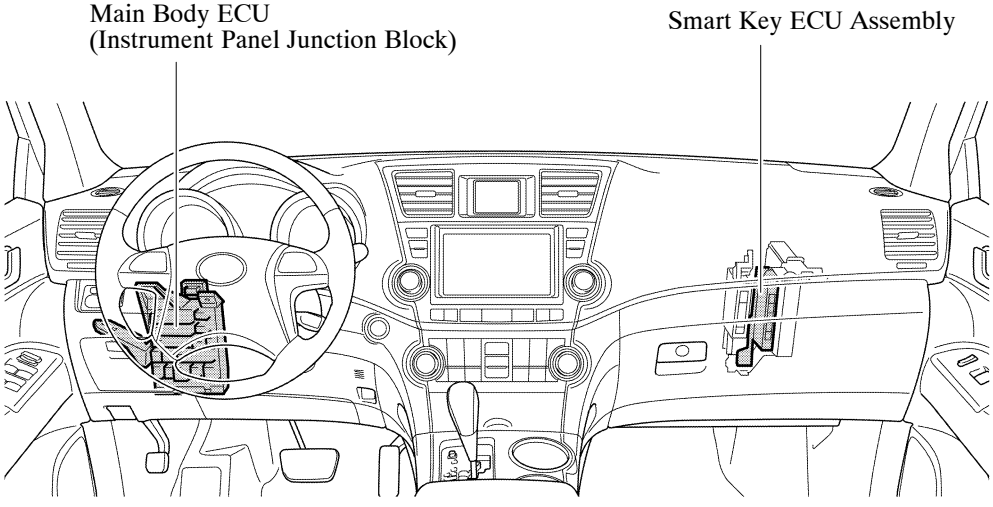

06J0BE48Z

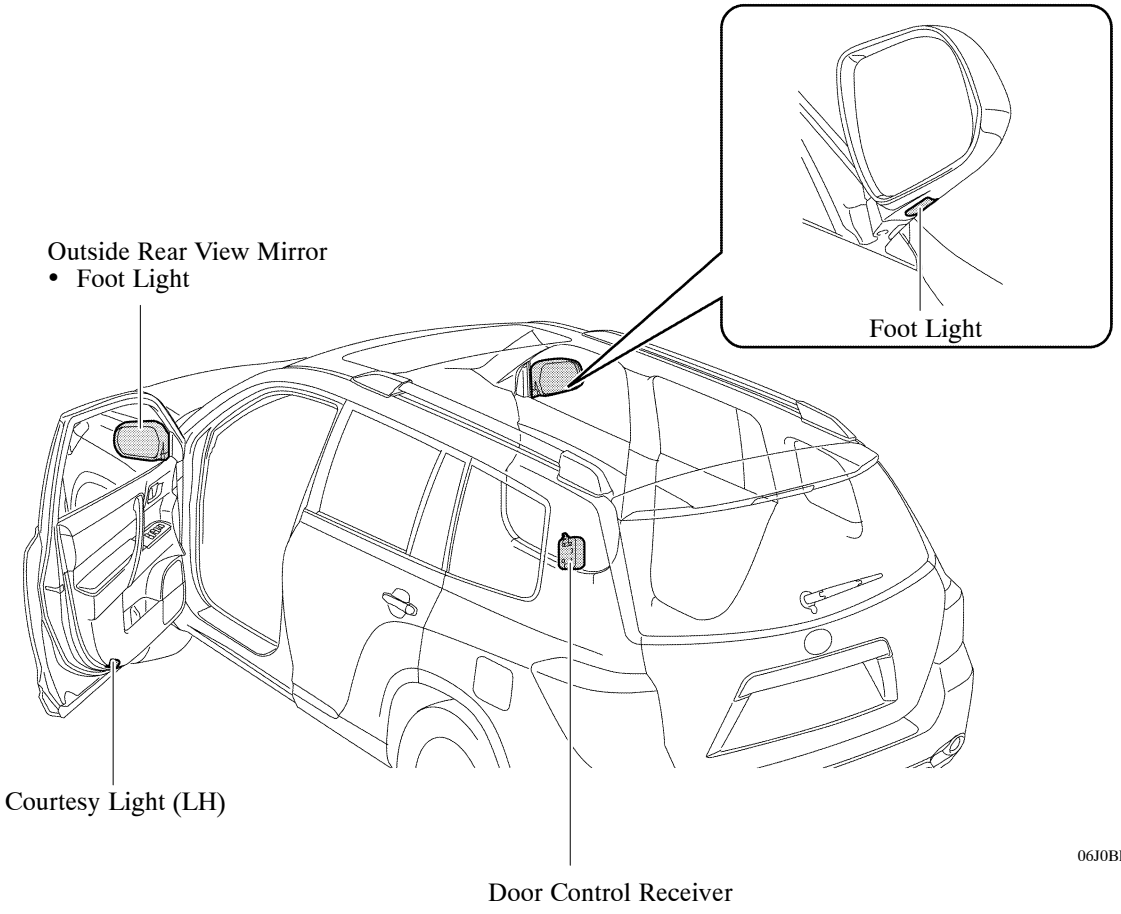
Outside Rear View Mirror
• Foot Light
Foot Light
Courtesy Light (LH)
Door Control Receiver
06J0BE22Z