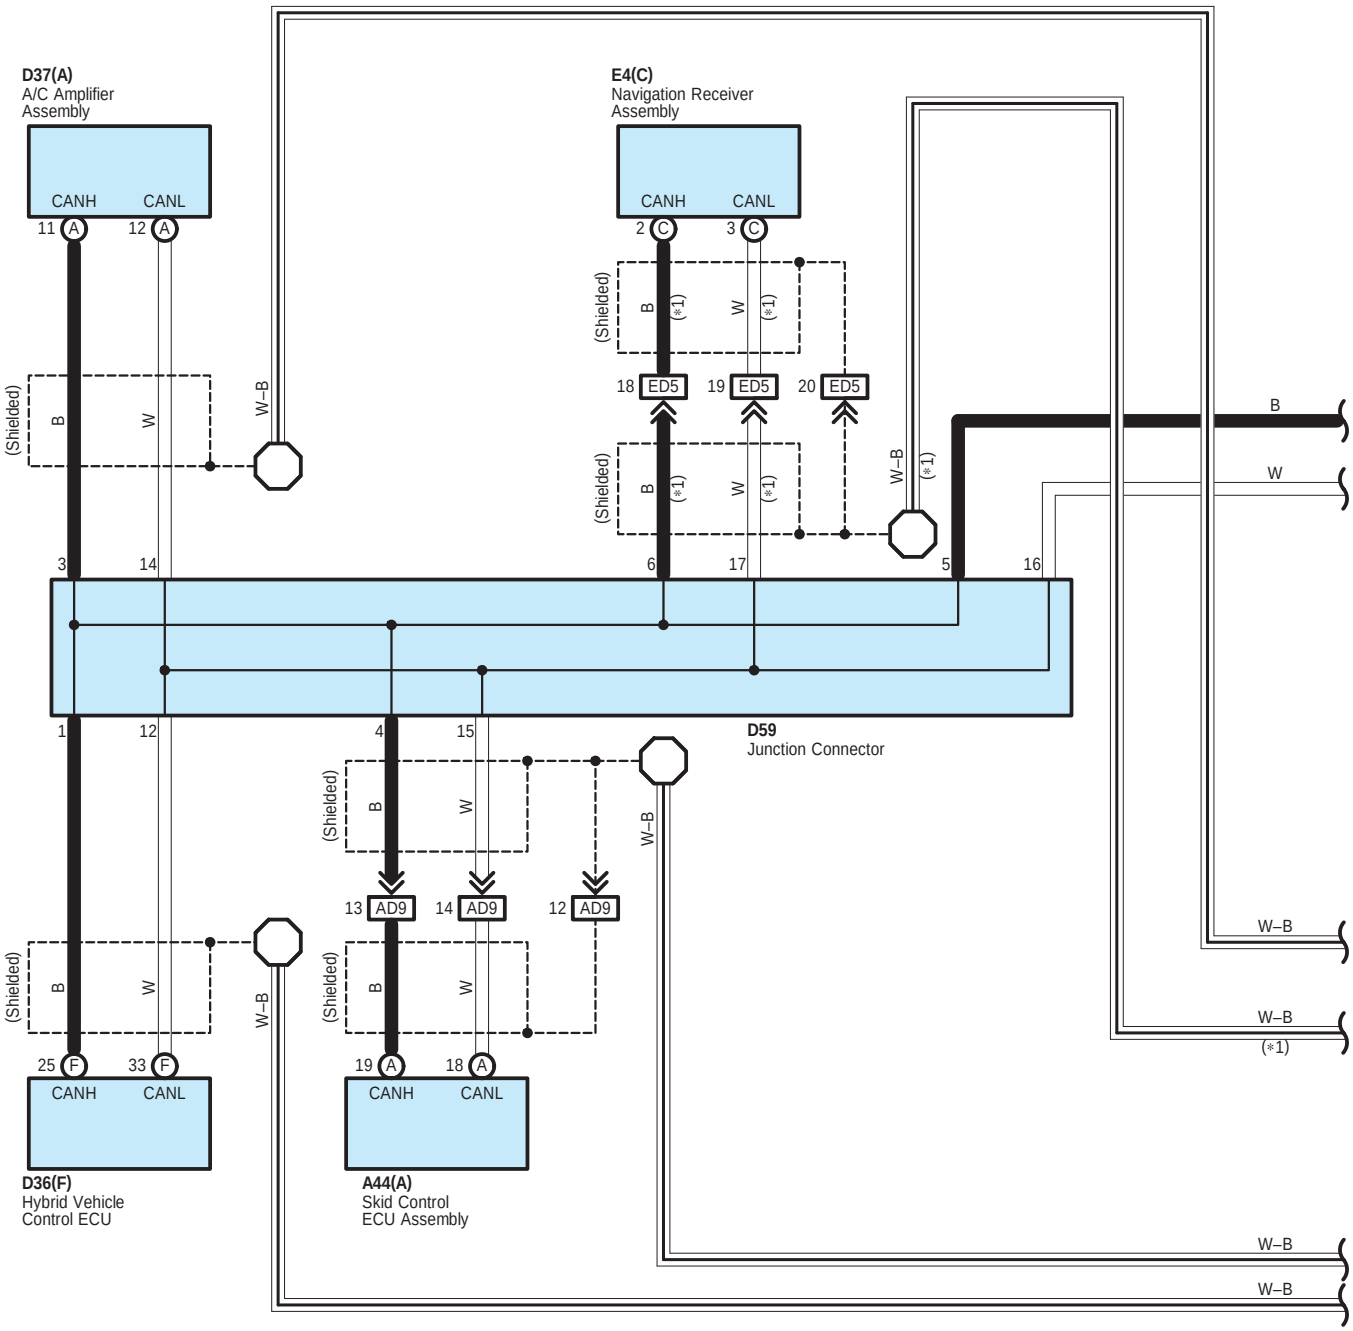
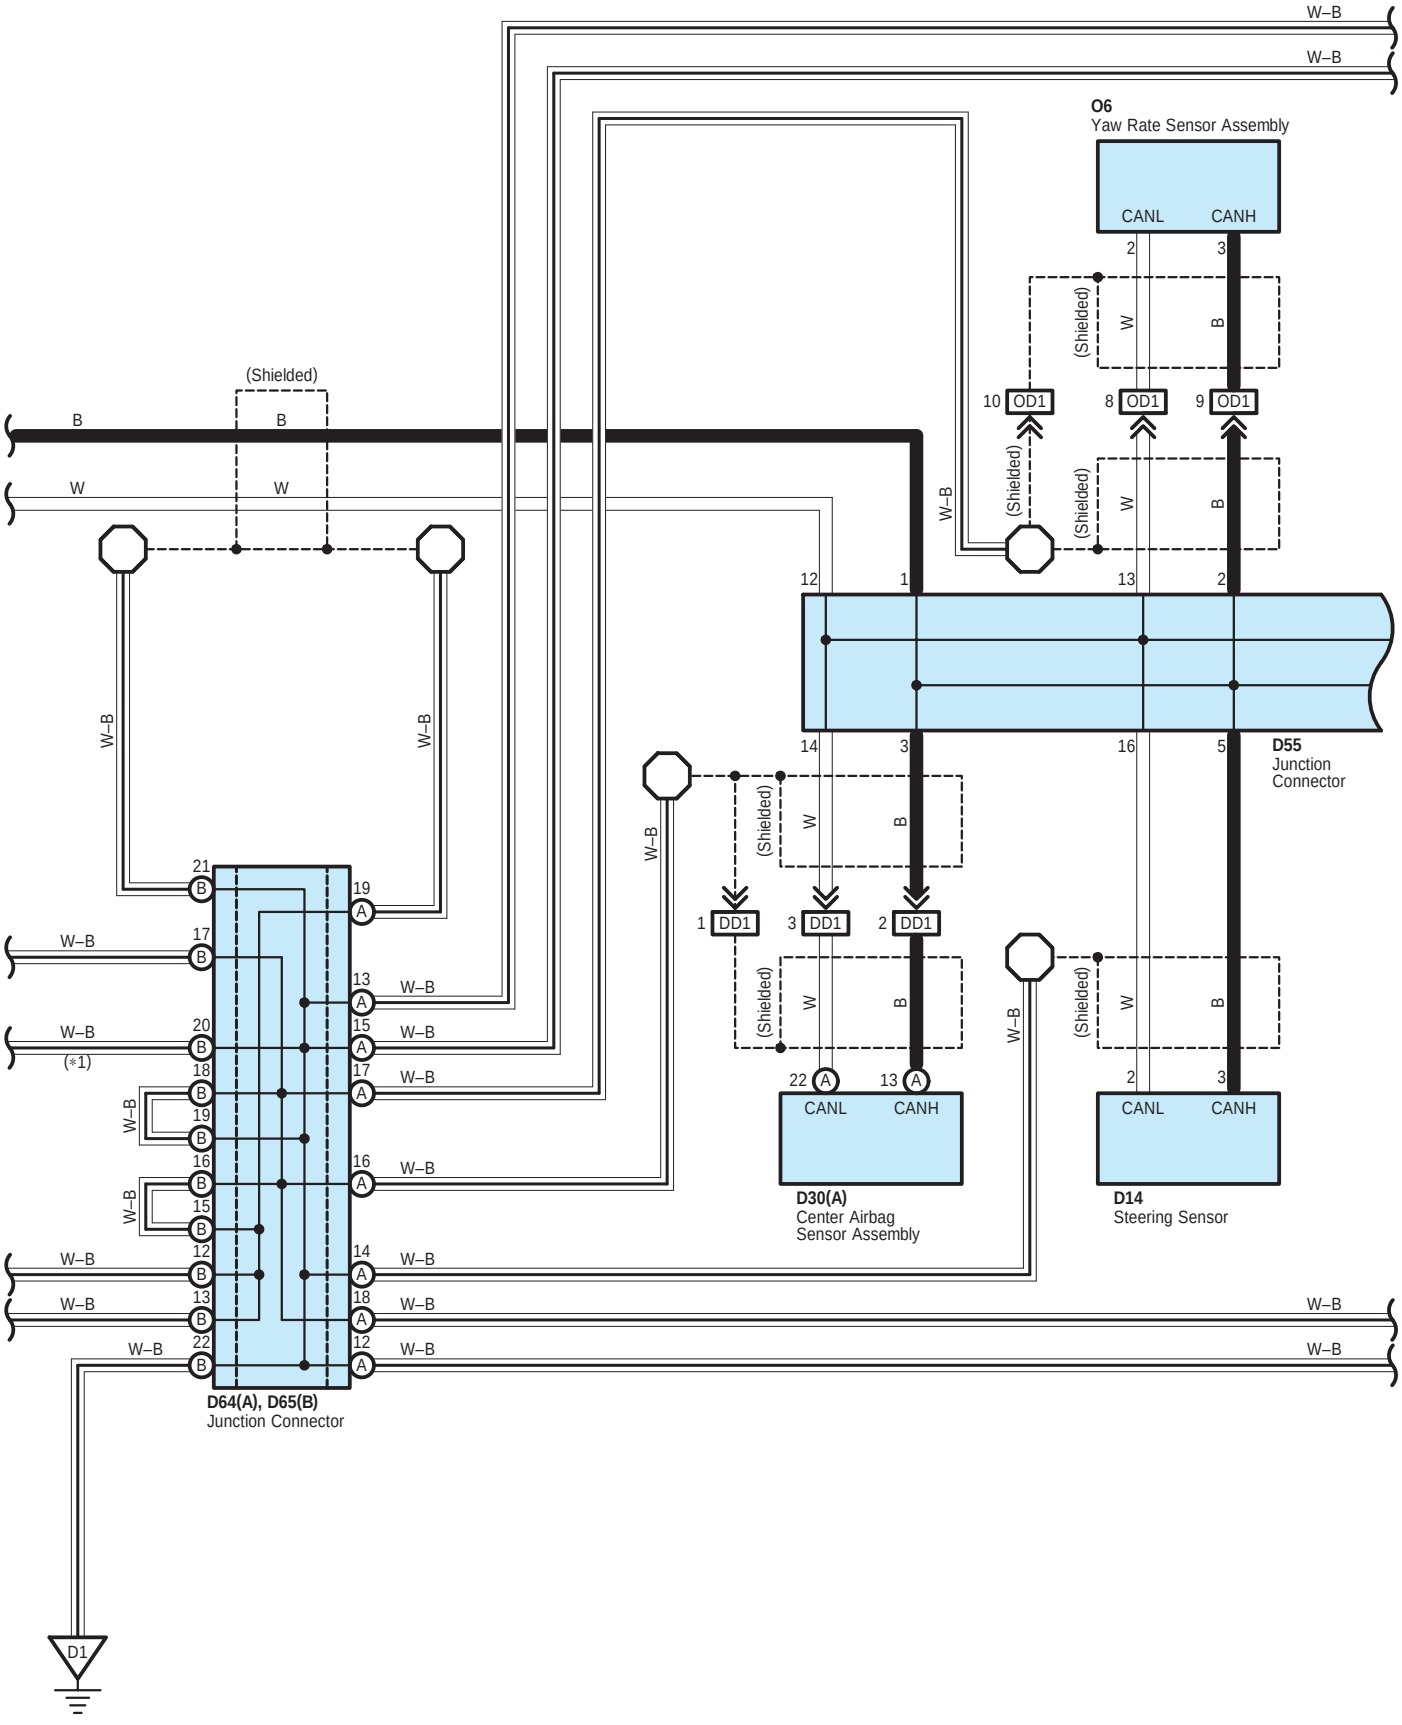
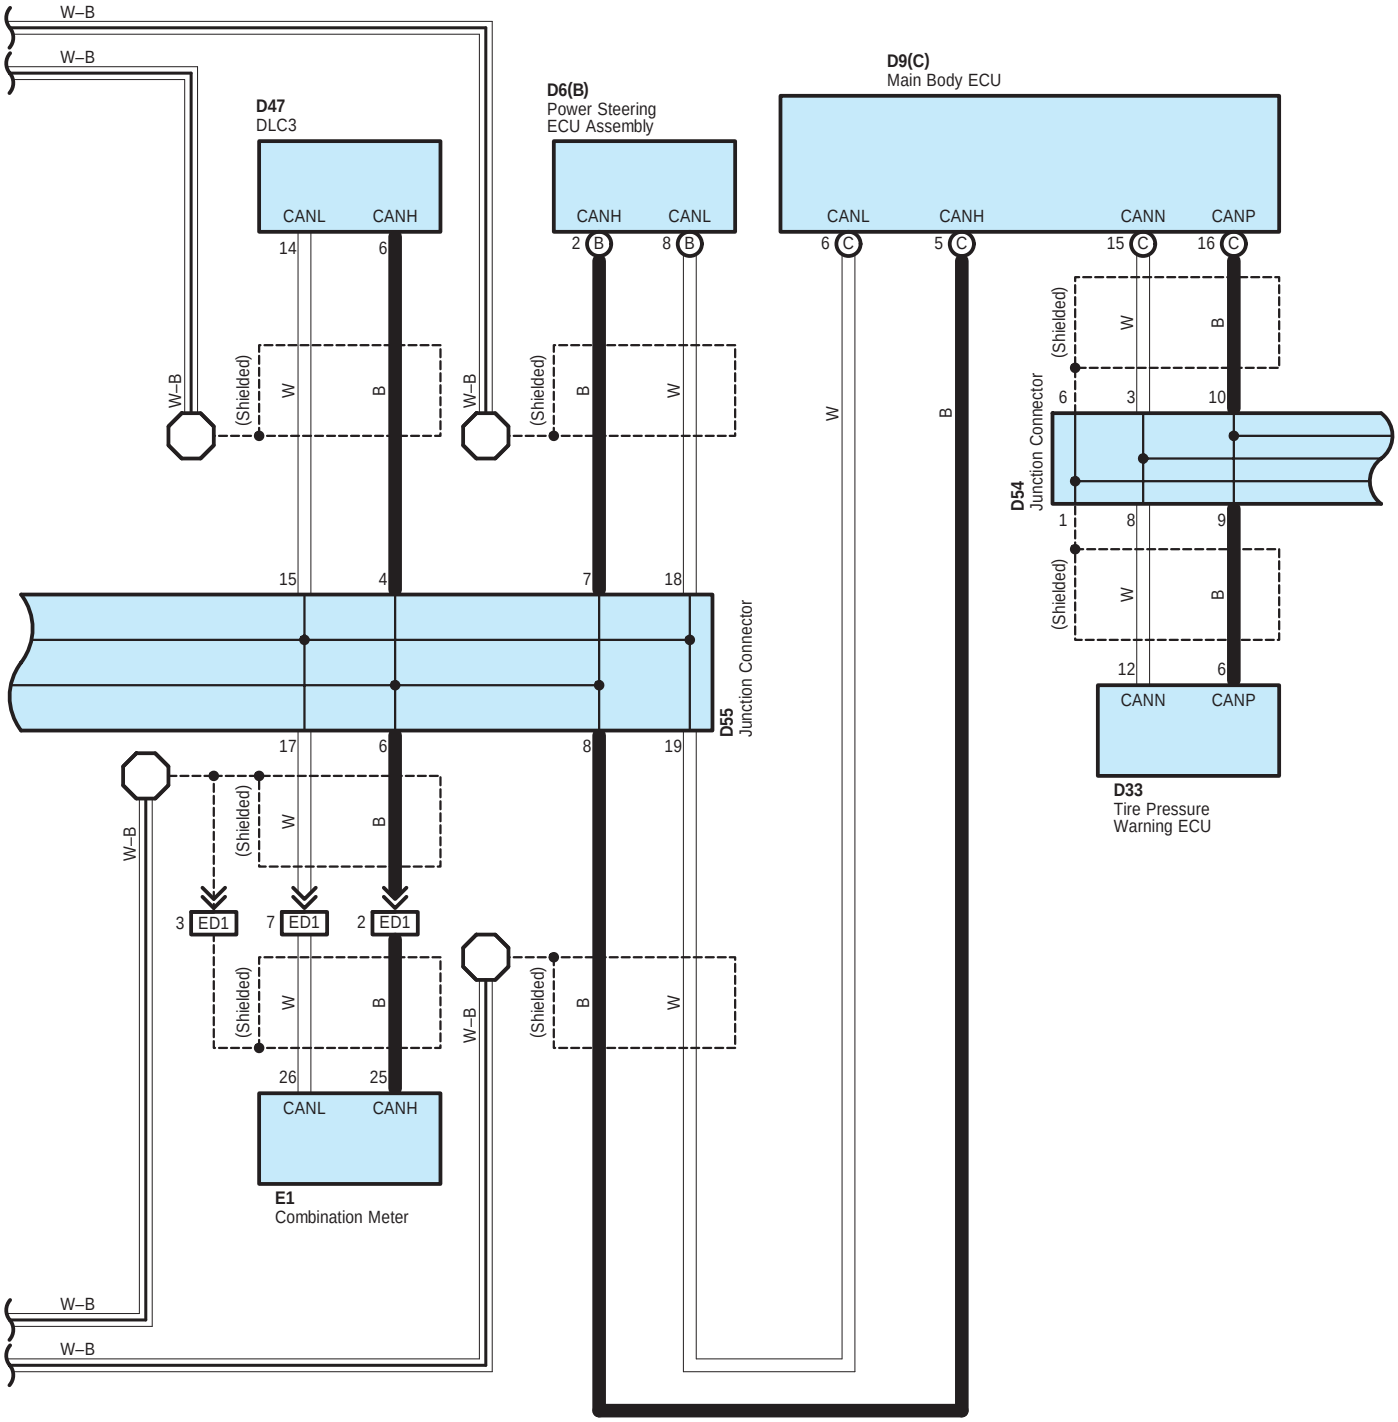
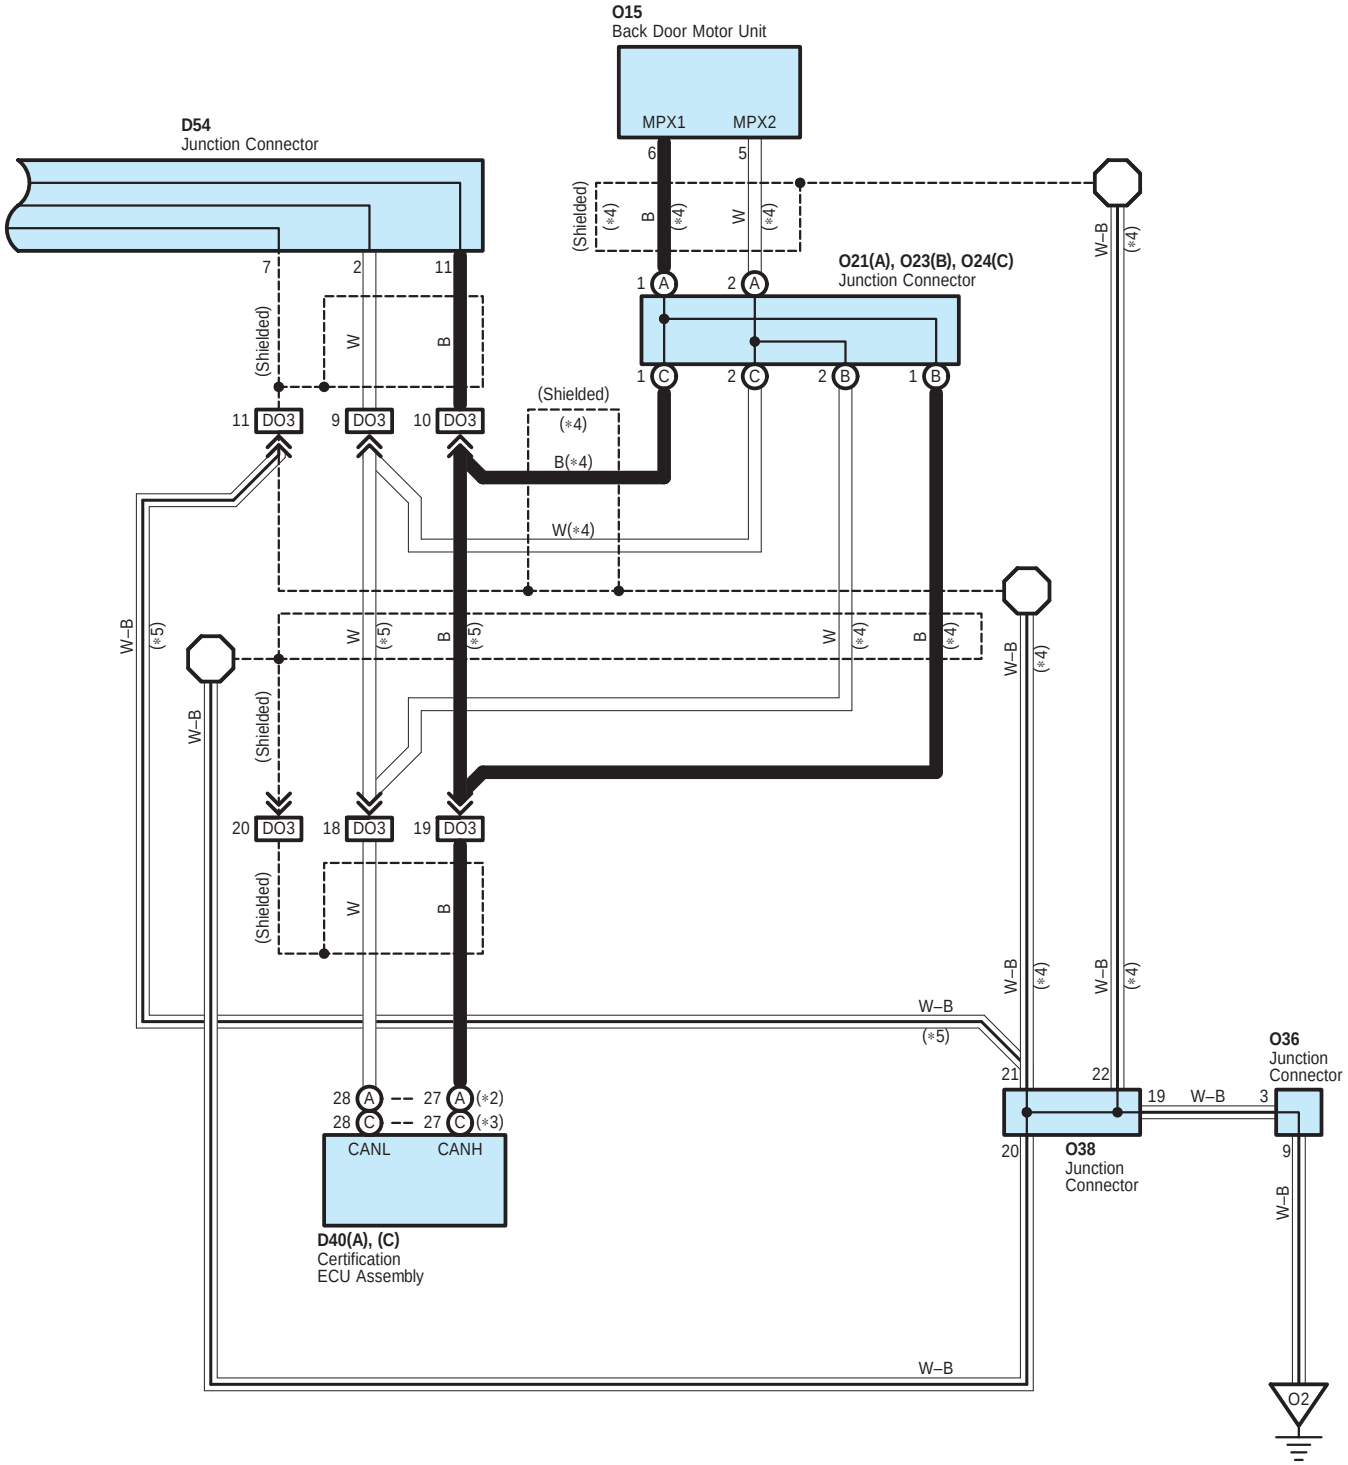
∗ 1 : w/ Navigation System



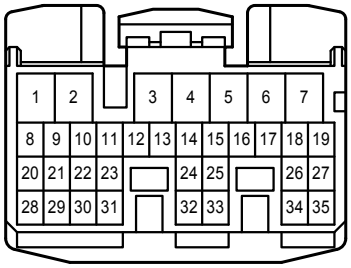

W–B
W–B
O6
Yaw Rate Sensor Assembly
CANL
CANH
2
3
(Shielded)
W
B
10 OD1
8 OD1
9 OD1
(Shielded)
(Shielded)
W–B
12
1
13
2
D55
Junction
Connector
14
3
16
5
(Shielded)
1 DD1
3 DD1
2 DD1
22 A
13 A
D30(A)
Center Airbag
Sensor Assembly
D14
Steering Sensor
(Shielded)
B
W
W–B
(*1)
21
19
17
13
20
15
18
17
19
16
16
15
12
14
13
18
22
12
D64(A), D65(B)
Junction Connector
D1


W–B
W–B
D47
DLC3
CANL
CANH
14
6
(Shielded)
W
B
W–B
D6(B)
Power Steering
ECU Assembly
CANH
CANL
2 B
8 B
(Shielded)
B
W
W–B
D9(C)
Main Body ECU
CANL
CANH
CANN
CANP
6 C
5 C
15 C
16 C
W
B
(Shielded)
W
B
D54
Junction Connector
6
3
10
1
8
9
(Shielded)
W
B
12
6
CANN
CANP
D33
Tire Pressure
Warning ECU
15
4
7
18
D55
Junction Connector
17
6
8
19
W–B
(Shielded)
W
B
3 ED1
7 ED1
2 ED1
(Shielded)
W
B
W–B
(Shielded)
B
W
26
25
CANL
CANH
E1
Combination Meter
W–B
W–B

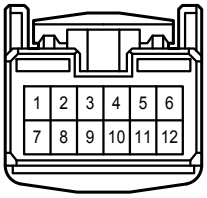
∗ 2 : w/ Security Alarm
∗ 3 : w/o Security Alarm
∗ 4 : w/ Power Back Door
∗ 5 : w/o Power Back Door



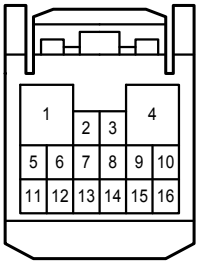
A 44
Black



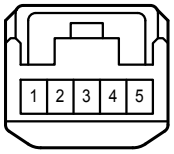

D 6
White



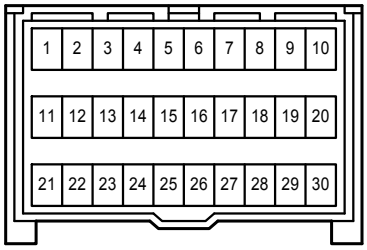

D 9
White




D 14
Black



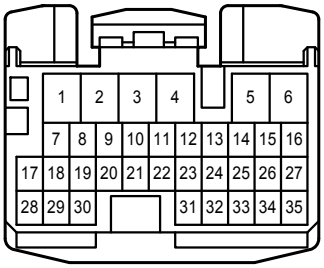

D 30
Yellow



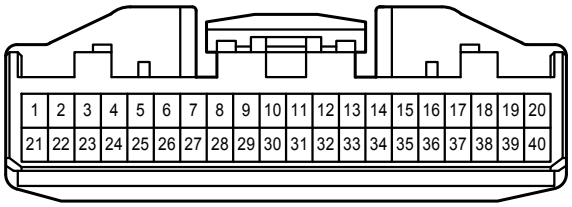

D 33
Black



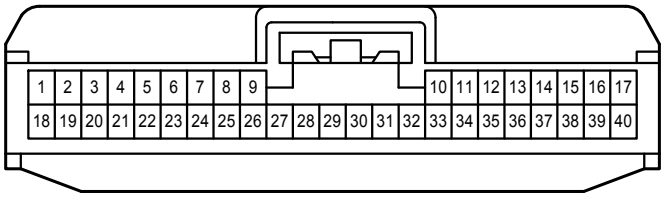

D 36
White




D 37
White

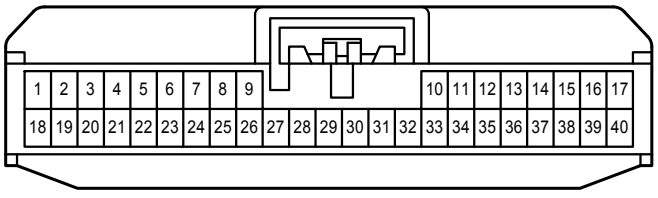



D 40
White



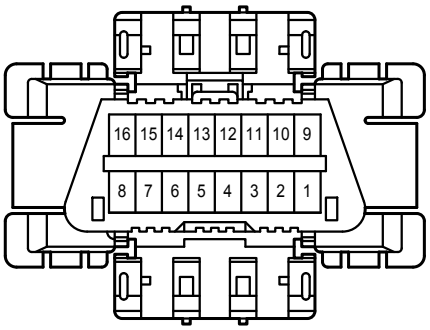

(w/o Security Alarm)

D 40
White

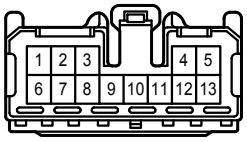



(w/ Security Alarm)

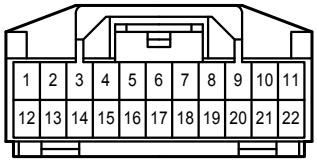
D 47
White



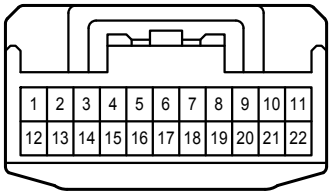
D 54
Blue



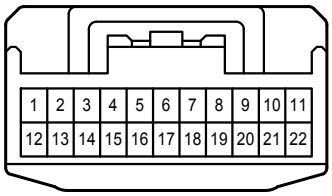

D 55
Gray



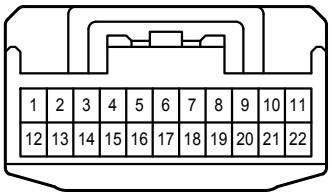

D 59
Gray



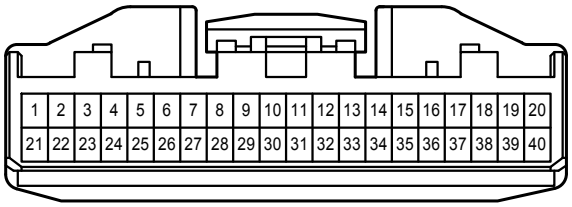

D 64
White



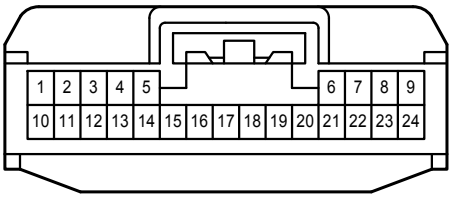

D 65
White



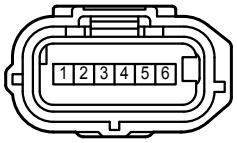

E 1
White



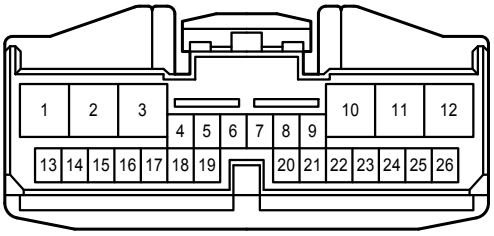

E 4
White





O 6
Black





O 15
White





O 21
Black



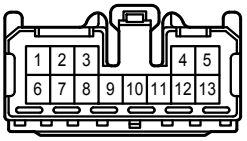

O 23
White



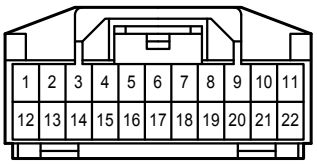

O 24
Gray



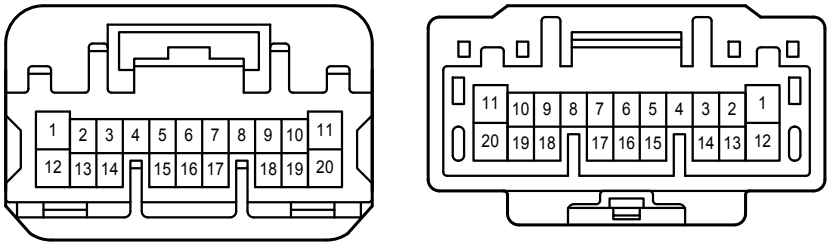

O 36
Black



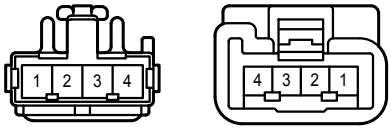

O 38
White



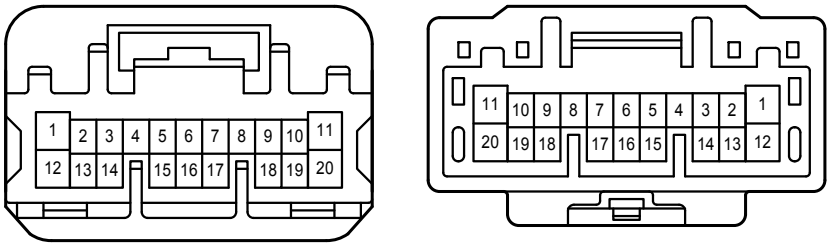

AD9
Gray



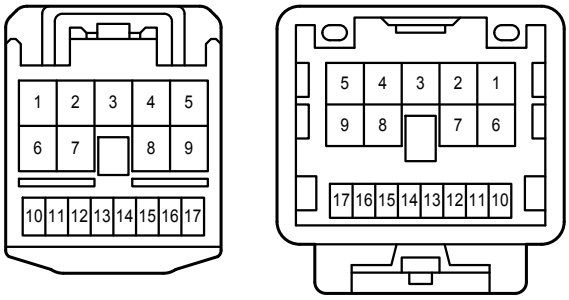
DD1
White



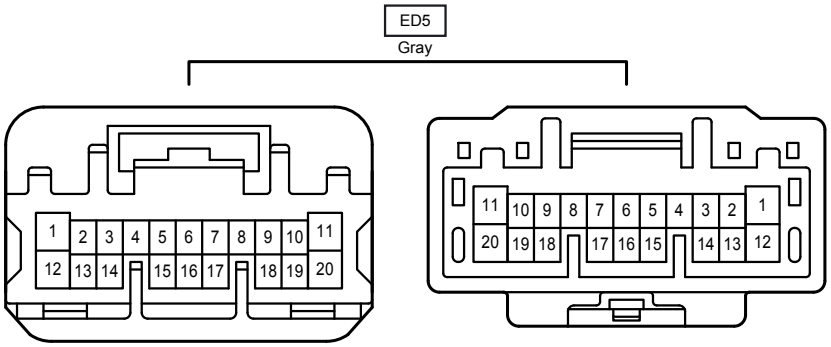

DO3
White




ED1
White




ED5
Gray




OD1
White

