
■ACTUATION AREA

The special functions of the smart key system only work when the key is in the actuation area formed by the six oscillators.

- The indoor electrical key oscillator (front), indoor electrical key oscillator (center), and indoor electrical key oscillator (rear) form the interior actuation area.
- The door electrical key oscillator LH, door electrical key oscillator RH, and outside electrical key oscillator form the exterior actuation area.

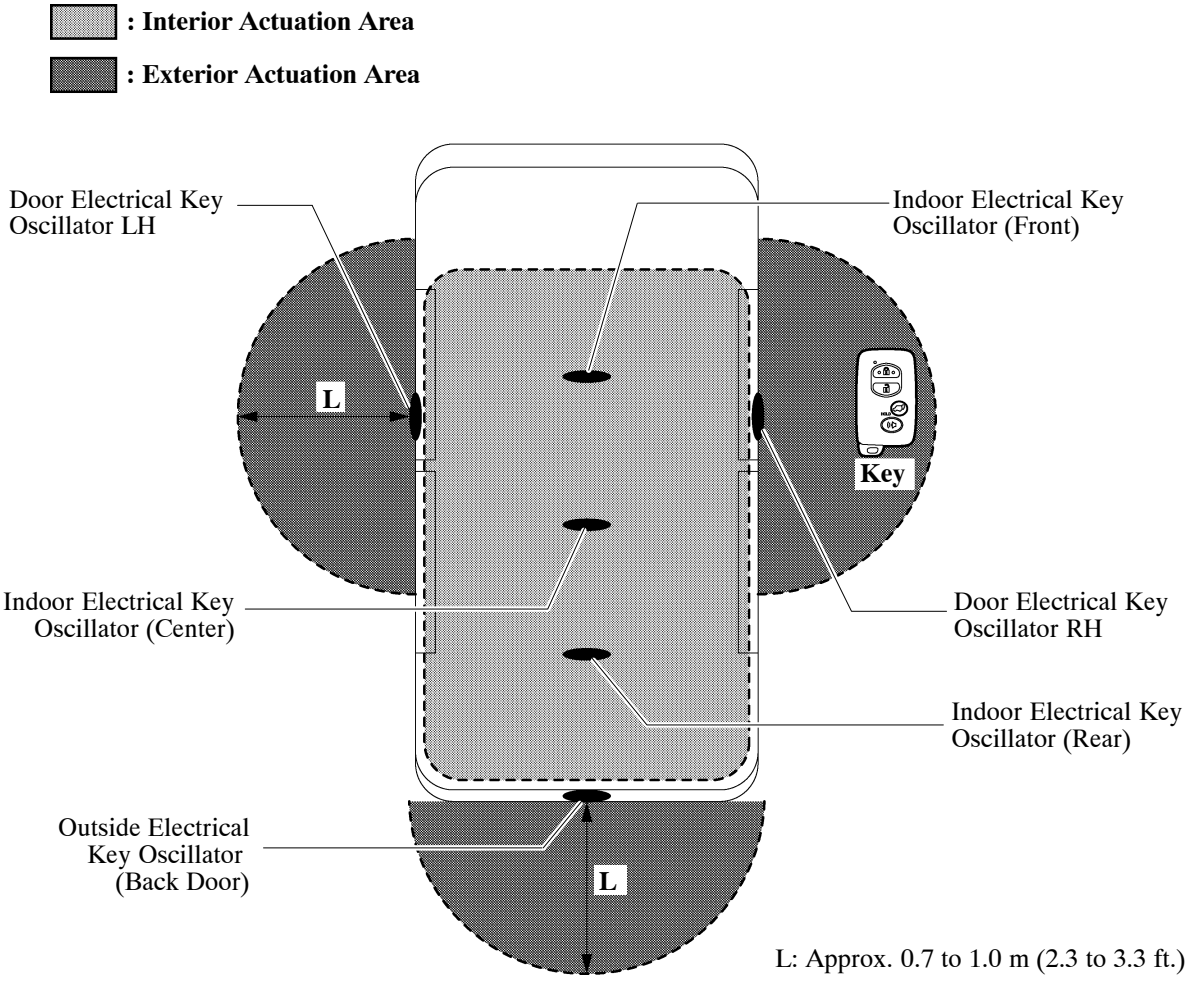

BE

Actuation Area		Details
Interior		The interior actuation area of the indoor electrical key oscillators (front, center, rear) is formed when the driver door is opened or closed, when the power switch is pressed, when a warning is activated, or when the lock switch is ON.
Exterior		The exterior actuation area formed by the door electrical key oscillators (LH, RH) and outside electrical key oscillator (back door) is approximately 0.7 to 1.0 m (2.3 to 3.3 ft.) from the outside handle of the front doors, or the center of the rear bumper.
	Front Door Area	The exterior actuation area of the door electrical key oscillators (LH, RH) is formed by transmitting a request signal every 0.25 seconds while the power switch is OFF and each door is locked. In this way the proximity of a key can be detected. When locking the door using the lock switch on the outer door handle, the actuation area is formed when the lock switch is pressed.
	Back Door Area	• The exterior actuation area of the outside electrical key oscillator (back door) is formed when the back door opener switch is ON. • The exterior actuation area of the outside electrical key oscillator (back door) is formed when the glass hatch opener switch is ON.