



Engine Control (2GR-FE)

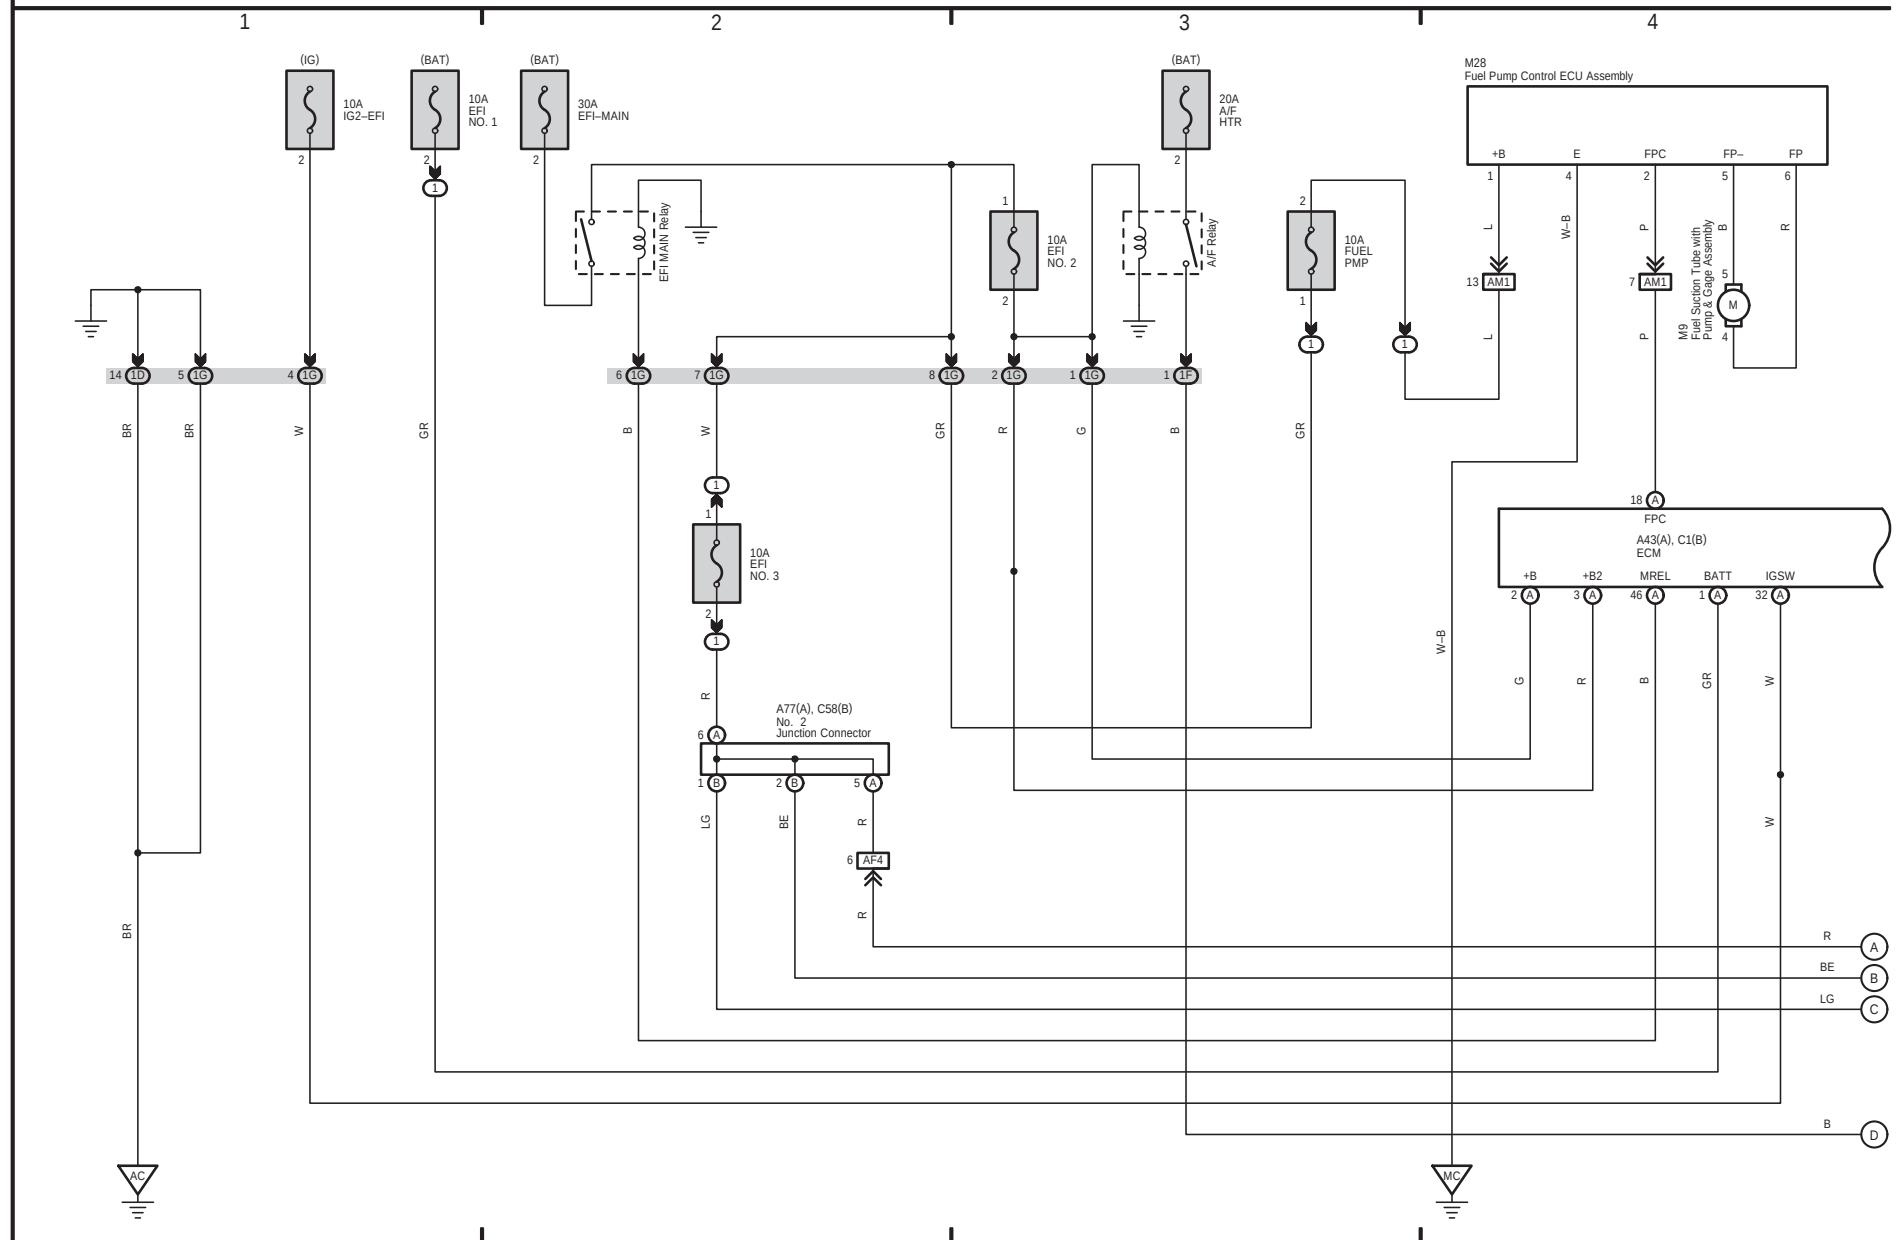


Engine Control (2GR-FE)


- * 1 : w/ Smart Entry & Start System
- * 2 : w/o Smart Entry & Start System
- * 4 : LHD
- * 5 : RHD

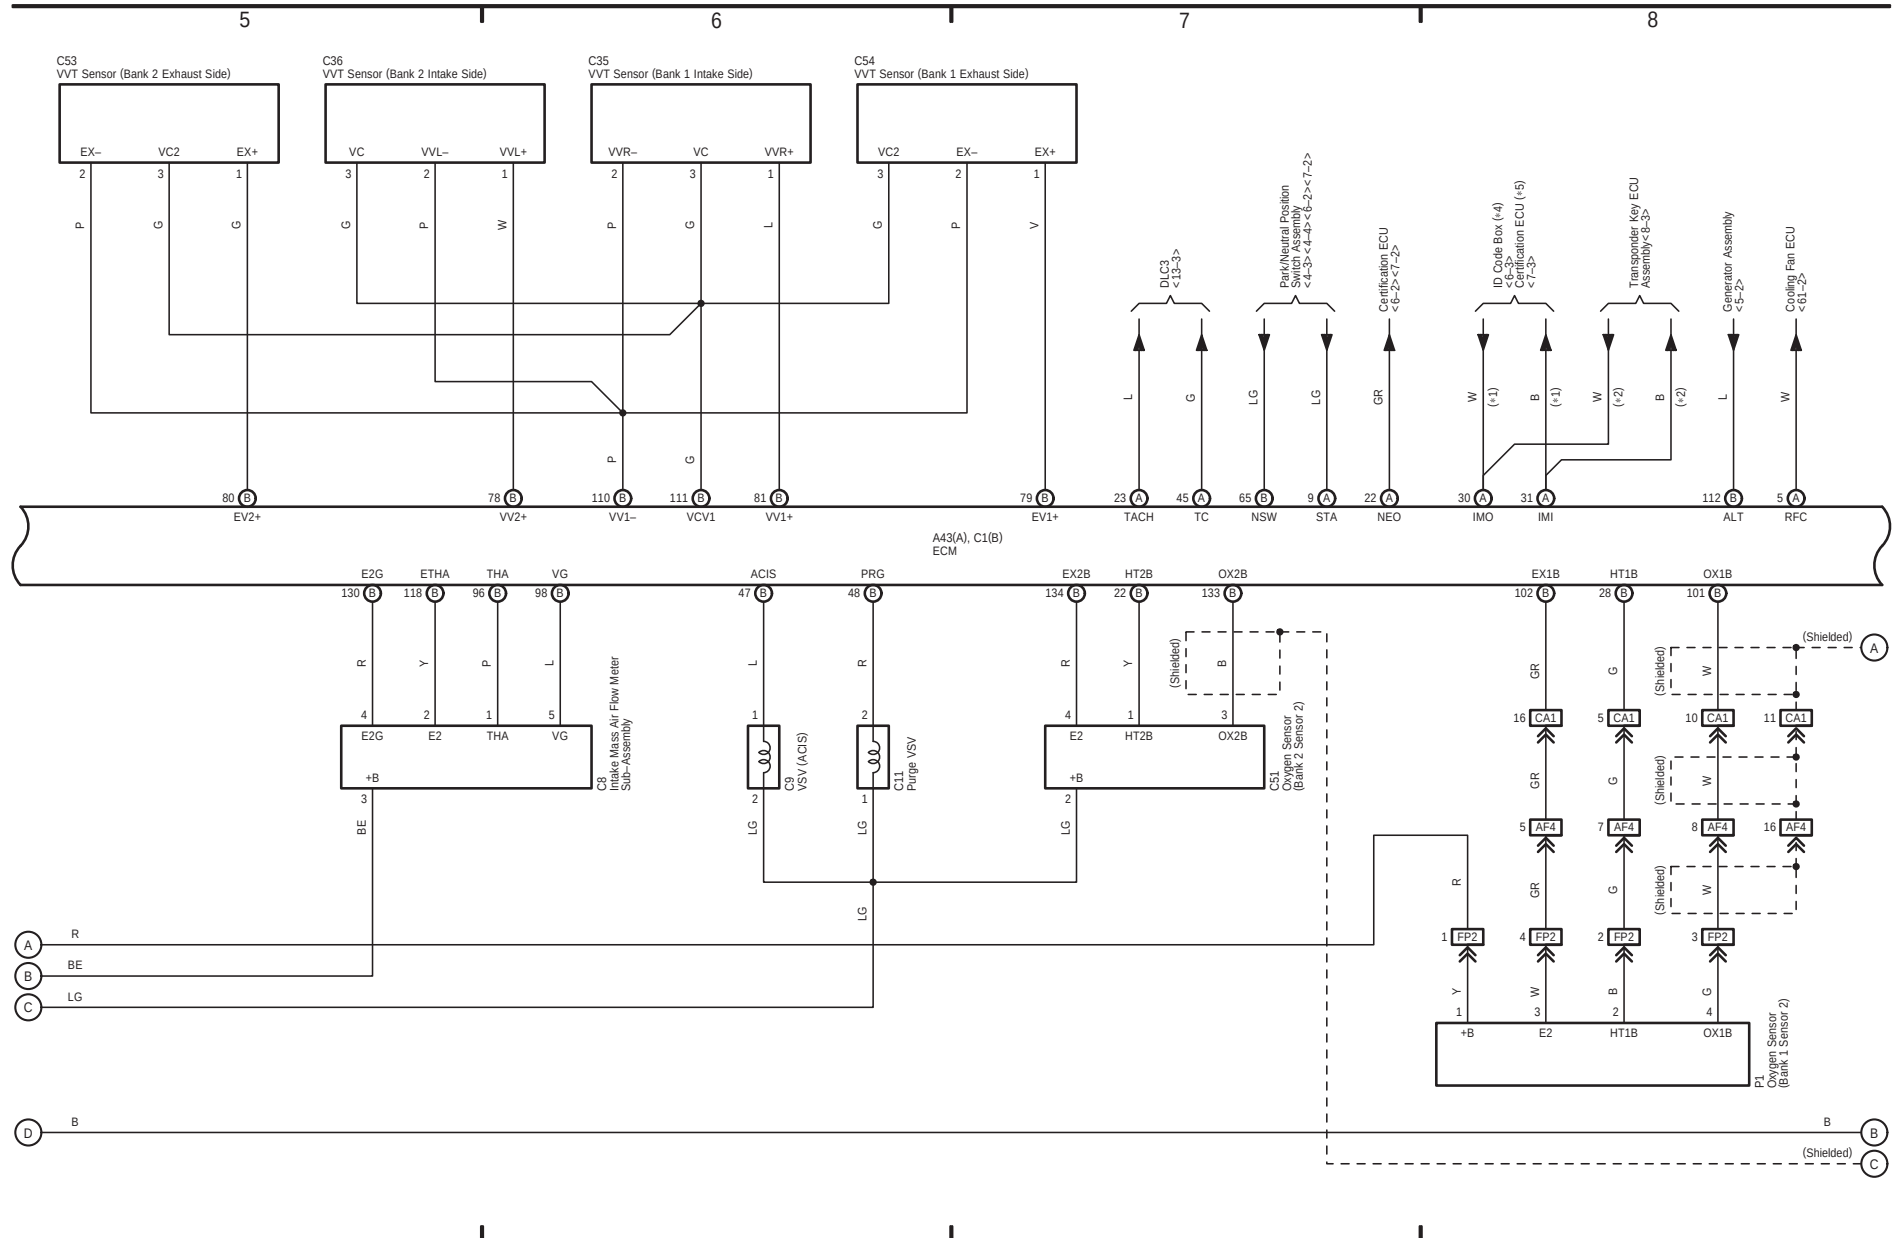

Engine Control (2GR-FE)

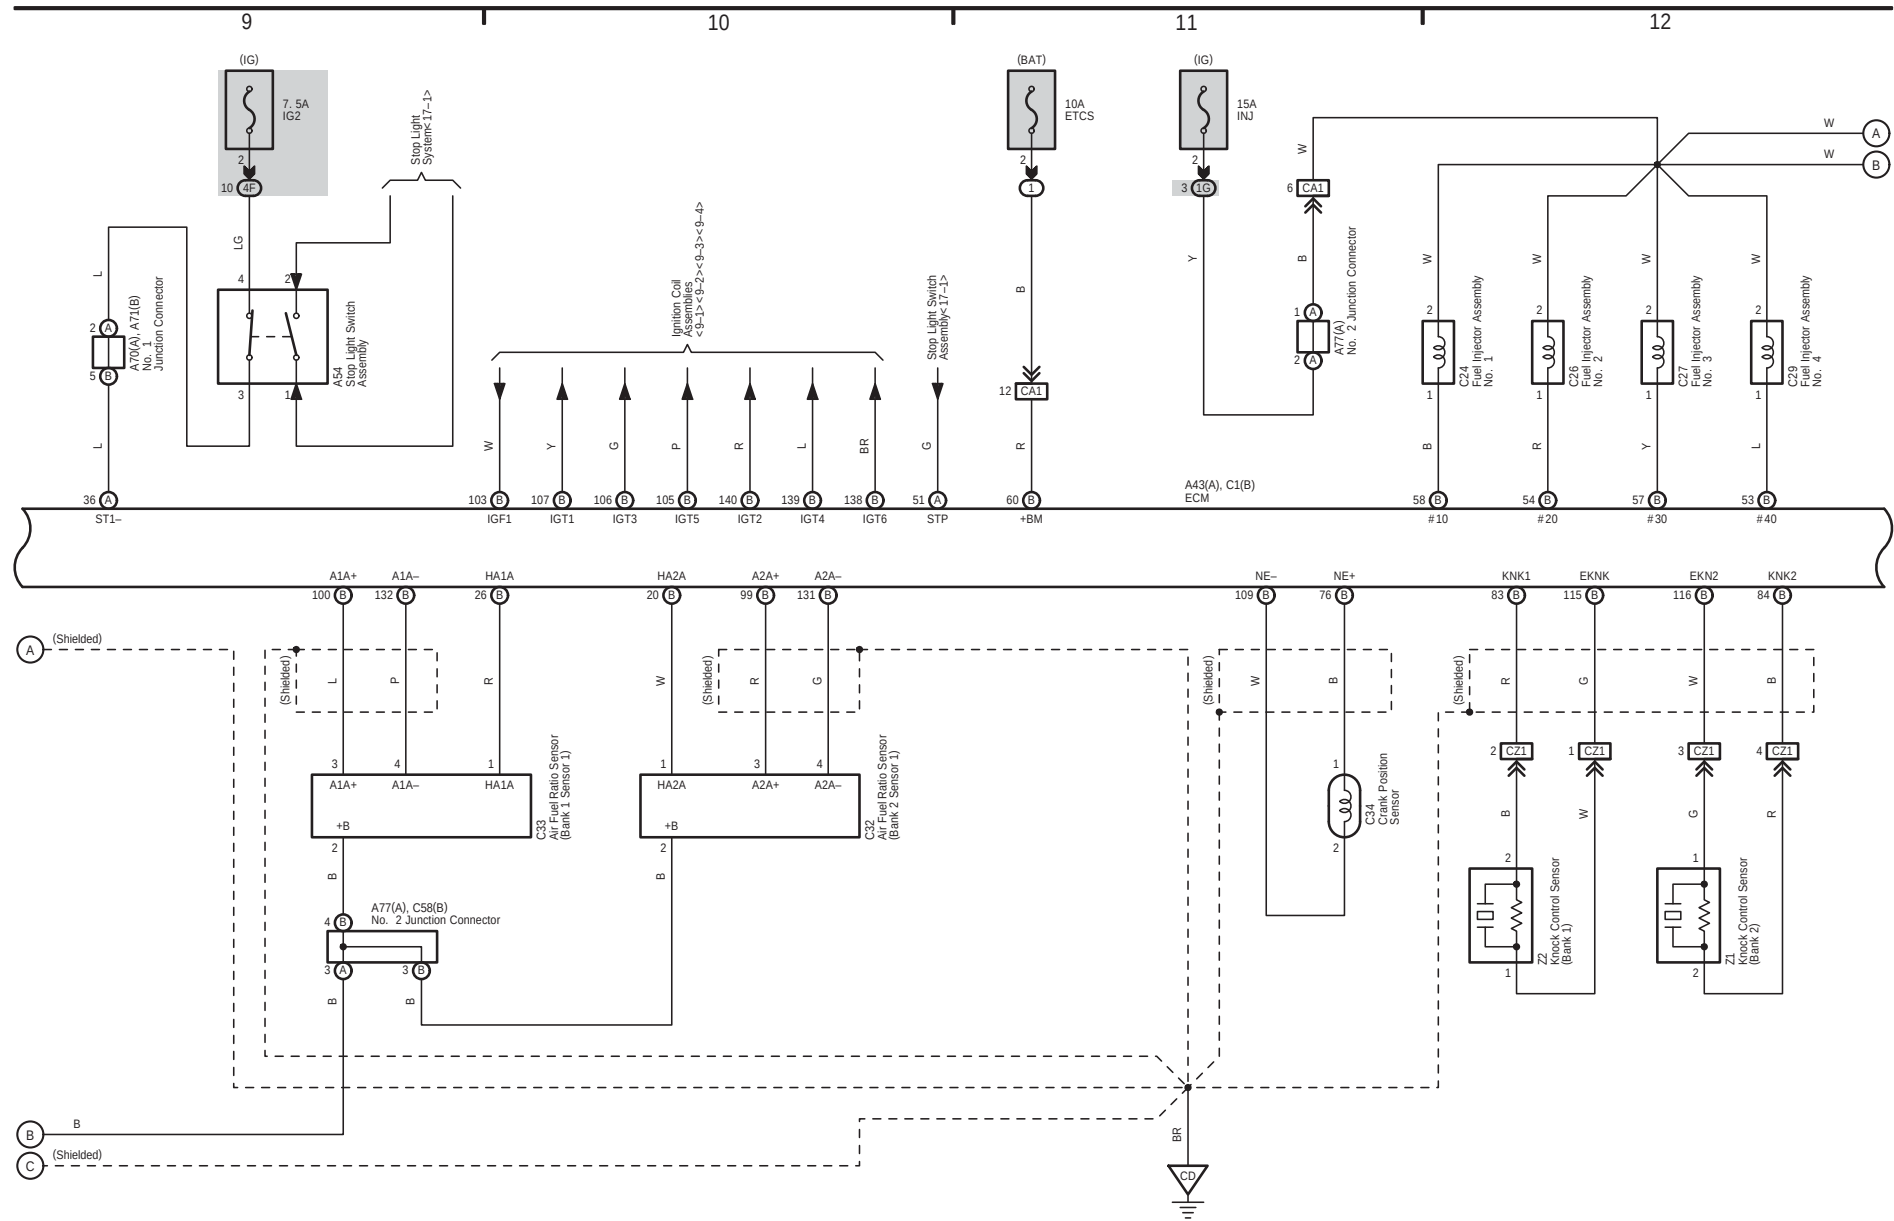

Engine Control (2GR-FE)

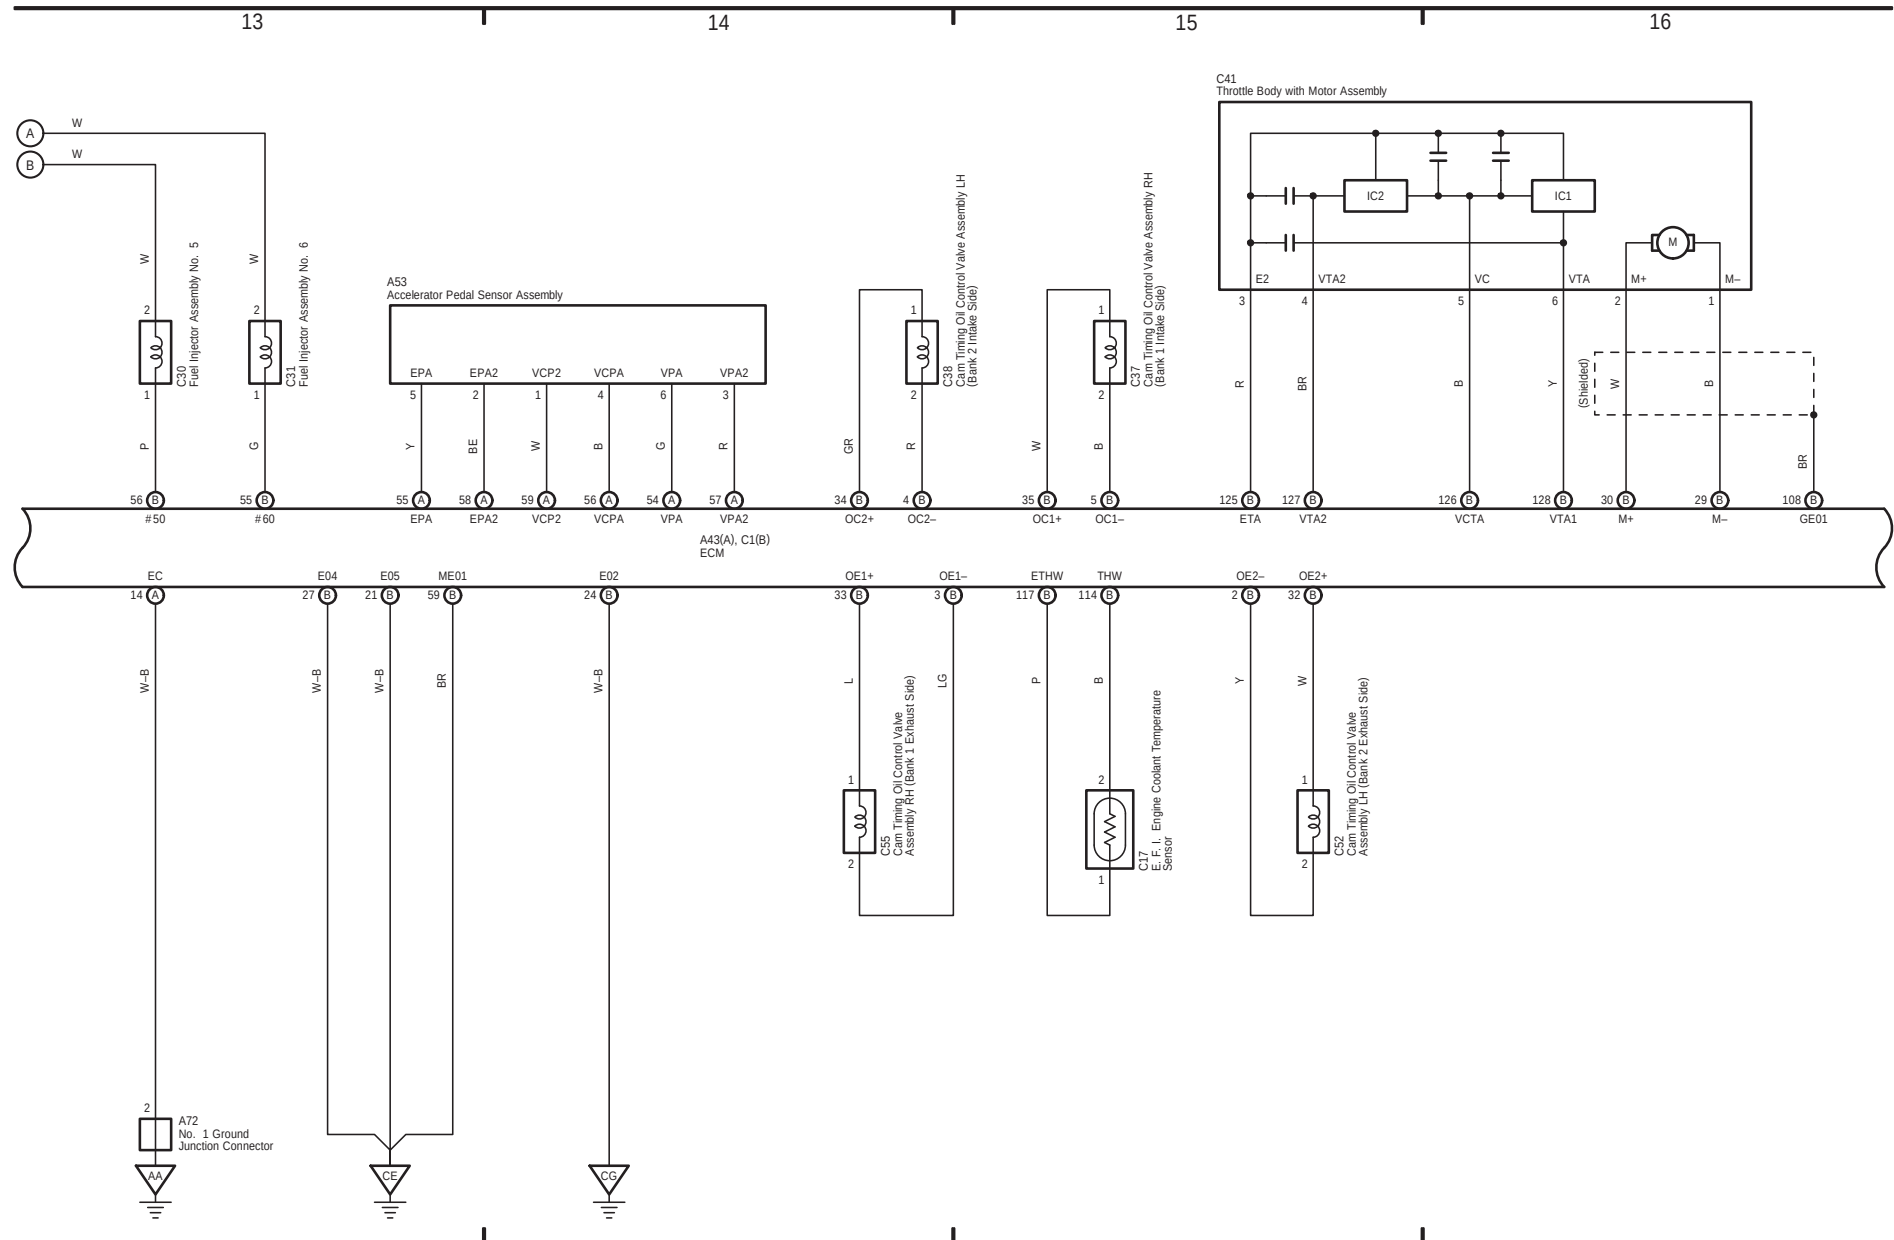

Cruise Control (2GR-FE)

ECT and A/T Indicator (2GR-FE)



* 4 : LHD
 * 5 : RHD

17


18

19

20

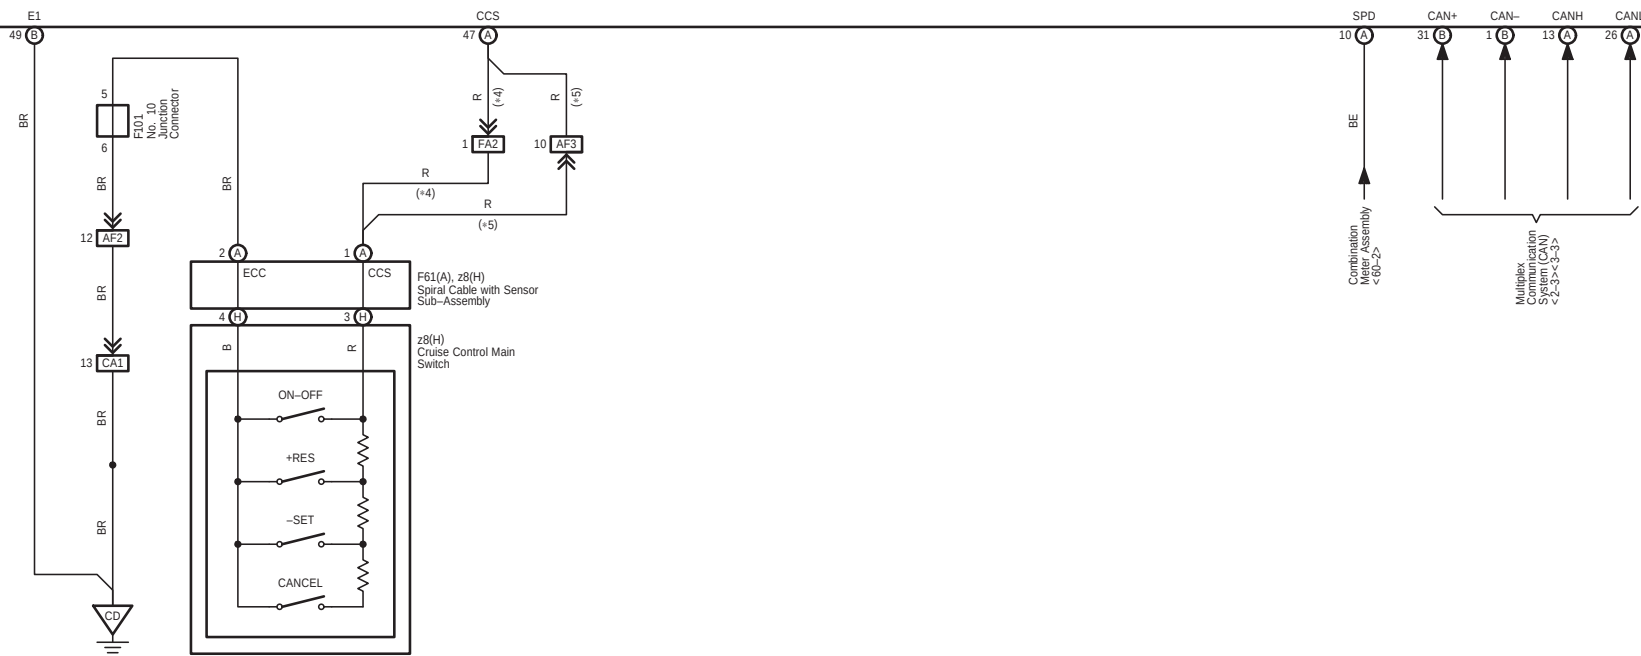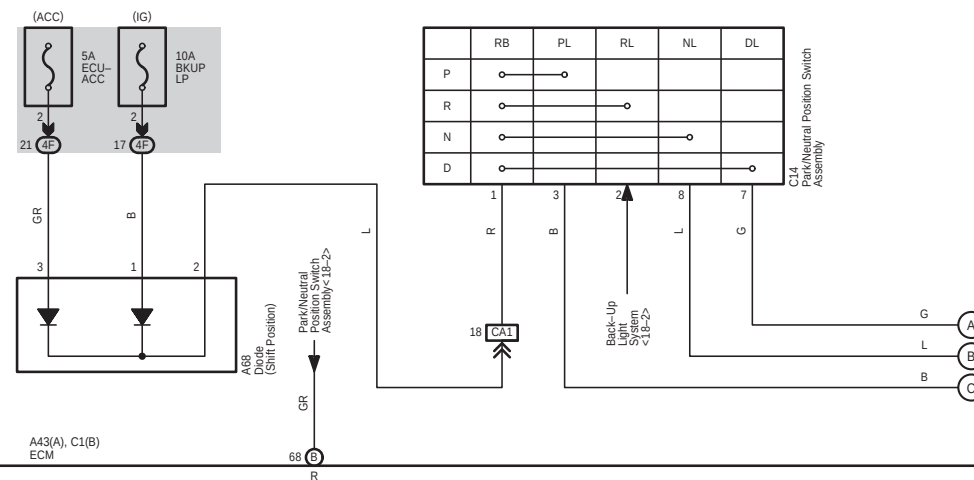


* 3 : w/ Dynamic Radar Cruise Control

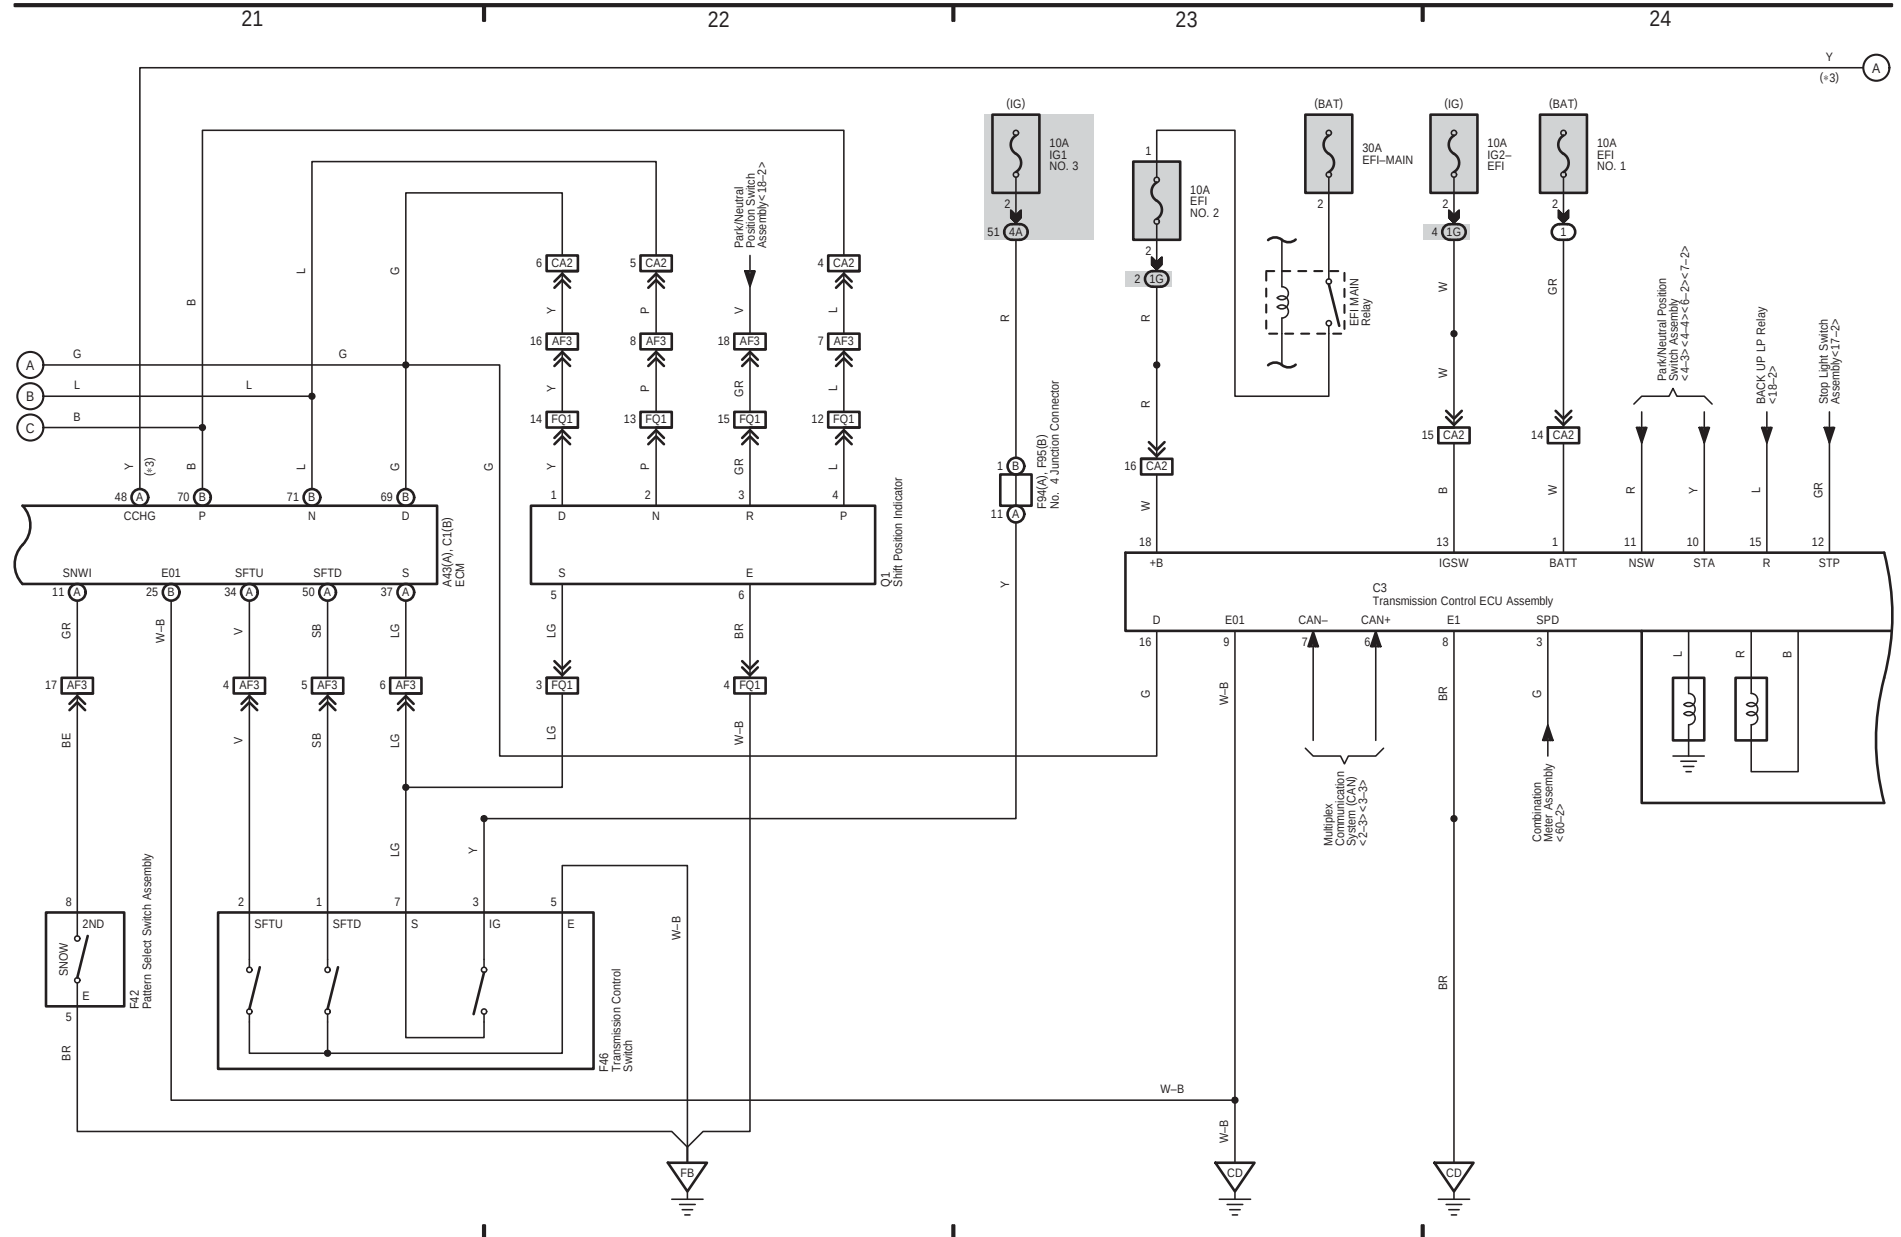

ECT and A/T Indicator (2GR-FE)

* 3 : w/ Dynamic Radar Cruise Control

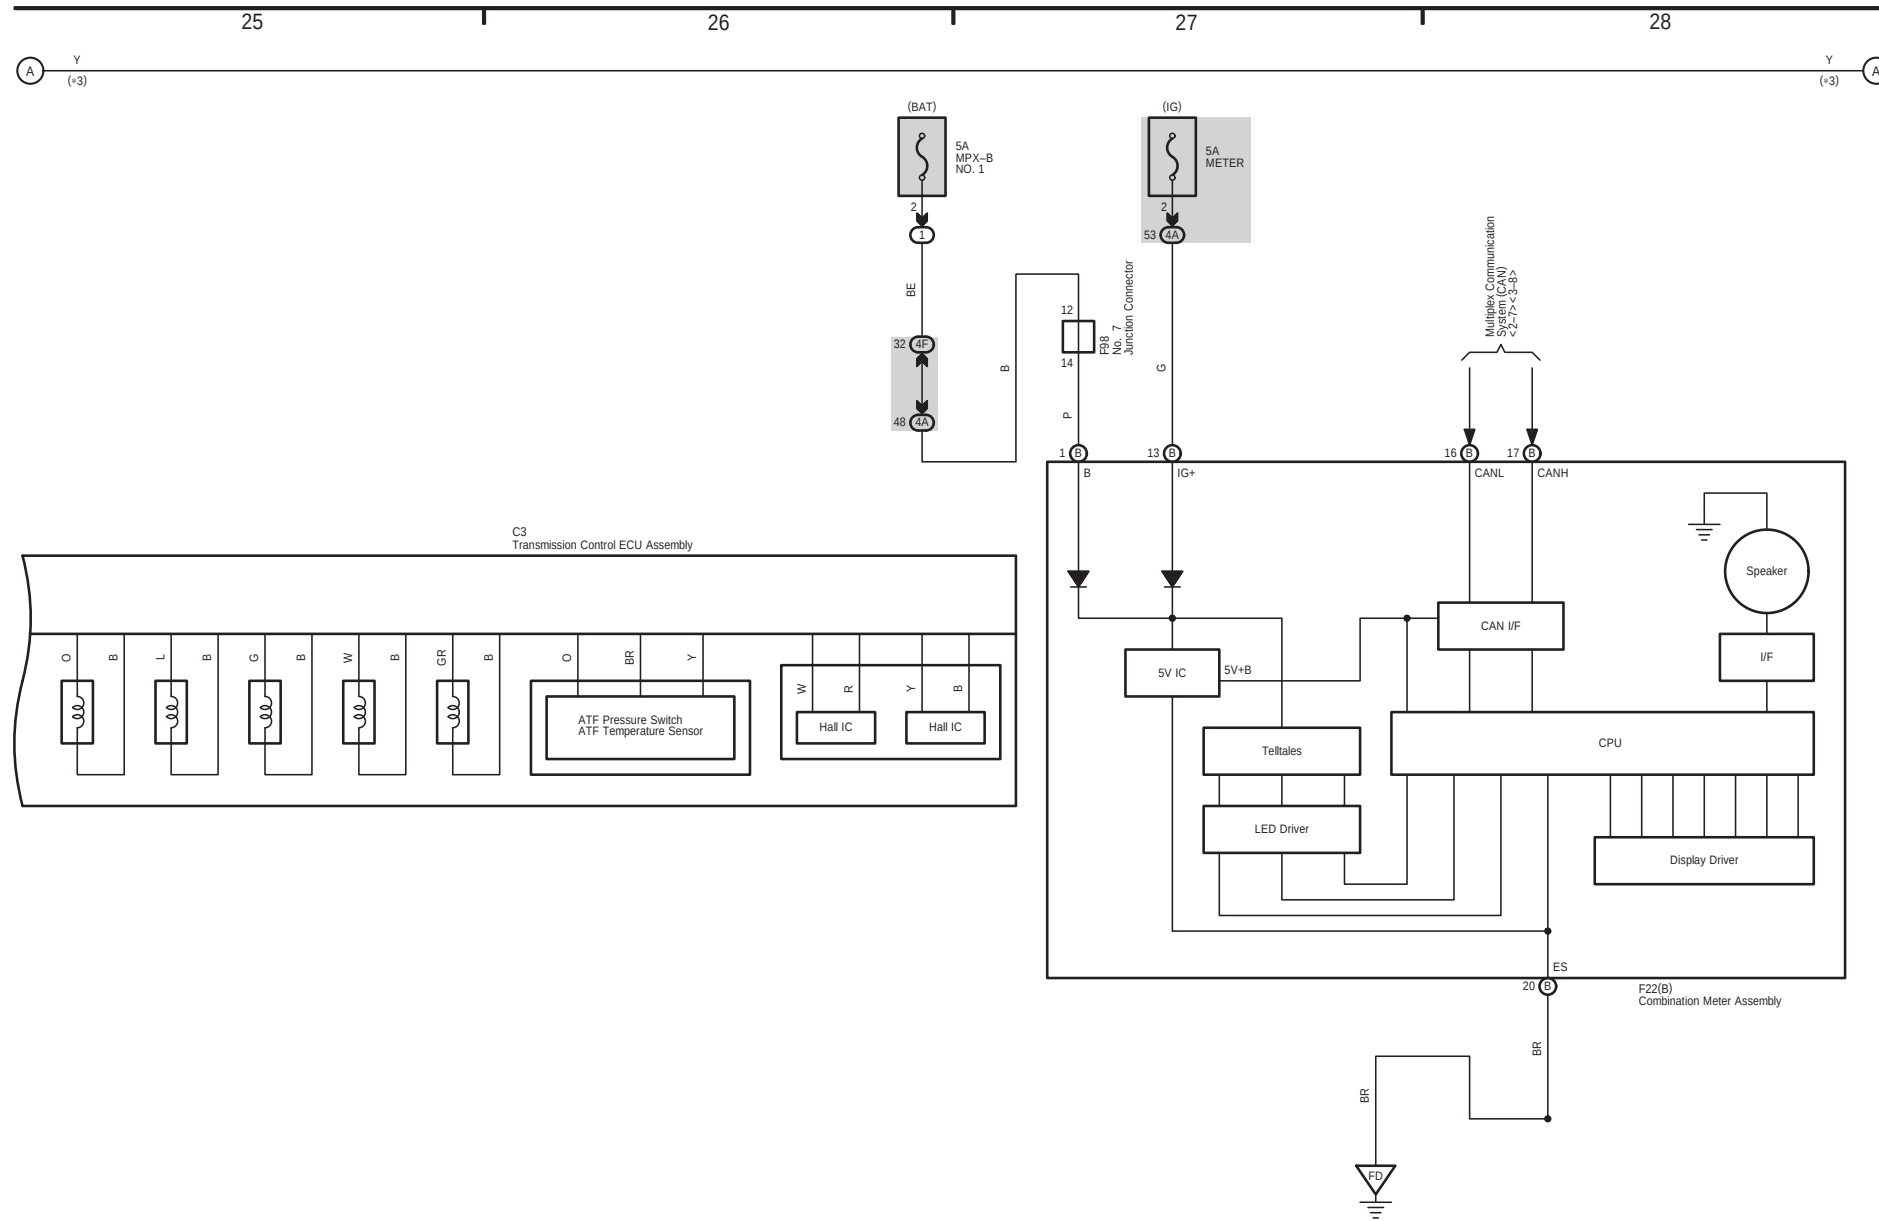

Dynamic Radar Cruise Control (Before Nov. 2016 Production),
Pre-Crash Safety System (Before Nov. 2016 Production)

* 3 : w/ Dynamic Radar Cruise Control

29 30 31 32

(A) Y (+3)

(IG) 10A IG1 NO. 3

51 4A

R (+3)

F61(B) No. 4 Junction Connector

F84 Driving Support ECU Assembly

B 30 GND 25 PBSW 5 WIP2 32 CA1P 40 CA1N 18 CA2H 39 CA2L 17 SPSW 6

R (+3) W-B (+3) B (+3) P (+3) V (+3)

14 AF6

P (+3)

1 2 7.5A WIPER-S

1 2 FZ7 Pre-crash System Cancel Switch Assembly

BR (+3) R (+3) W-B (+3)

13 AF6

R (+3)

Windshead Wiper Switch Assembly <44-4>

12 A DIST 8 A R/N 2 A ECC

4 D 7 O 1 F 4 F

G V W B

24(D) Steering Pad Switch Assembly

28(H) Cruise Control Main Switch

F61(A), z4(D), z8(H) Spiral Cable with Sensor Sub-Assembly

15 AF6

Y (+3) W (+3)

5 6 F101 No. 10 Junction Connector

BR (+3) BR (+3) BR (+3) BR (+3)

12 AF2

13 CA1

CD

IGB 5 CA1P 3 CA1N 2

BZ 10 L (+3) SGND 1

BR (+3)

Lane Departure Warning Buzzer <26-2>

Multiplex Communication System (CAN) <3-14>

Millimeter Wave Radar Sensor Assembly

4 AC

A73 No. 2 Ground Junction Connector

* 3 : w/ Dynamic Radar Cruise Control