

THEFT DETERRENT SYSTEM


DESCRIPTION

- This system has been adopted as standard or optional equipment on the models for Thailand, the Philippines, and Central and South America.
- The theft deterrent system utilizes the components of the door lock control system and the wireless door lock remote control system. It activates when somebody attempts to forcibly enter the vehicle, open the engine hood, or apply abnormal vibration to the vehicle, or when the battery terminals are removed and reconnected.
- The shock sensing triggering sensor is built in the theft deterrent ECU.
- The control of this system is effected by the theft deterrent ECU.
- The warning specifications of this system are listed below:

Warning Specifications ◀

Warning Method	Hazard Light	Flashing
	Security Horn	Sounds a warning at approx. 0.8 second cycles
	Vehicle Horn	Sounds a warning at approx. 0.8 second cycles
Warning Time		27.5 sec.

System Diagram ◀

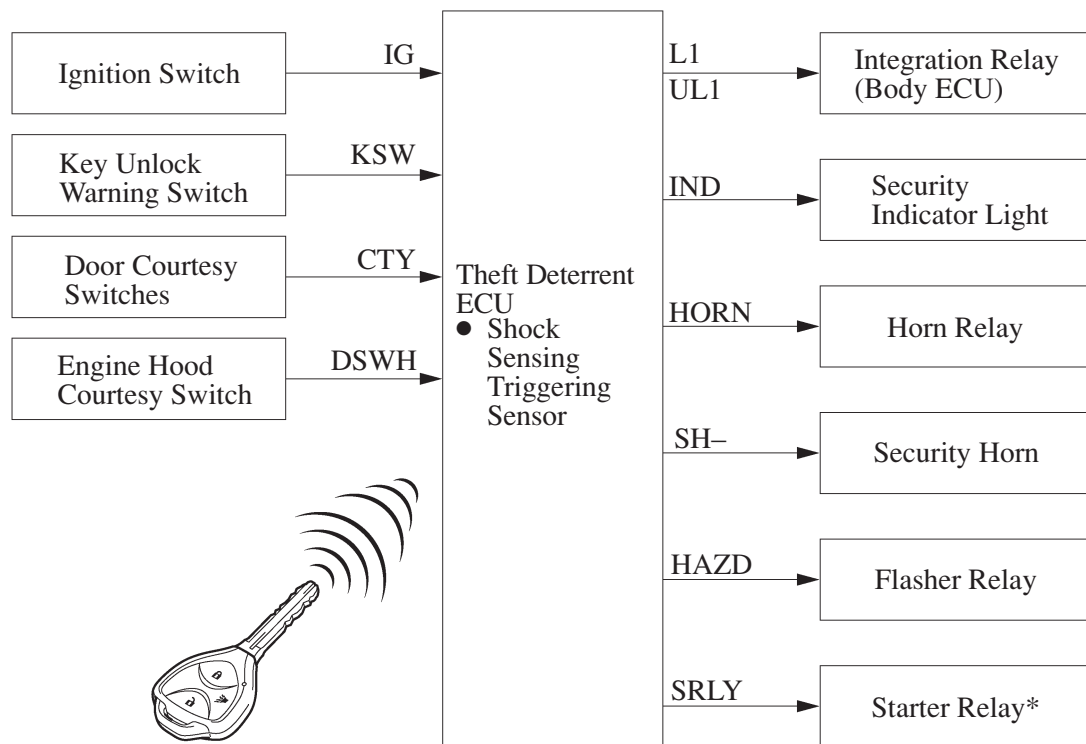

Transmitter

*: Only on models unequipped with immobilizer system