

SEAT BELT REMINDER SYSTEM

DESCRIPTION

- A seat belt reminder system is used. If the seat belt is not buckled, the reminder light flashes and the buzzer sounds.
- When the ignition switch is turned ON, this system determines whether or not the seat belt is buckled depending on whether the signal from the switch in the seat belt buckle is ON or OFF.
- The occupant detection sensor provided in the seat cushion of the front passenger seat determines whether or not an occupant is seated in the front passenger seat.
- On the Australian model, the buzzer sounds when the vehicle speed exceeds 15 km/h (9.3 mph) to alert the driver that the driver seat belt is unbuckled. After 30 seconds, the seat reminder system emphasizes the alert by changing the cycle of the buzzer for 90 seconds.
- The specifications of this system vary by destination as indicated in the table below.

Item		Thailand	Australia	Philippines	General Countries	Central and South America	Malaysia
Seat Belt Reminder Light	For Driver Seat	Blink	Blink	Blink	Blink* ¹	Blink* ³	Blink
	For Front Passenger Seat	—	Blink	—	Blink* ²	Blink* ³	—
Buzzer for Driver Seat		—	Sound	—	—	—	—


*1: Only for Models with Driver Airbag

*2: Only for Models with Front Passenger Airbag


*3: Only for SR grade Model

BE

System Diagram

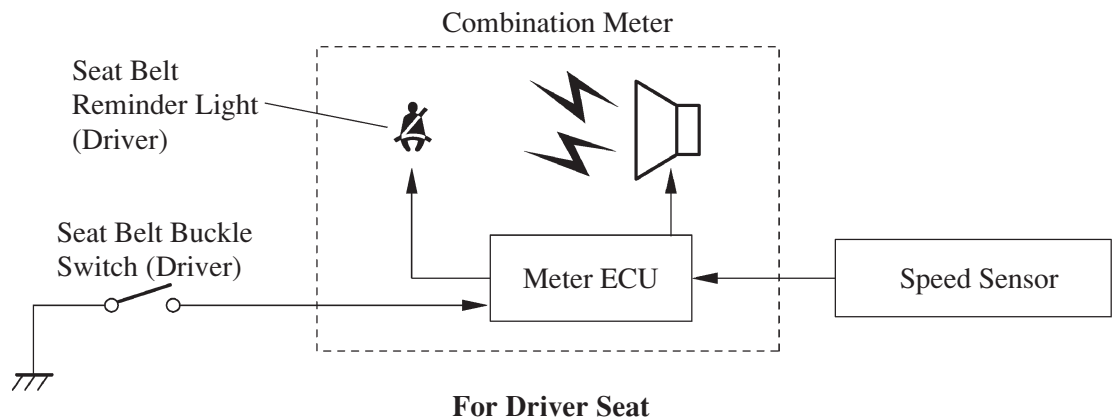

271BE57

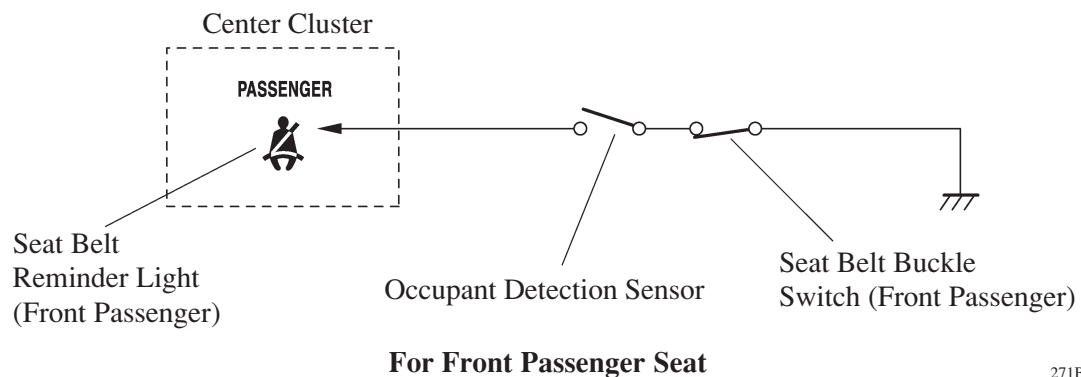

271BE58