


Clock

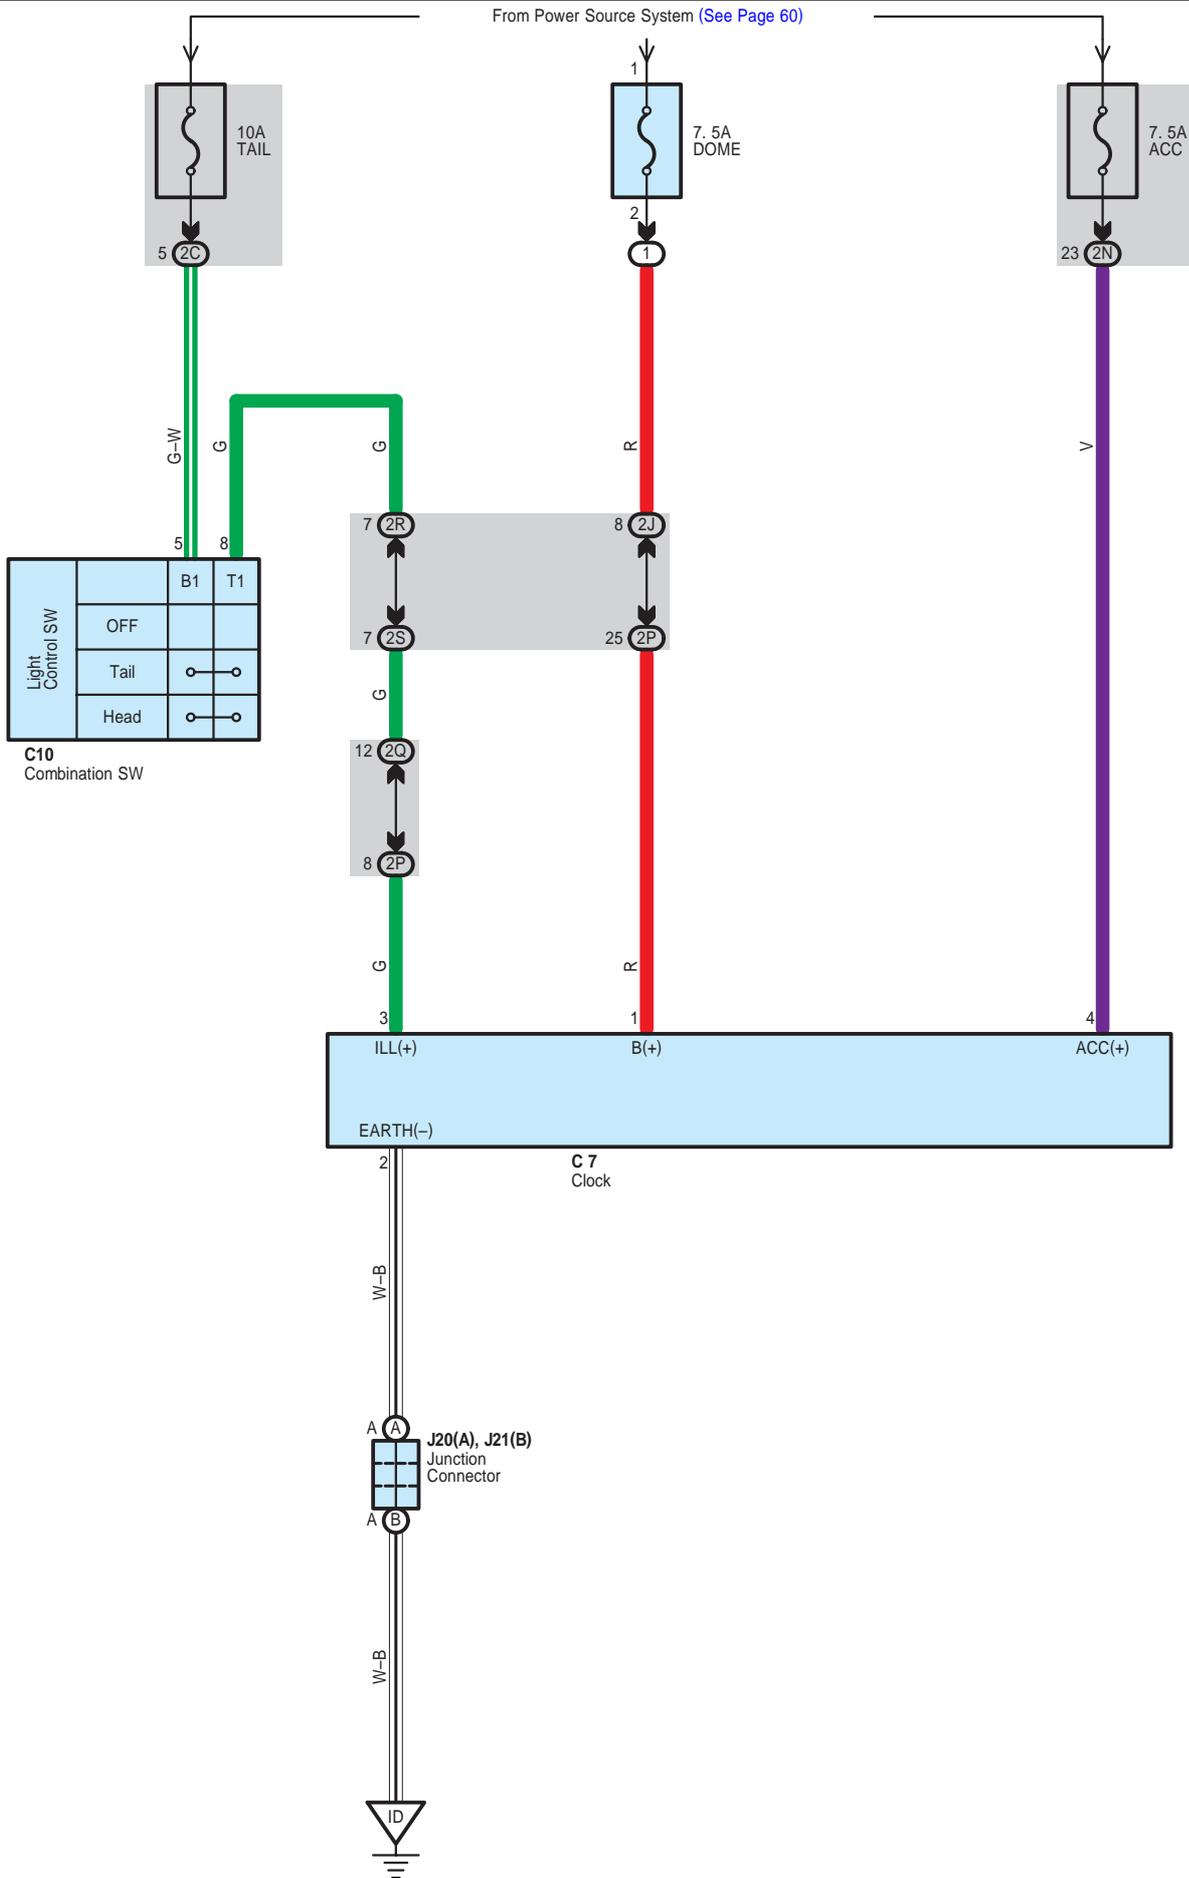

Service Hints**C7 Clock**

- 4-Ground : Approx. 12 volts with the ignition SW at ACC or ON position
- 1-Ground : Always approx. 12 volts
- 3-Ground : Approx. 12 volts with the light control SW at TAIL or HEAD position
- 2-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C7	38	J20	A	38	
C10	38	J21	B	38	

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2C	28	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2J	28	Engine Room Main Wire and Driver Side J/B (Instrument Panel Brace RH)
2N	29	Instrument Panel Wire and Driver Side J/B (Instrument Panel Brace RH)
2P		
2Q		
2R		
2S		

▽ : Ground Points

Code	See Page	Ground Points Location
ID	48	Instrument Panel Reinforcement Center