



(BAT)
(IG)
(BAT)
40A
FR HTR (*5)
50A
FR HTR (*6)
10A
ECU–IG&
GAUGE
7. 5A
ECU–B (*3)
10A
ECU–B (*4)
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : Before Aug. 2008 Production
* 4 : From Aug. 2008 Production
* 5 : Before Aug. 2009 Production
* 6 : From Aug. 2009 Production
* 7 : Before Aug. 2010 Production
* 8 : From Aug. 2010 Production
A 8(D)
Alternator
1C
2F
2L
2R
HTR Relay
10A
A/C
2Q
30 2R
B(*4)
L–B
(*3)
L
L–Y
R–L
L–O
G
P
GR
W–B
Tail Lamp Relay (*1)
Combination SW (*2)
J 6
Junction
Connector
ID1
IG+
+B1
HLS
ALT
V 6
Viscous Heater Amplifier
BLW
GND
SWVC
SWIN
T26
Temp. Control SW
(Max Hot)
P14(A), P21(B)
Power Heater SW
J20(A), J21(B)
Junction
Connector
ID



(BAT)
30A
PTC
NO. 2 (*7)
50A
PTC
NO. 2 (*8)
(BAT)
50A
PTC
NO. 1
1 1B
1 1D
E 5(J), E 6(K)
Engine ECU
VCT
VCH
THWO
TACH
4 K
13 K
2 J
4 J
B–Y (*8)
B–R (*7)
L–W
1 IF4
2 IF4
P
B–W
16 2Q
6 2N
32 2P
22 2N
R–L
BR
12
5
4
11
ACT
AC2
TW
TACO
V 6
Viscous Heater Amplifier
PTC2
PTC1
7
6
B–Y(*8)
B–R(*7)
L–W
GR
R–W
P19
PTC Heater Relay (No. 2)
P18
PTC Heater
Relay (No. 1)
2
3
1
5
L–B
W–B
L (*7)
G (*8)
R–B
5 A
4 B
J22(A), J23(B)
Junction
Connector
1 B
2 B
B
E
1 A
2 A
P16(A), P17(B)
PTC Heater
W–B
IE

A 8
Black

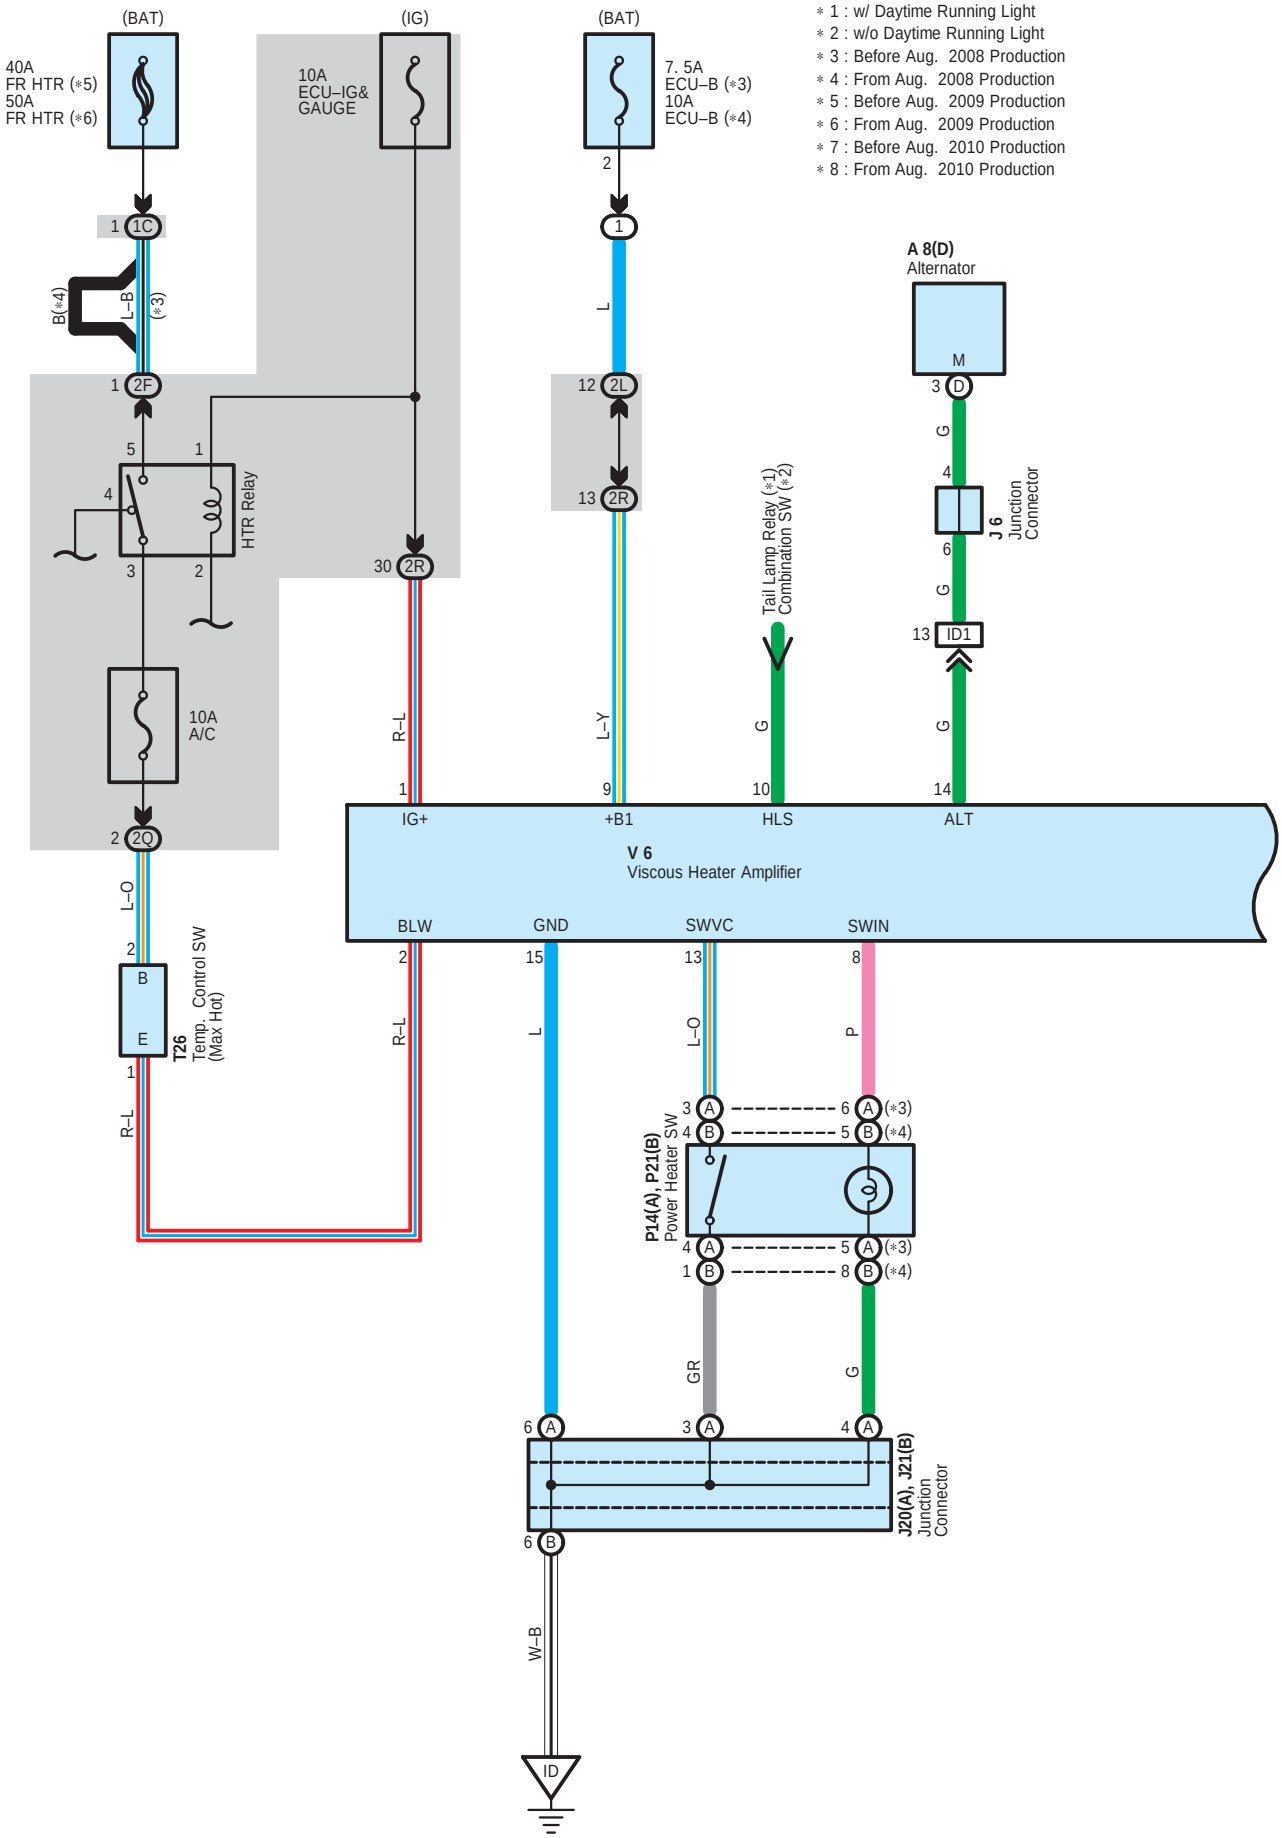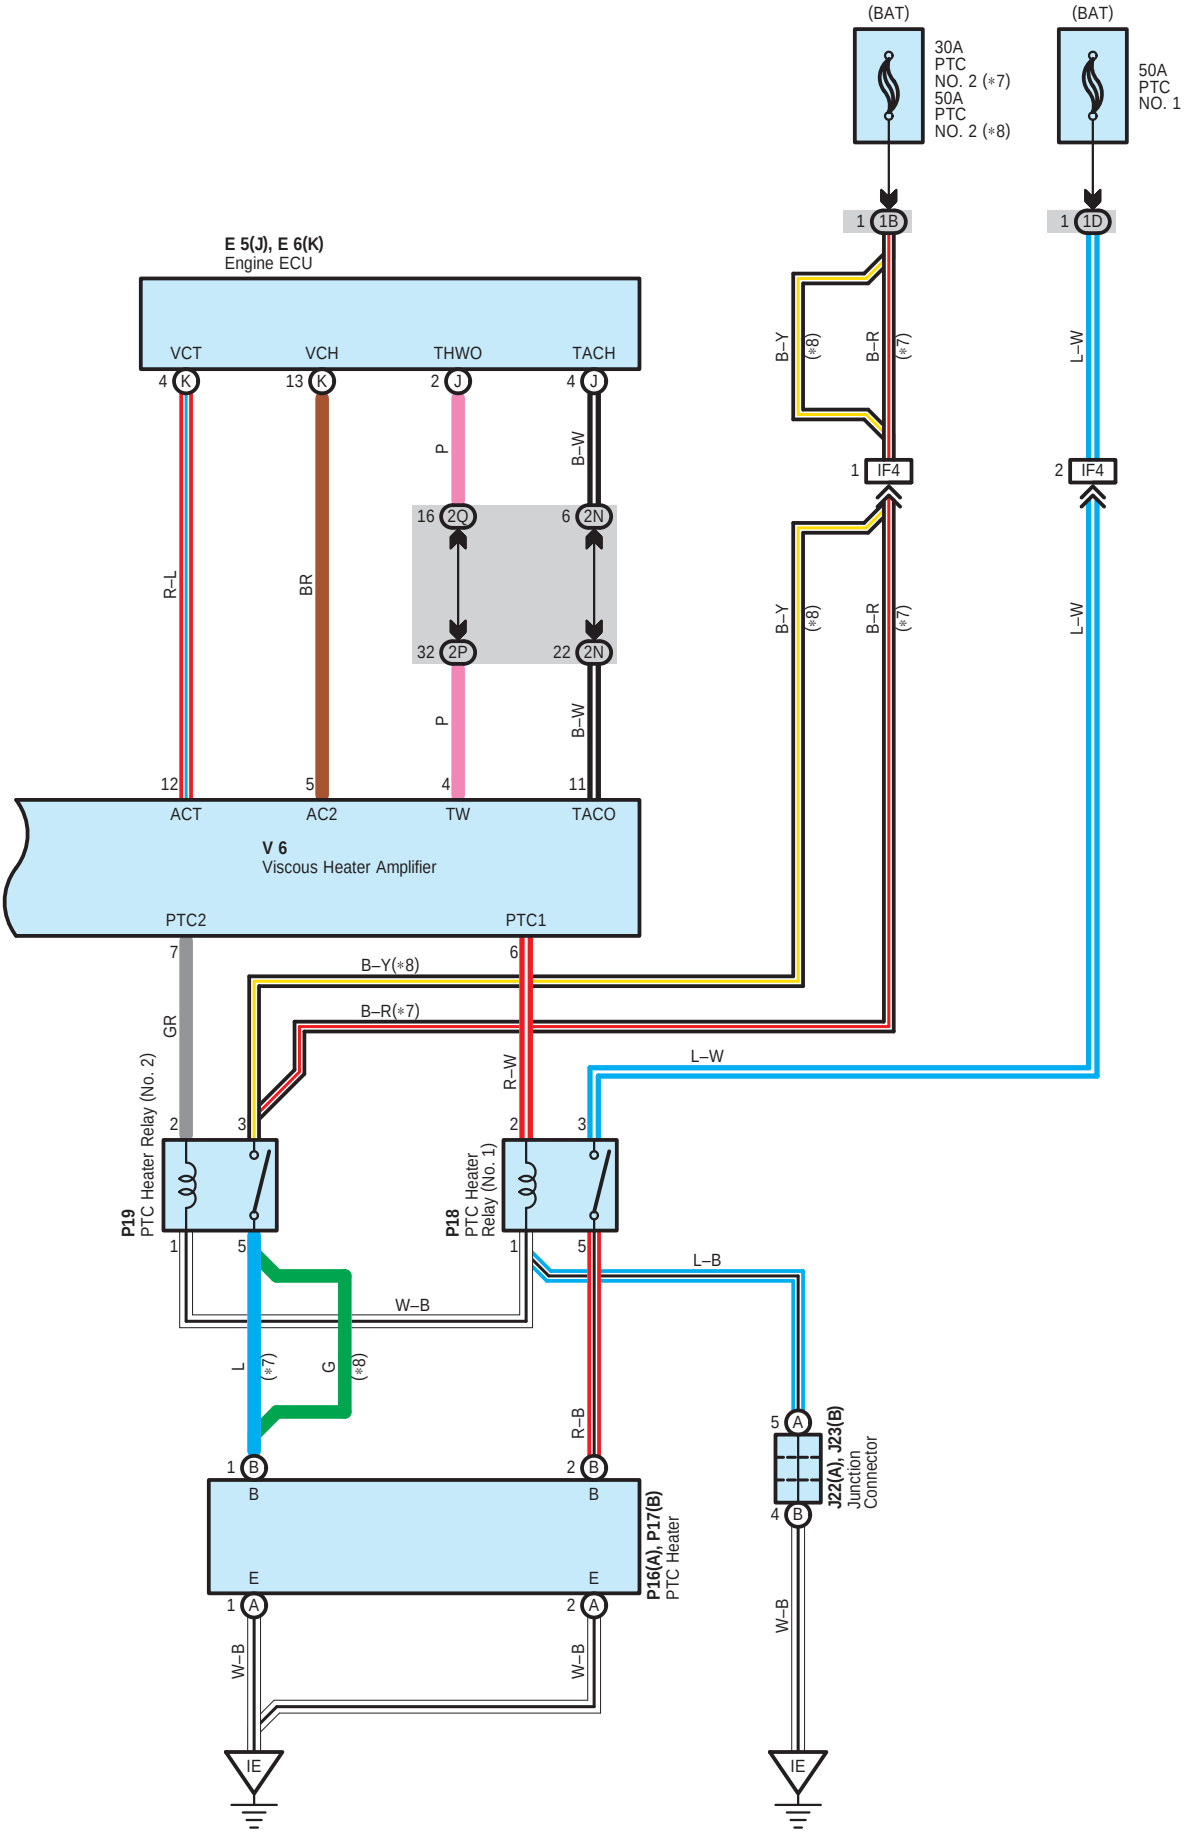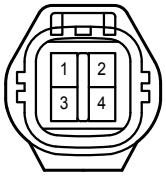


(Except 5L-E)


E 5
Gray

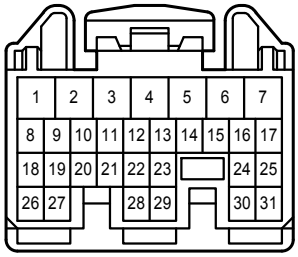


E 6
Gray

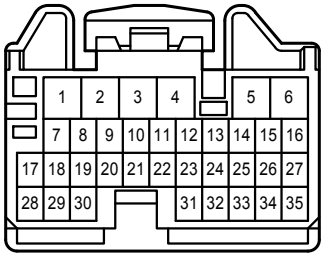


J 6
White

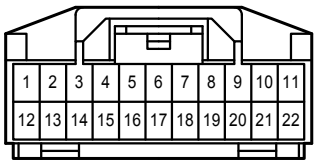


J 20
White

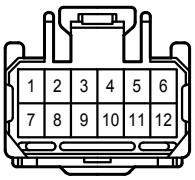


J 21
White

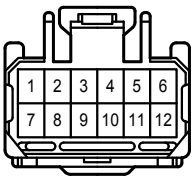


J 22
White

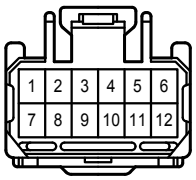


J 23
White

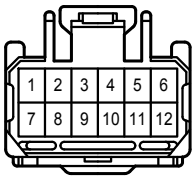


P 14
Black

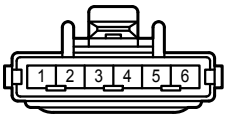


P 16
Black

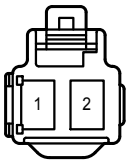


P 17
Black

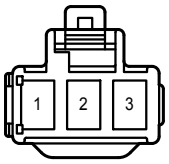


P 18
White

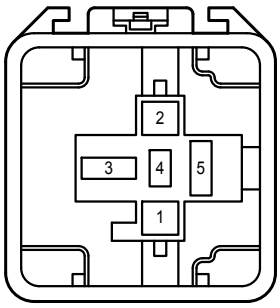


P 19
White

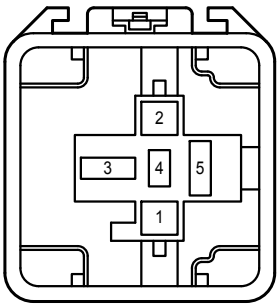


P 21
White

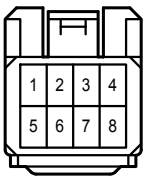


T 26
White




V 6
White

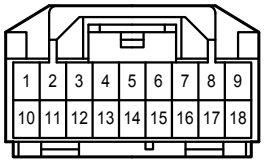


1B
White

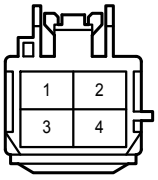


1C
White

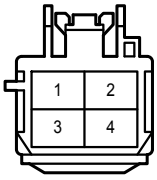


1D




2F
White

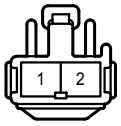


2L
Black

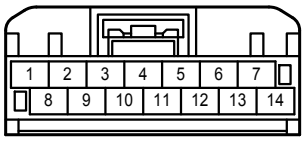


2N
Gray

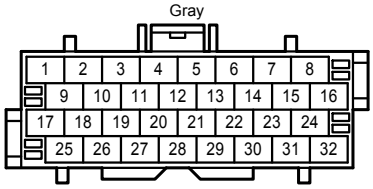

2P
White

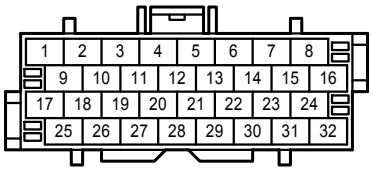

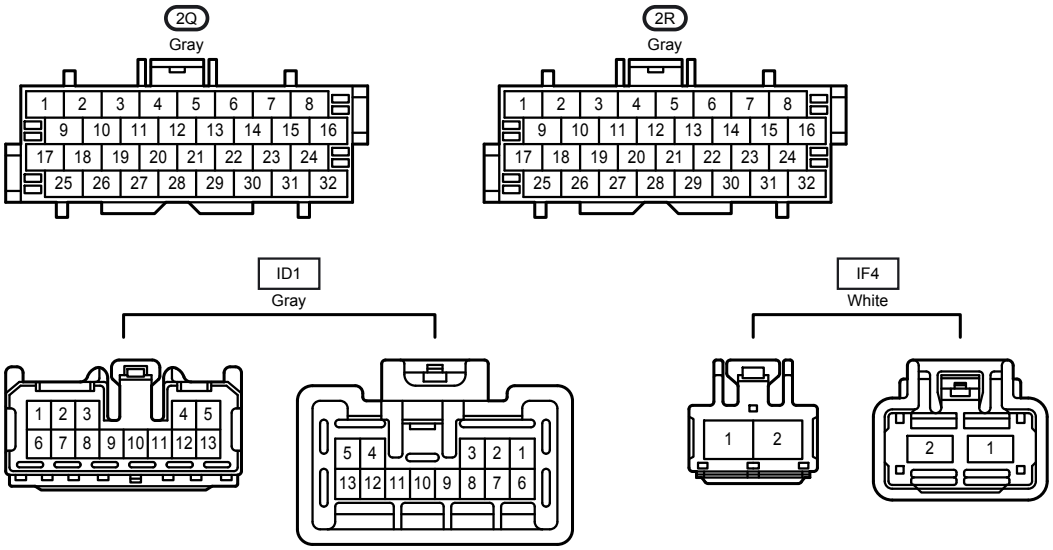
2Q
Gray
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16
17 18 19 20 21 22 23 24
25 26 27 28 29 30 31 32
2R
Gray
1 2 3 4 5 6 7 8
9 10 11 12 13 14 15 16
17 18 19 20 21 22 23 24
25 26 27 28 29 30 31 32
ID1
Gray
1 2 3 4 5
6 7 8 9 10 11 12 13
5 4 3 2 1
13 12 11 10 9 8 7 6
IF4
White
1 2
2 1