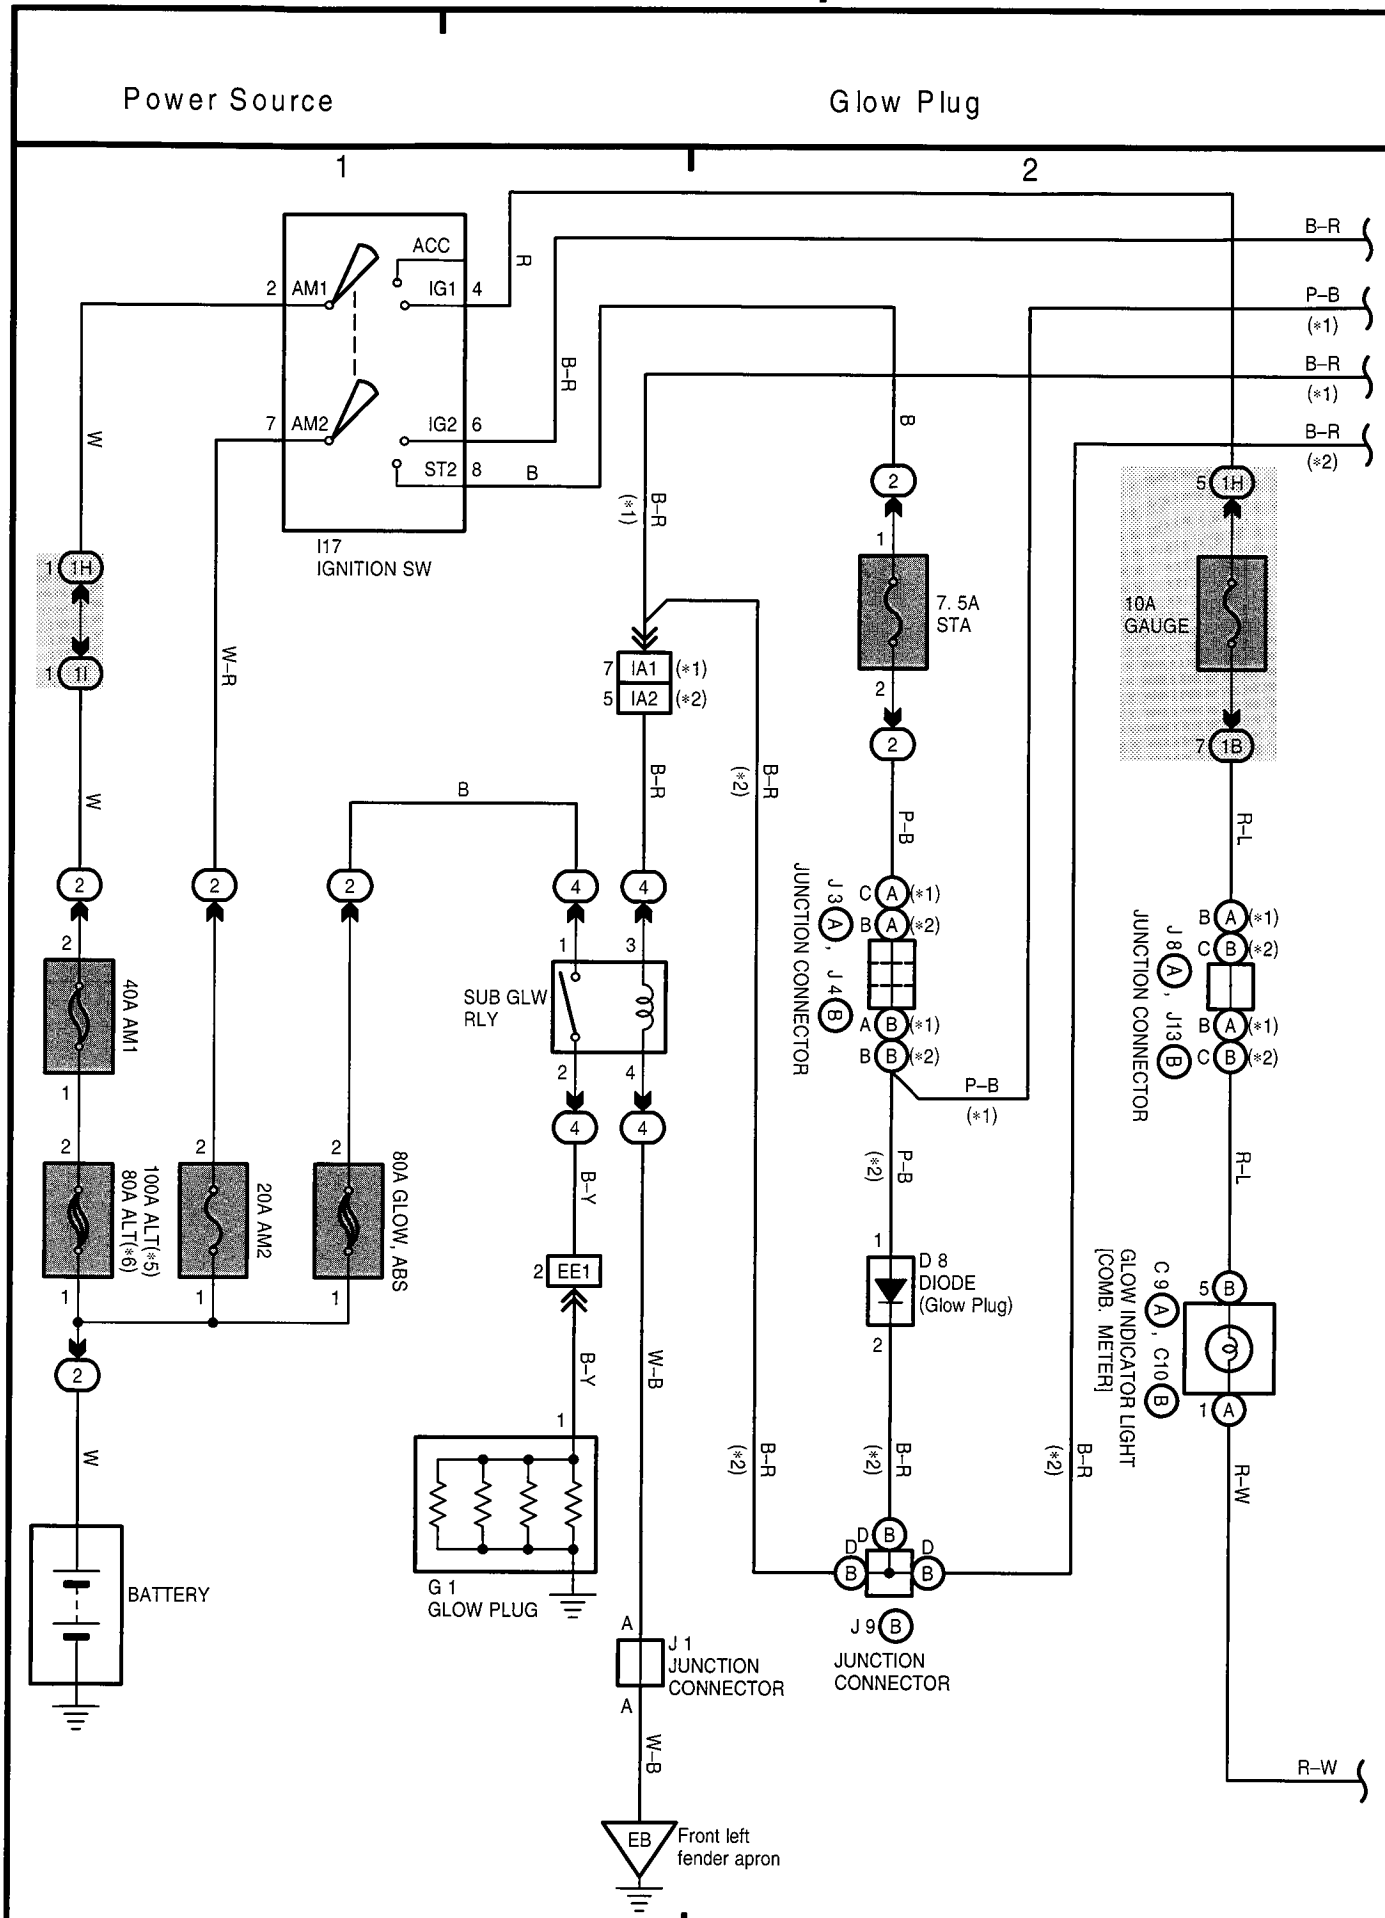
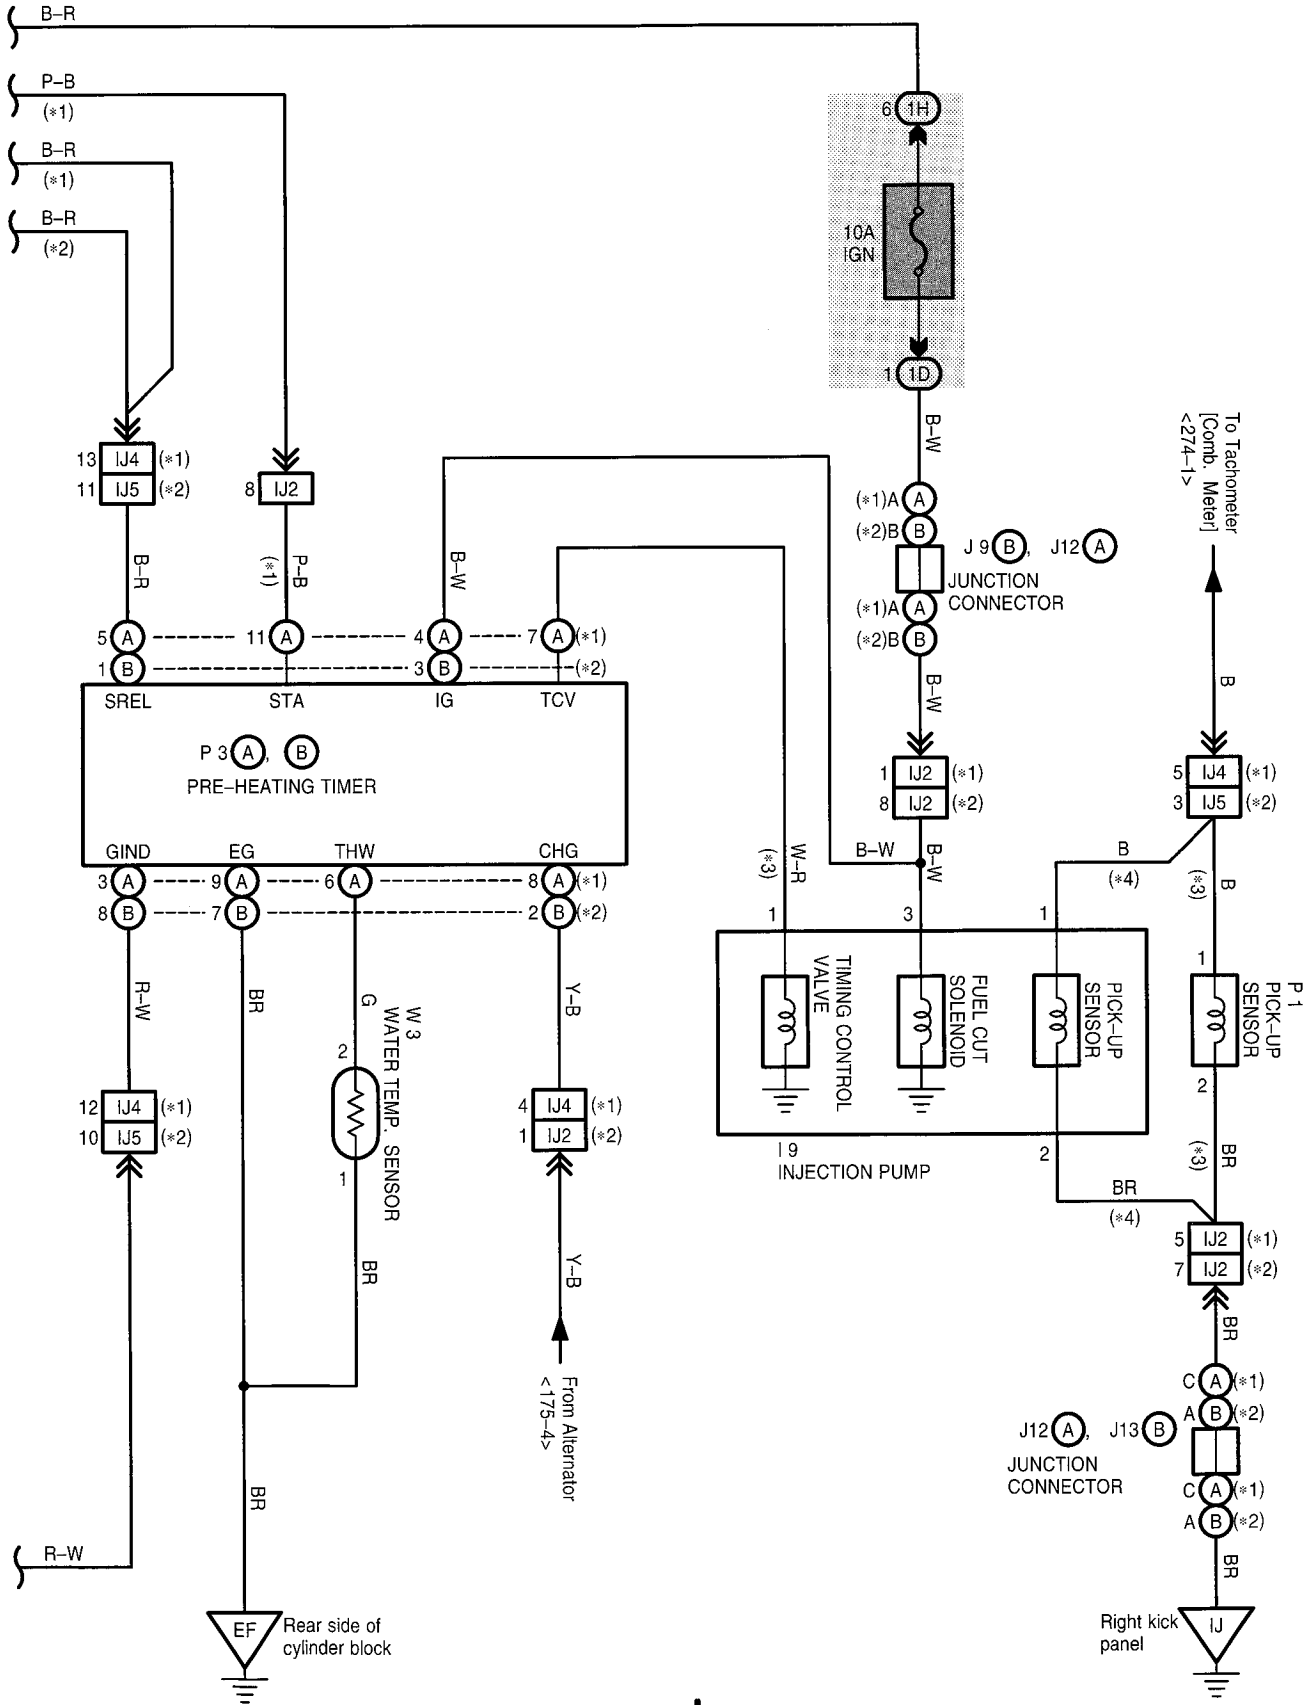

Power Source
Glow Plug
1
2
ACC
IG1
IG2
ST2
AM1
AM2
I17
IGNITION SW
BATTERY
40A AM1
100A ALT(*5)
80A ALT(*6)
20A AM2
80A GLOW, ABS
SUB GLW
RLY
G 1
GLOW PLUG
EE1
IA1
IA2
J 1
JUNCTION
CONNECTOR
EB
Front left
fender apron
7. 5A
STA
J 3
J 4
JUNCTION CONNECTOR
D 8
DIODE
(Glow Plug)
J 9
JUNCTION
CONNECTOR
10A
GAUGE
J 8
J13
JUNCTION CONNECTOR
C 9
C10
GLOW INDICATOR LIGHT
[COMB. METER]
B-R
P-B
B-R
(*1)
B-R
(*2)
W
W-R
B
B-Y
W-B
R-L
R-W
(*1)
(*2)

LHD

Glow Plug

* 1 : Europe
* 2 : Except Europe
* 3 : 2L Europe
* 4 : Except 2L Europe
* 5 : 70A Type Alternator
* 6 : 45A, 55A Type Alternator

3 4



LHD