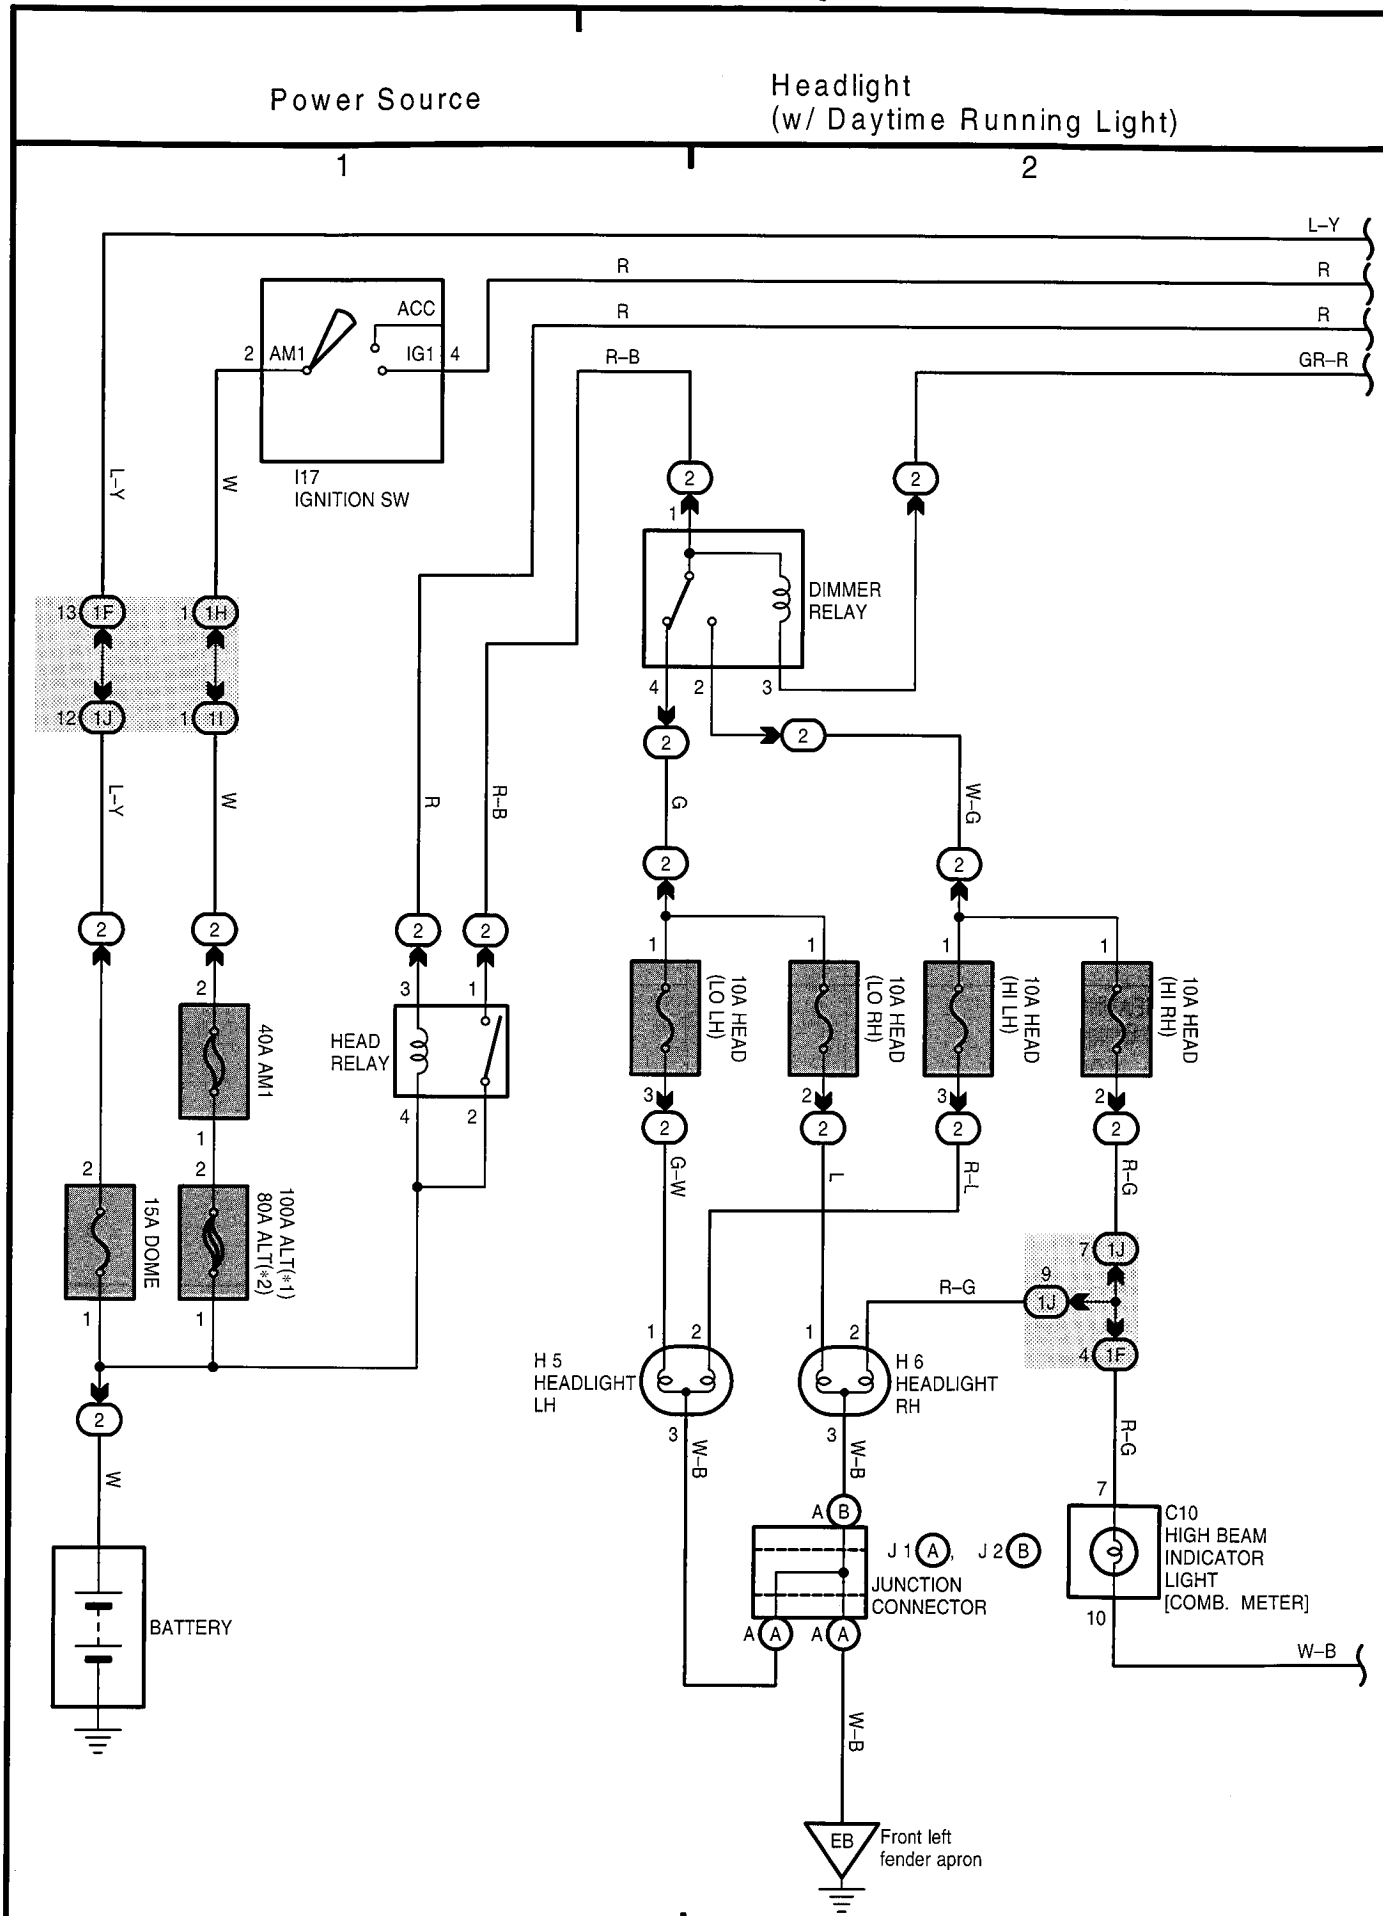
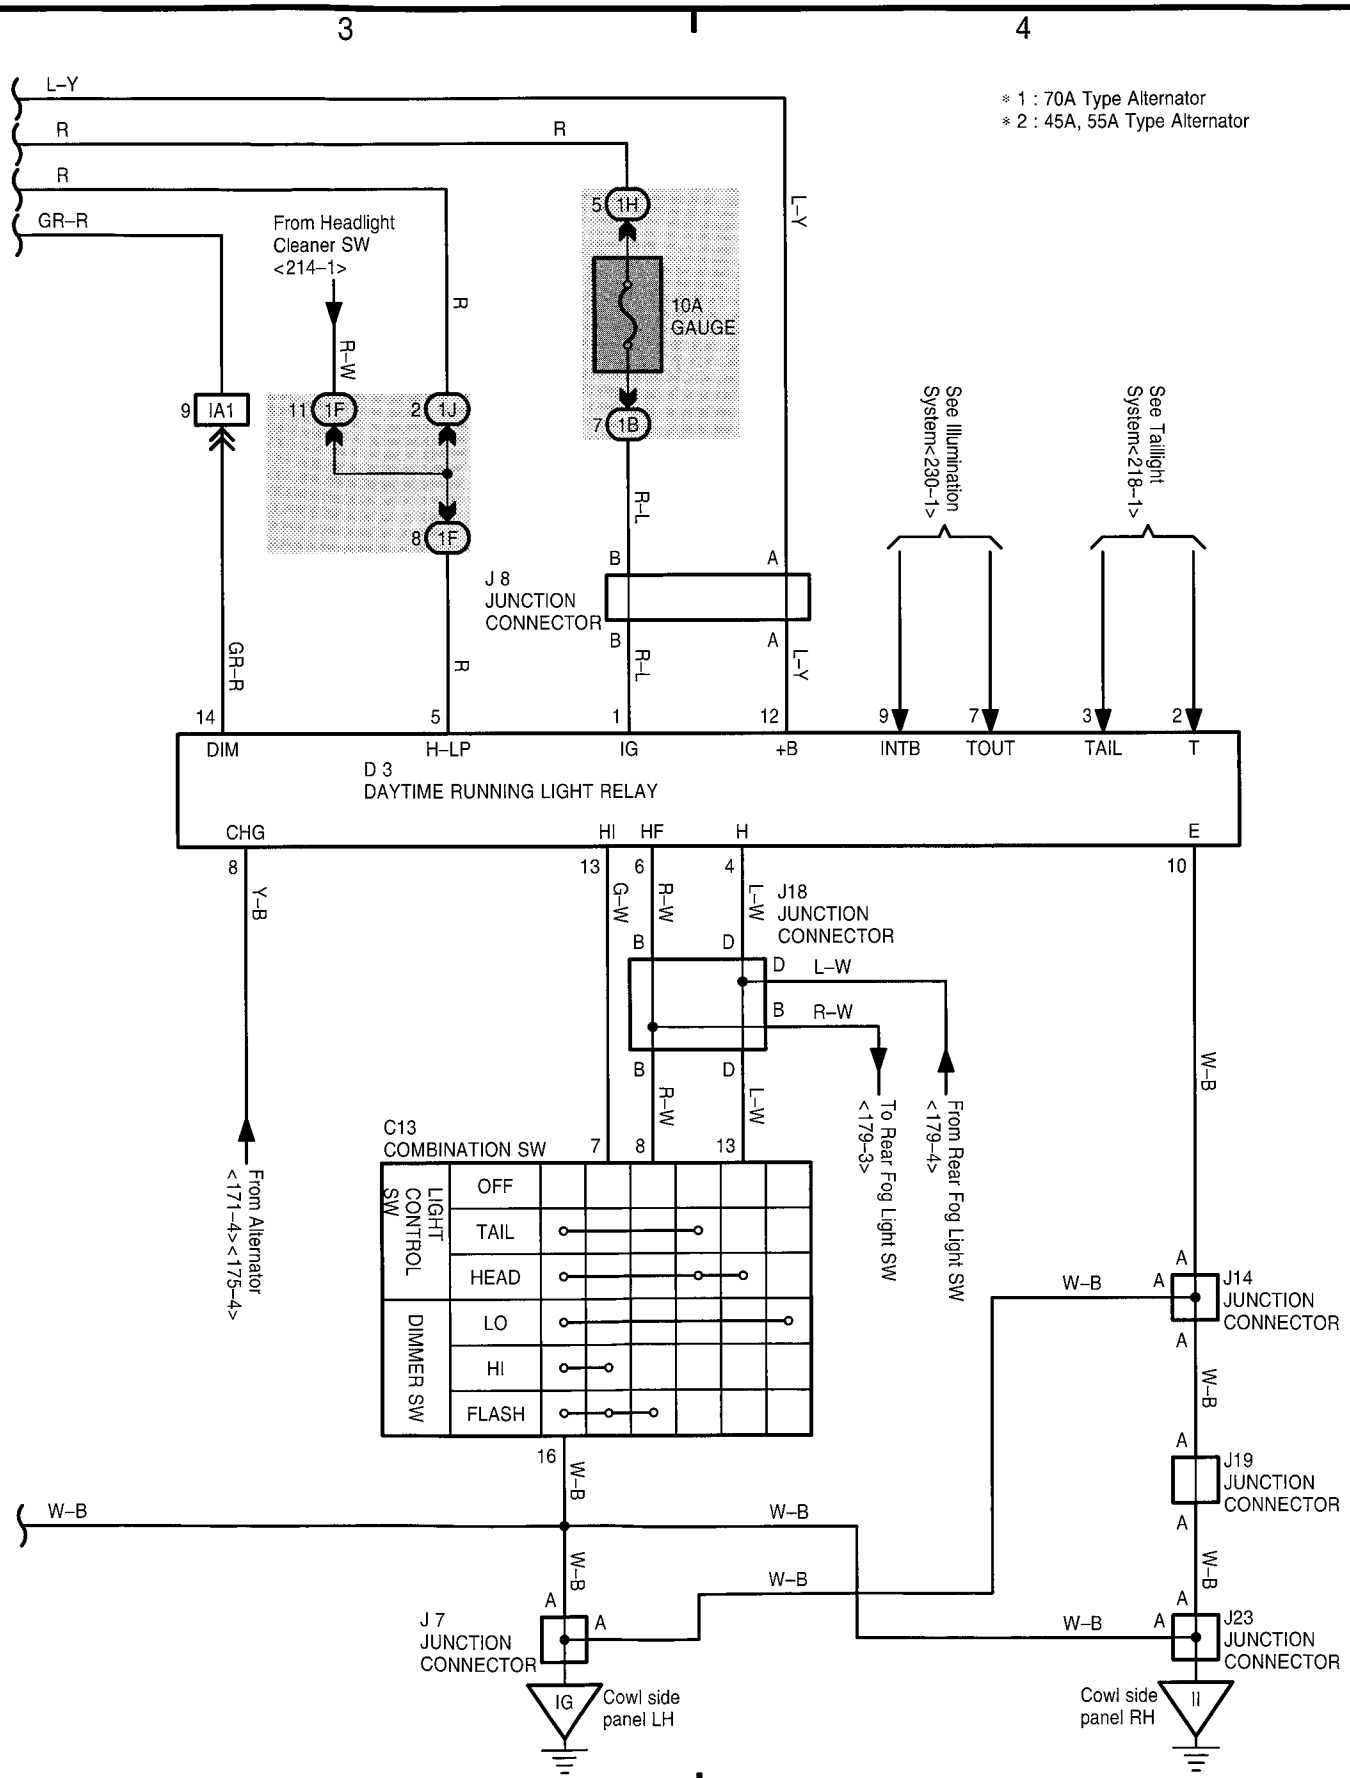

Power Source
Headlight
(w/ Daytime Running Light)
1
2
L-Y
R
R
R
GR-R
R-B
ACC
IG1
AM1
I17
IGNITION SW
DIMMER
RELAY
HEAD
RELAY
40A AM1
15A DOME
100A ALT(*1)
80A ALT(*2)
BATTERY
10A HEAD
(LO LH)
10A HEAD
(LO RH)
10A HEAD
(HI LH)
10A HEAD
(HI RH)
H5
HEADLIGHT
LH
H6
HEADLIGHT
RH
JUNCTION
CONNECTOR
J1 A, J2 B
C10
HIGH BEAM
INDICATOR
LIGHT
[COMB. METER]
EB
Front left
fender apron
W
G
W-G
G-W
L
R-L
R-G
W-B

LHD


3
4
* 1 : 70A Type Alternator
* 2 : 45A, 55A Type Alternator
L-Y
R
R
R
GR-R
From Headlight Cleaner SW <214-1>
R-W
5 1H
10A GAUGE
7 1B
9 IA1
11 1F
2 1J
8 1F
R-L
B A
J 8 JUNCTION CONNECTOR
B A
R-L
L-Y
GR-R
R
See Illumination System<230-1>
See Taillight System<218-1>
14 5 1 12 9 7 3 2
DIM H-LP IG +B INTB TOUT TAIL T
D 3
DAYTIME RUNNING LIGHT RELAY
CHG HI HF H E
8 13 6 4 10
Y-B
G-W
R-W
L-W
J18 JUNCTION CONNECTOR
B D
D L-W
B R-W
B D
R-W
L-W
W-B
To Rear Fog Light SW <179-3>
From Rear Fog Light SW <179-4>
C13
COMBINATION SW
7 8 13
LIGHT CONTROL SW
OFF
TAIL
HEAD
DIMMER SW
LO
HI
FLASH
From Alternator <171-4><175-4>
16
W-B
W-B
W-B
W-B
W-B
W-B
W-B
W-B
A J14 JUNCTION CONNECTOR A
A J19 JUNCTION CONNECTOR A
A J23 JUNCTION CONNECTOR A
A J7 JUNCTION CONNECTOR A
IG
Cowl side panel LH
Cowl side panel RH

LHD