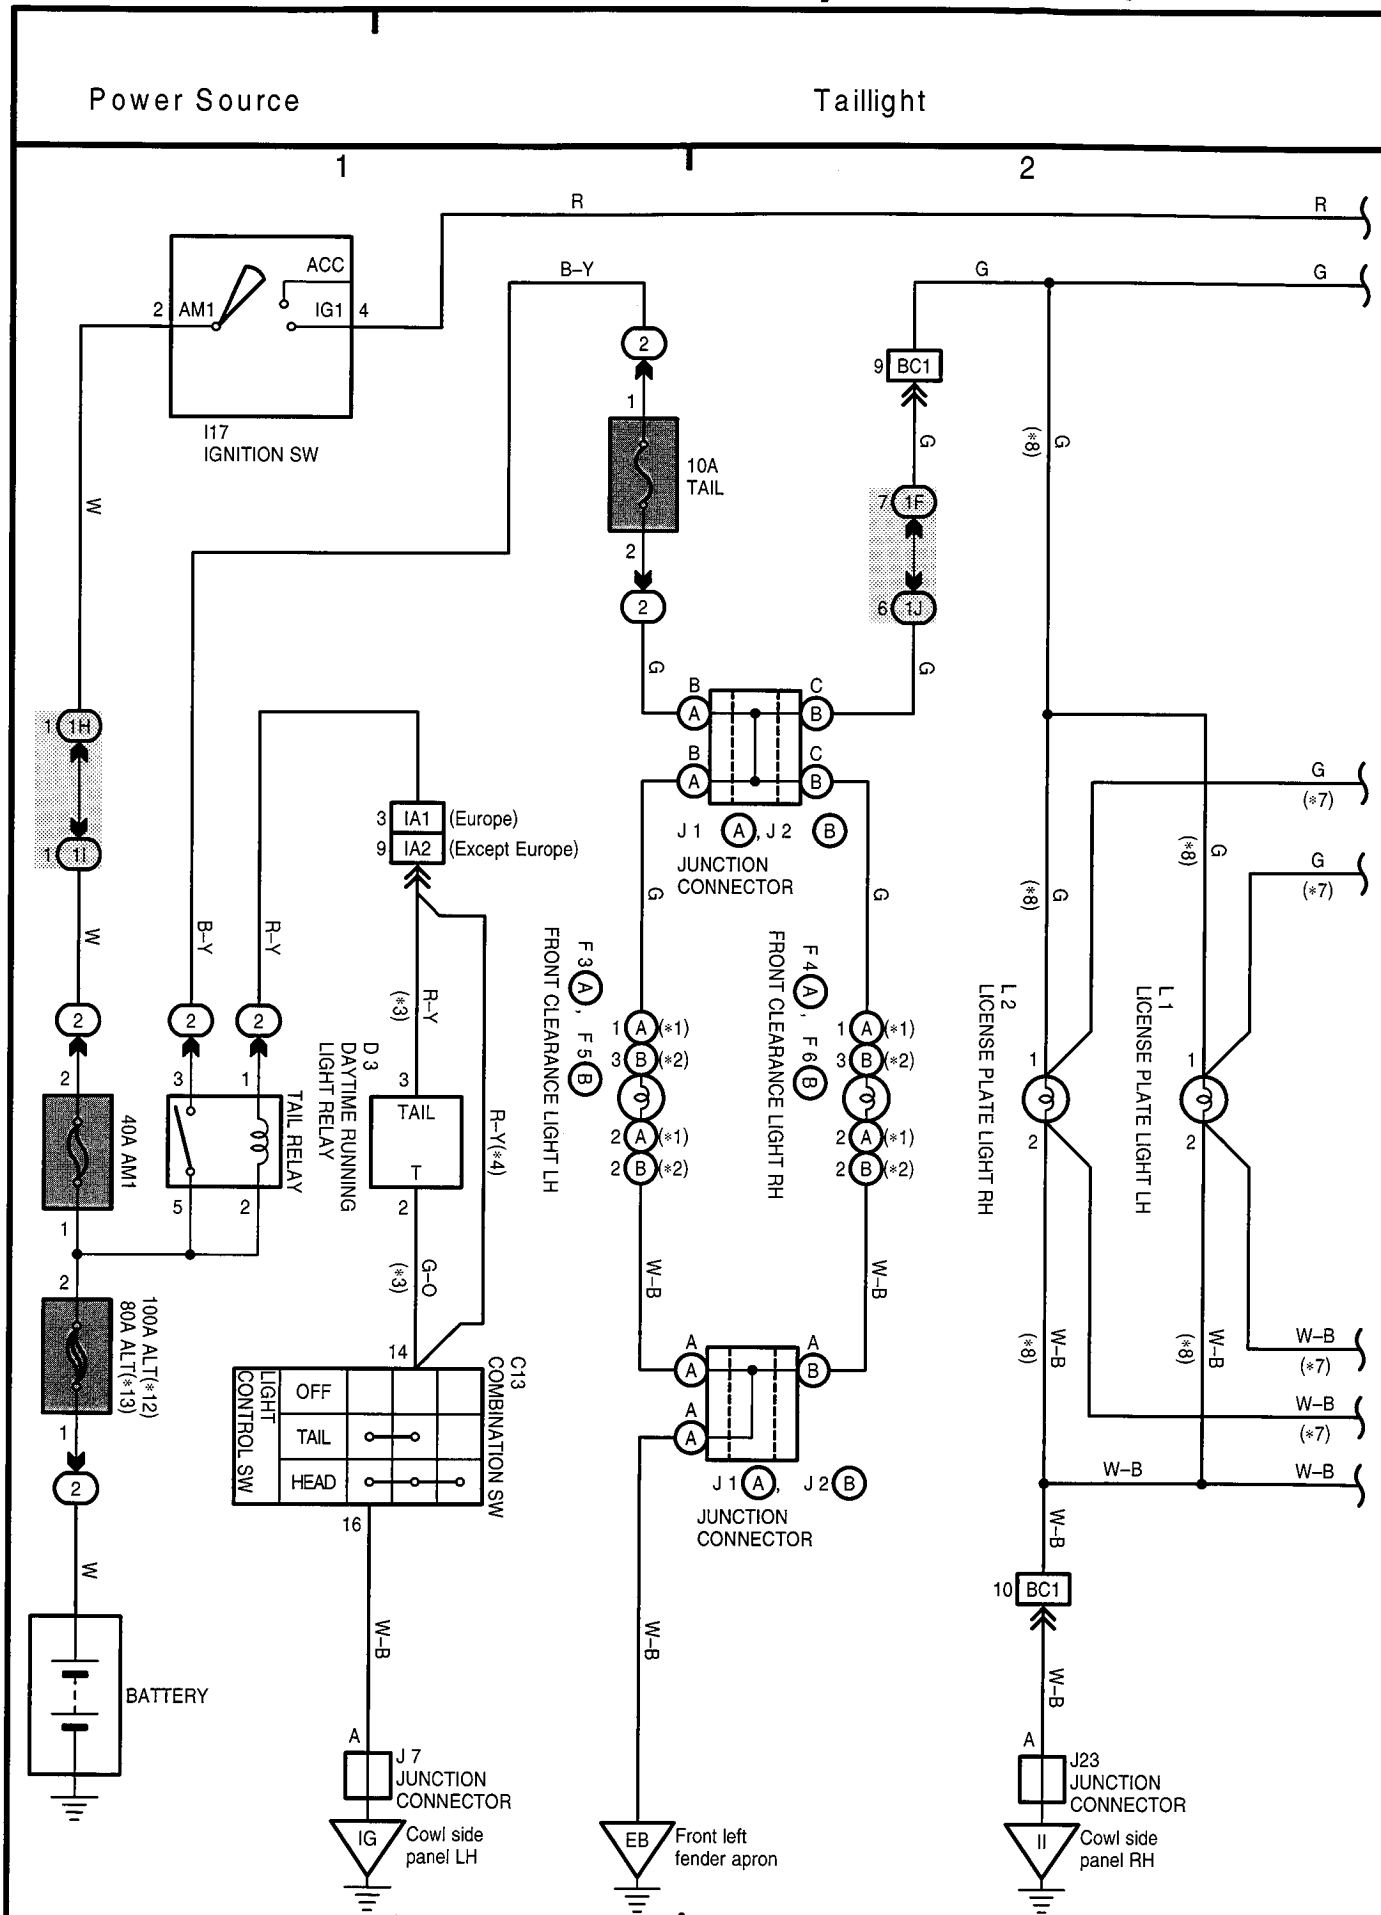
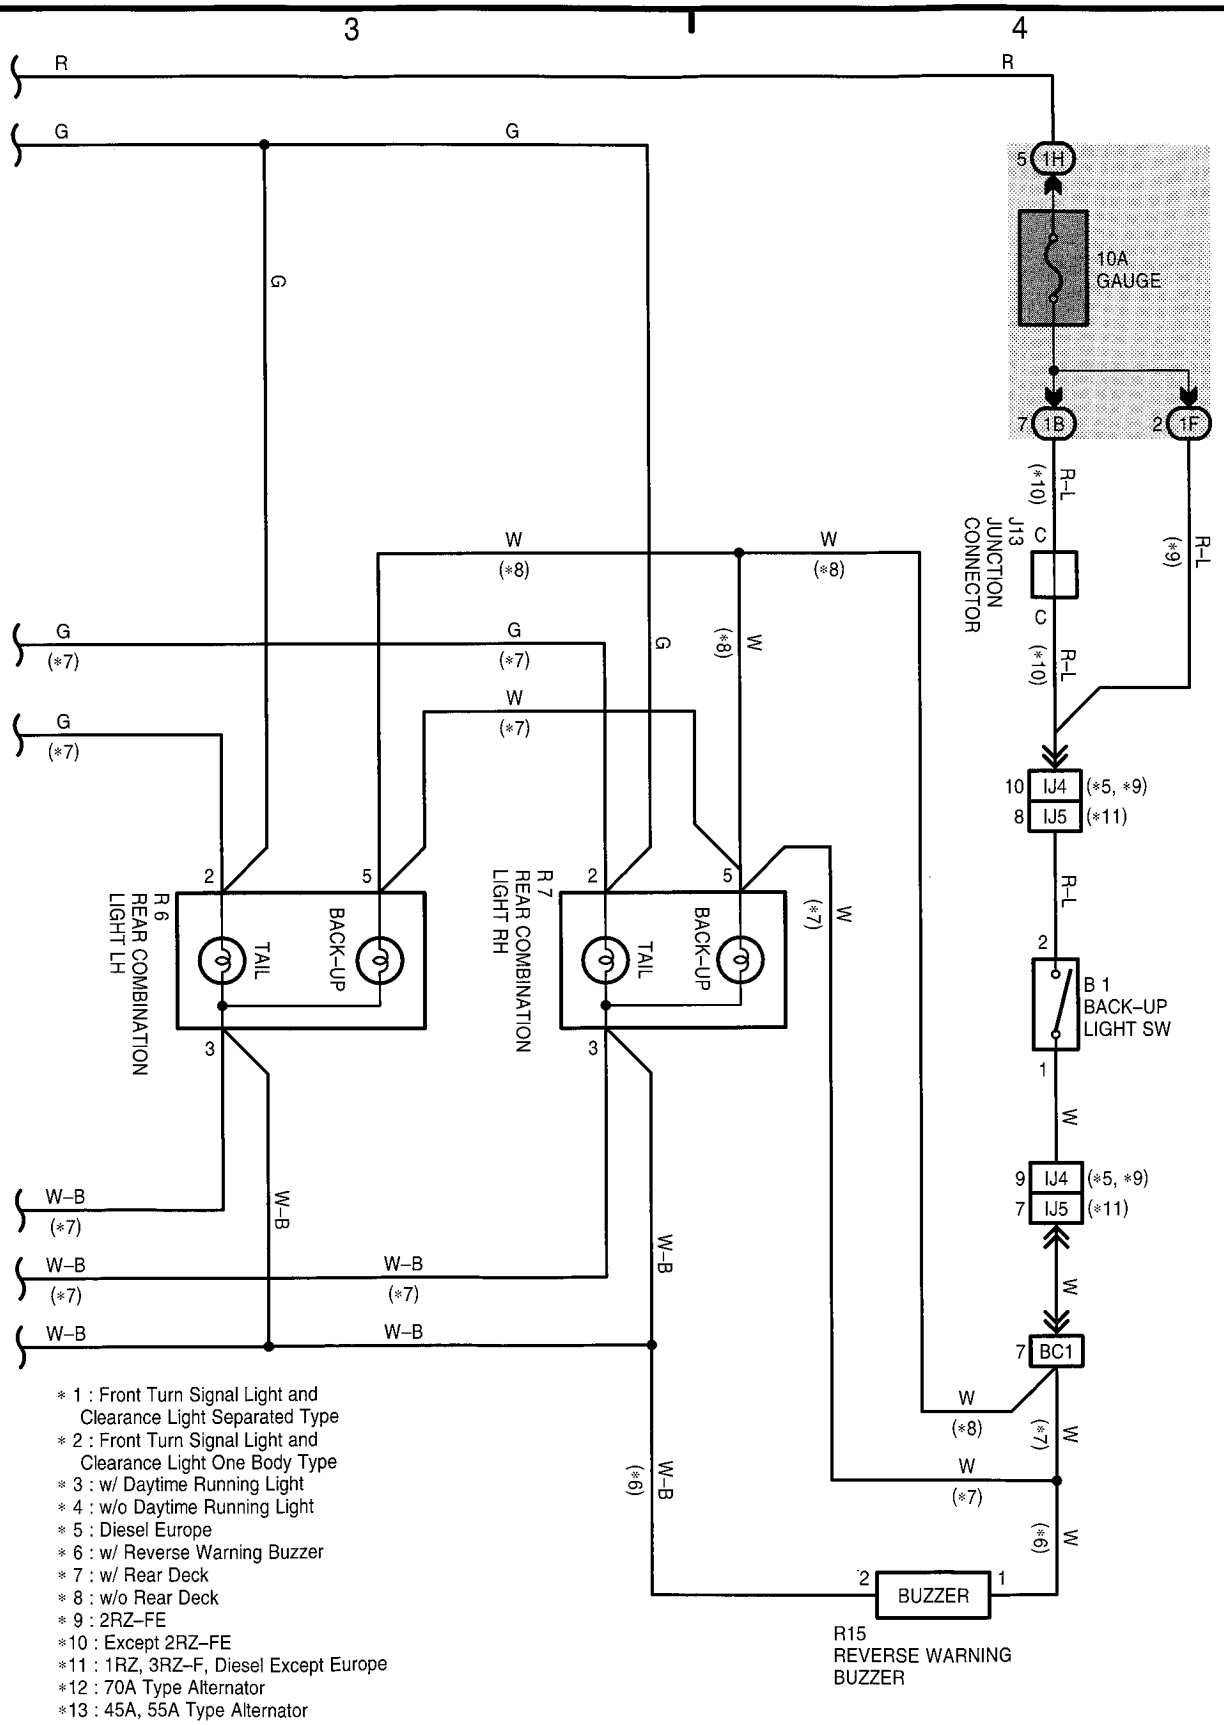

Power Source
Taillight
1
2
ACC
AM1
IG1
I17
IGNITION SW
10A
TAIL
BC1
1F
1J
1H
1I
IA1 (Europe)
IA2 (Except Europe)
J 1 A, J 2 B
JUNCTION
CONNECTOR
F 3 A, F 5 B
FRONT CLEARANCE LIGHT LH
F 4 A, F 6 B
FRONT CLEARANCE LIGHT RH
L 2
LICENSE PLATE LIGHT RH
L 1
LICENSE PLATE LIGHT LH
40A AM1
TAIL RELAY
D 3
DAYTIME RUNNING
LIGHT RELAY
TAIL
100A ALT(*12)
80A ALT(*13)
C13
COMBINATION SW
LIGHT
CONTROL SW
OFF
TAIL
HEAD
BATTERY
J 7
JUNCTION
CONNECTOR
IG
Cowl side
panel LH
EB
Front left
fender apron
J23
JUNCTION
CONNECTOR
II
Cowl side
panel RH
R
B-Y
G
W
R-Y
R-Y(*4)
G-O
W-B
(*1)
(*2)
(*3)
(*7)
(*8)

LHD


3
4
R
G
W
W-B
5 1H
10A GAUGE
7 1B
2 1F
J13 JUNCTION CONNECTOR
C
R-L
(*10)
(*9)
10 IJ4 (*5, *9)
8 IJ5 (*11)
2
B 1 BACK-UP LIGHT SW
1
9 IJ4 (*5, *9)
7 IJ5 (*11)
7 BC1
(*8)
(*7)
(*6)
R6 REAR COMBINATION LIGHT LH
R7 REAR COMBINATION LIGHT RH
TAIL
BACK-UP
2
5
3
BUZZER
R15 REVERSE WARNING BUZZER
* 1 : Front Turn Signal Light and Clearance Light Separated Type
* 2 : Front Turn Signal Light and Clearance Light One Body Type
* 3 : w/ Daytime Running Light
* 4 : w/o Daytime Running Light
* 5 : Diesel Europe
* 6 : w/ Reverse Warning Buzzer
* 7 : w/ Rear Deck
* 8 : w/o Rear Deck
* 9 : 2RZ-FE
*10 : Except 2RZ-FE
*11 : 1RZ, 3RZ-F, Diesel Except Europe
*12 : 70A Type Alternator
*13 : 45A, 55A Type Alternator