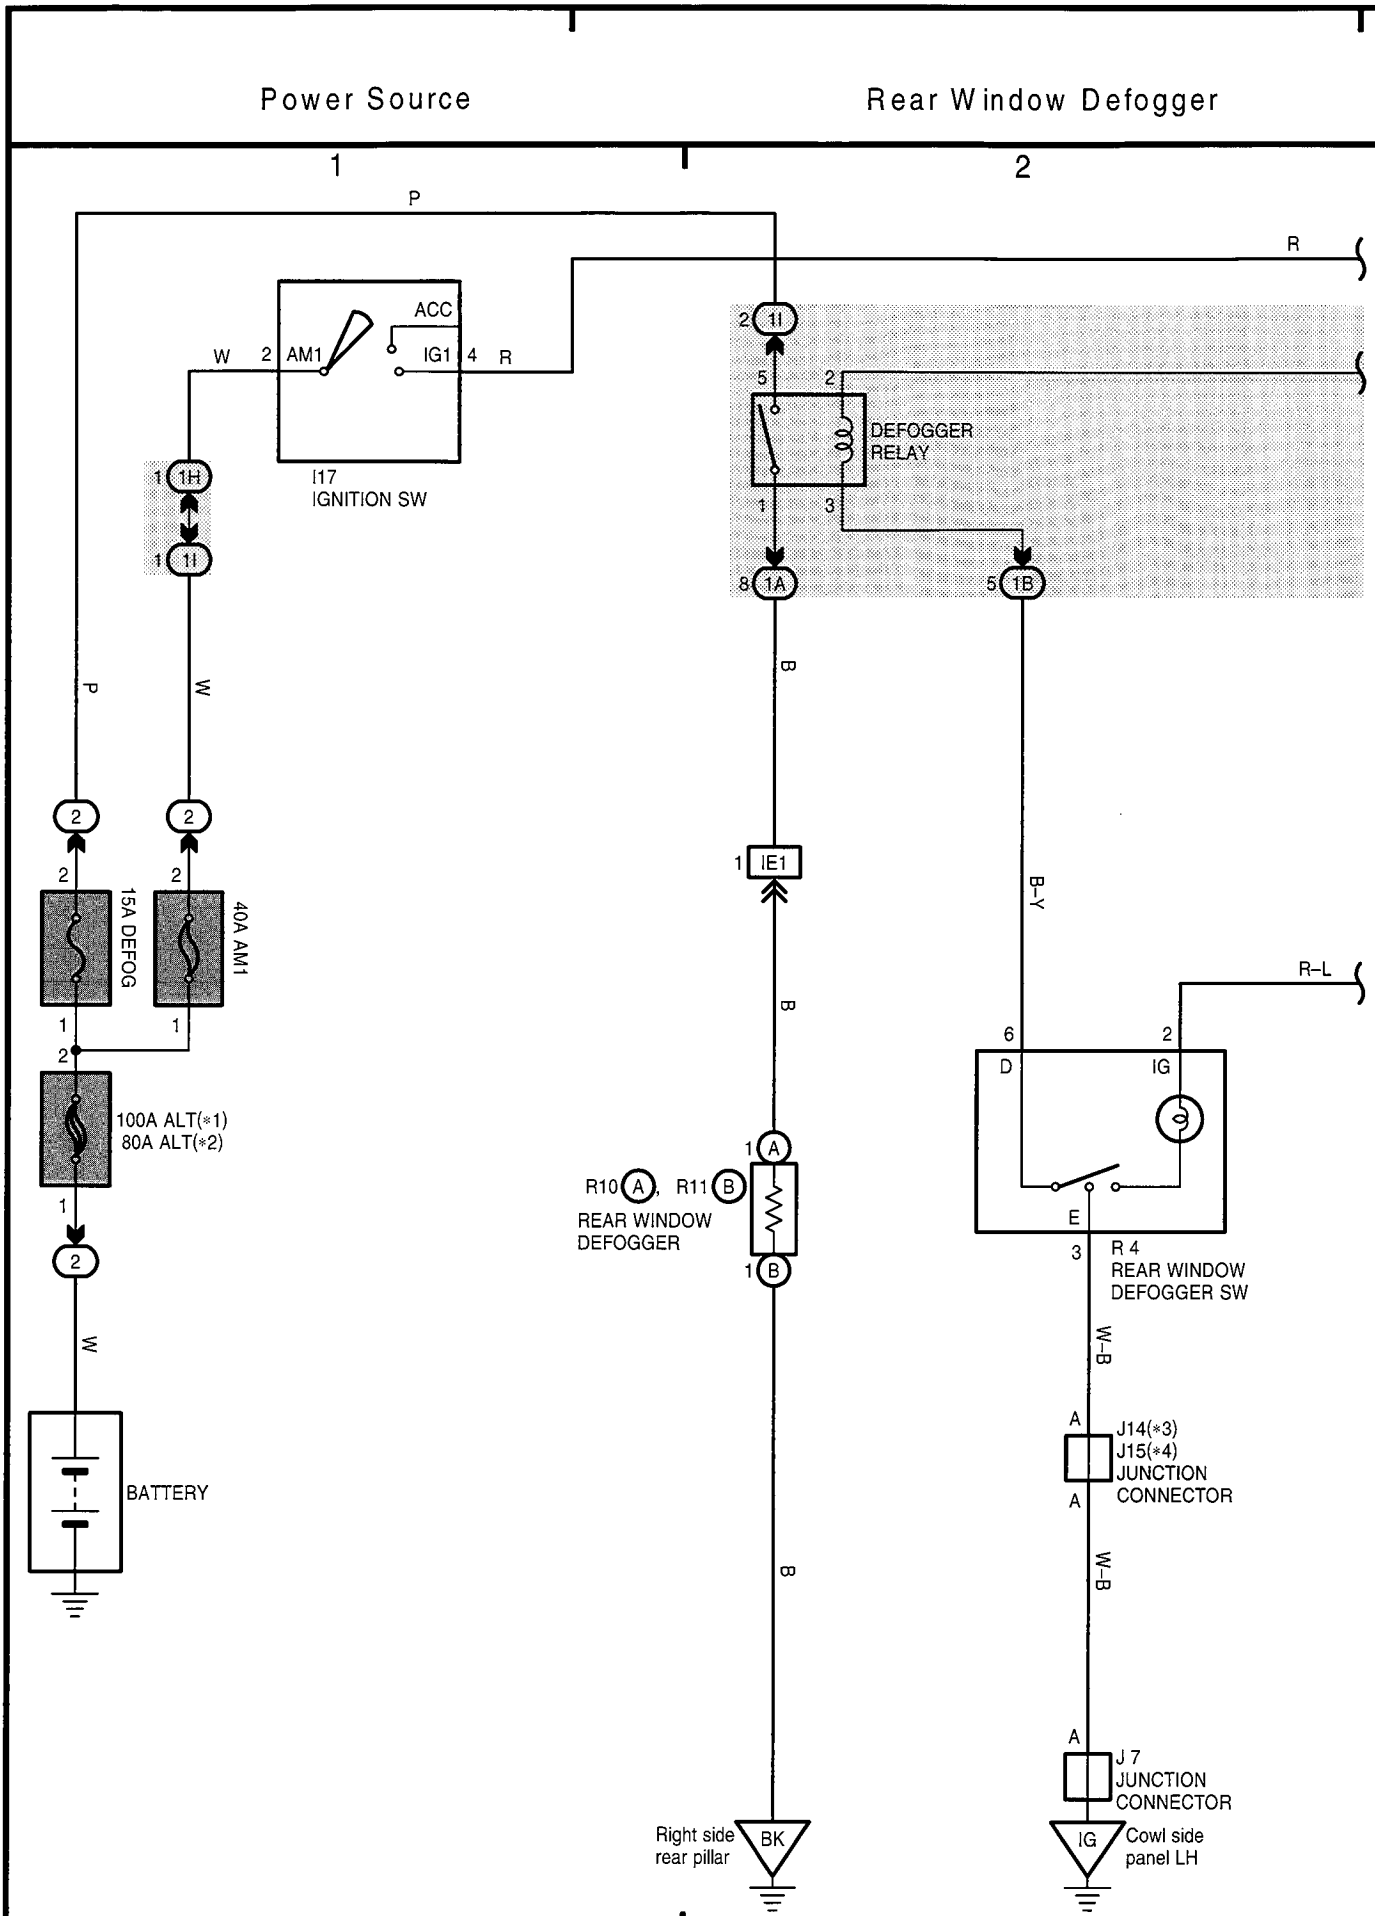
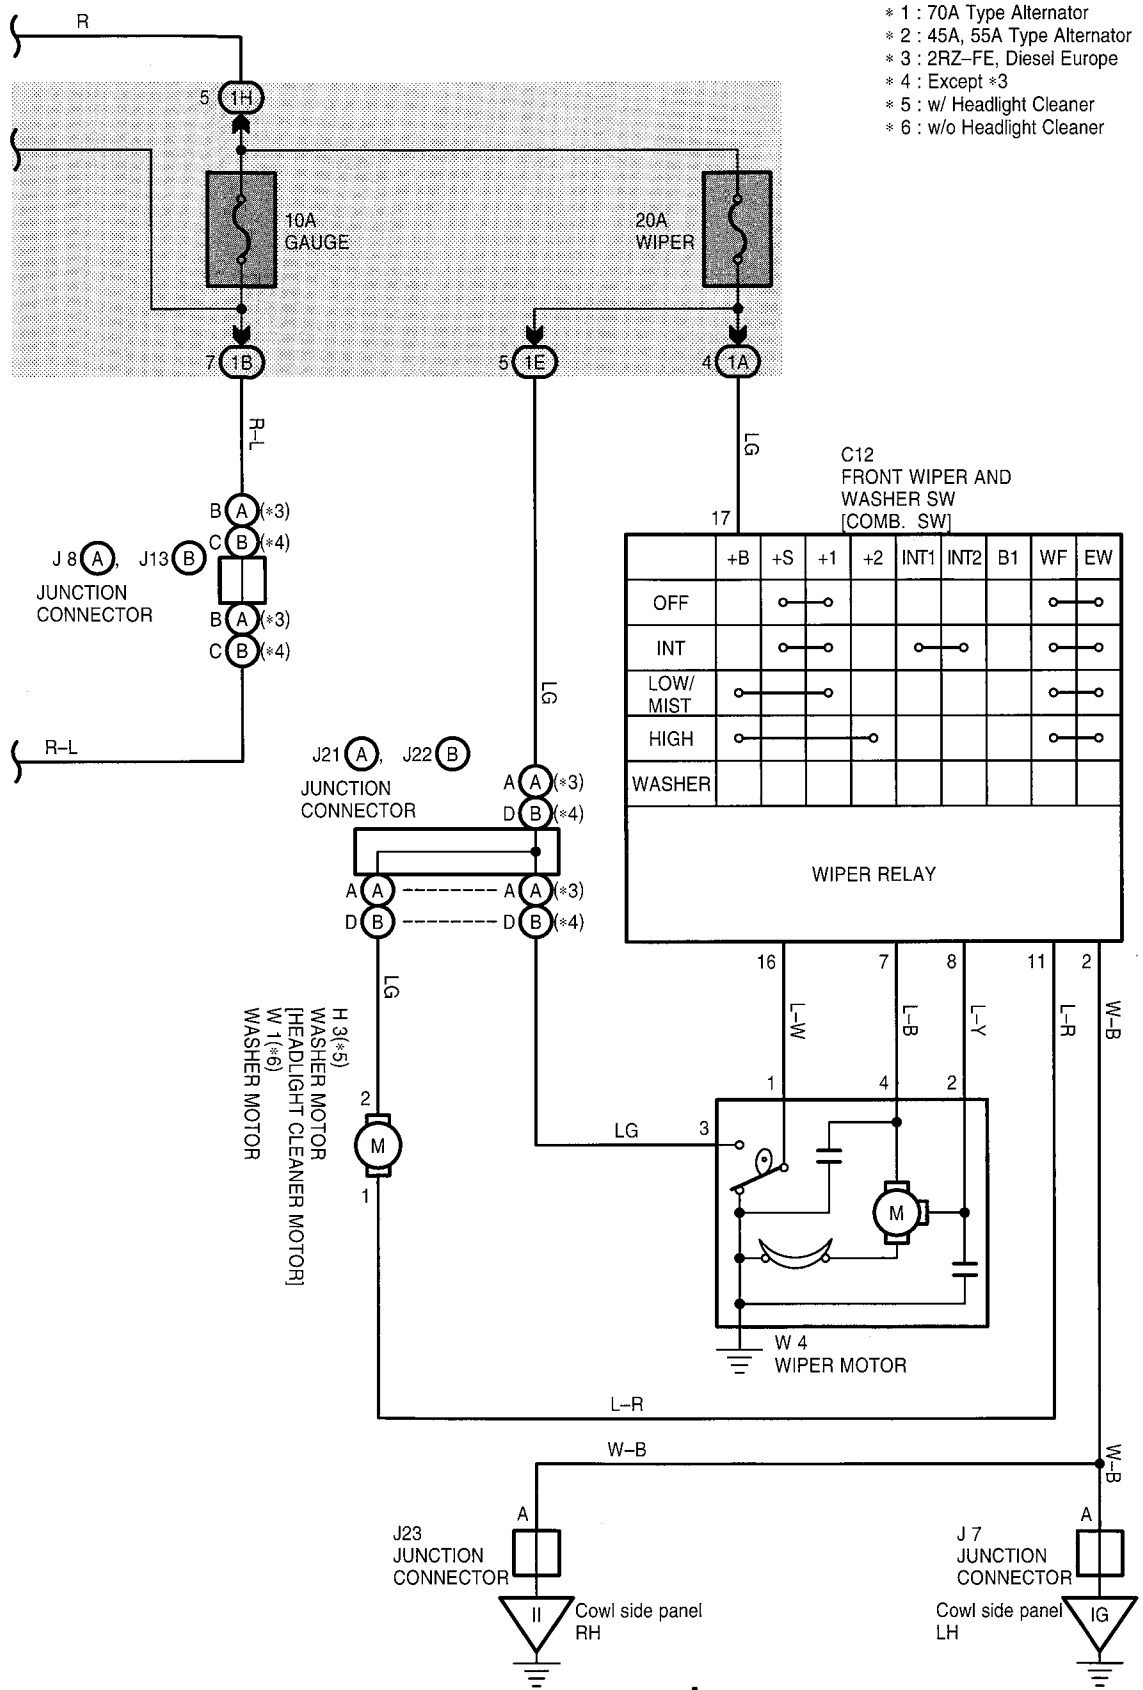

Power Source
Rear Window Defogger
1
2
P
R
ACC
W
2
AM1
IG1
4
R
I17
IGNITION SW
1H
1I
2
1I
5
2
DEFOGGER
RELAY
1
3
8
1A
5
1B
B
P
W
2
2
2
2
15A DEFOG
40A AM1
1
1
2
100A ALT(*1)
80A ALT(*2)
1
2
W
BATTERY
1
IE1
B
B-Y
R-L
6
2
D
IG
E
3
R 4
REAR WINDOW
DEFOGGER SW
1
A
R10
A
,
R11
B
REAR WINDOW
DEFOGGER
1
B
W-B
A
J14(*3)
J15(*4)
JUNCTION
CONNECTOR
A
W-B
B
A
J 7
JUNCTION
CONNECTOR
Right side
rear pillar
BK
IG
Cowl side
panel LH

LHD

3 4


* 1 : 70A Type Alternator
* 2 : 45A, 55A Type Alternator
* 3 : 2RZ–FE, Diesel Europe
* 4 : Except *3
* 5 : w/ Headlight Cleaner
* 6 : w/o Headlight Cleaner
R
5 1H
10A GAUGE
20A WIPER
7 1B
5 1E
4 1A
R–L
LG
C12
FRONT WIPER AND WASHER SW [COMB. SW]
17
+B +S +1 +2 INT1 INT2 B1 WF EW
OFF
INT
LOW/ MIST
HIGH
WASHER
WIPER RELAY
J 8 A, J13 B
JUNCTION CONNECTOR
B A (*3)
C B (*4)
J21 A, J22 B
JUNCTION CONNECTOR
A A (*3)
D B (*4)
16 7 8 11 2
L–W
L–B
L–Y
L–R
W–B
1 4 2
3
LG
H 3(*5)
WASHER MOTOR
[HEADLIGHT CLEANER MOTOR]
W 1(*6)
WASHER MOTOR
2
1
M
W 4
WIPER MOTOR
L–R
W–B
J23 JUNCTION CONNECTOR
A
II
Cowl side panel RH
J 7 JUNCTION CONNECTOR
A
IG
Cowl side panel LH

LHD