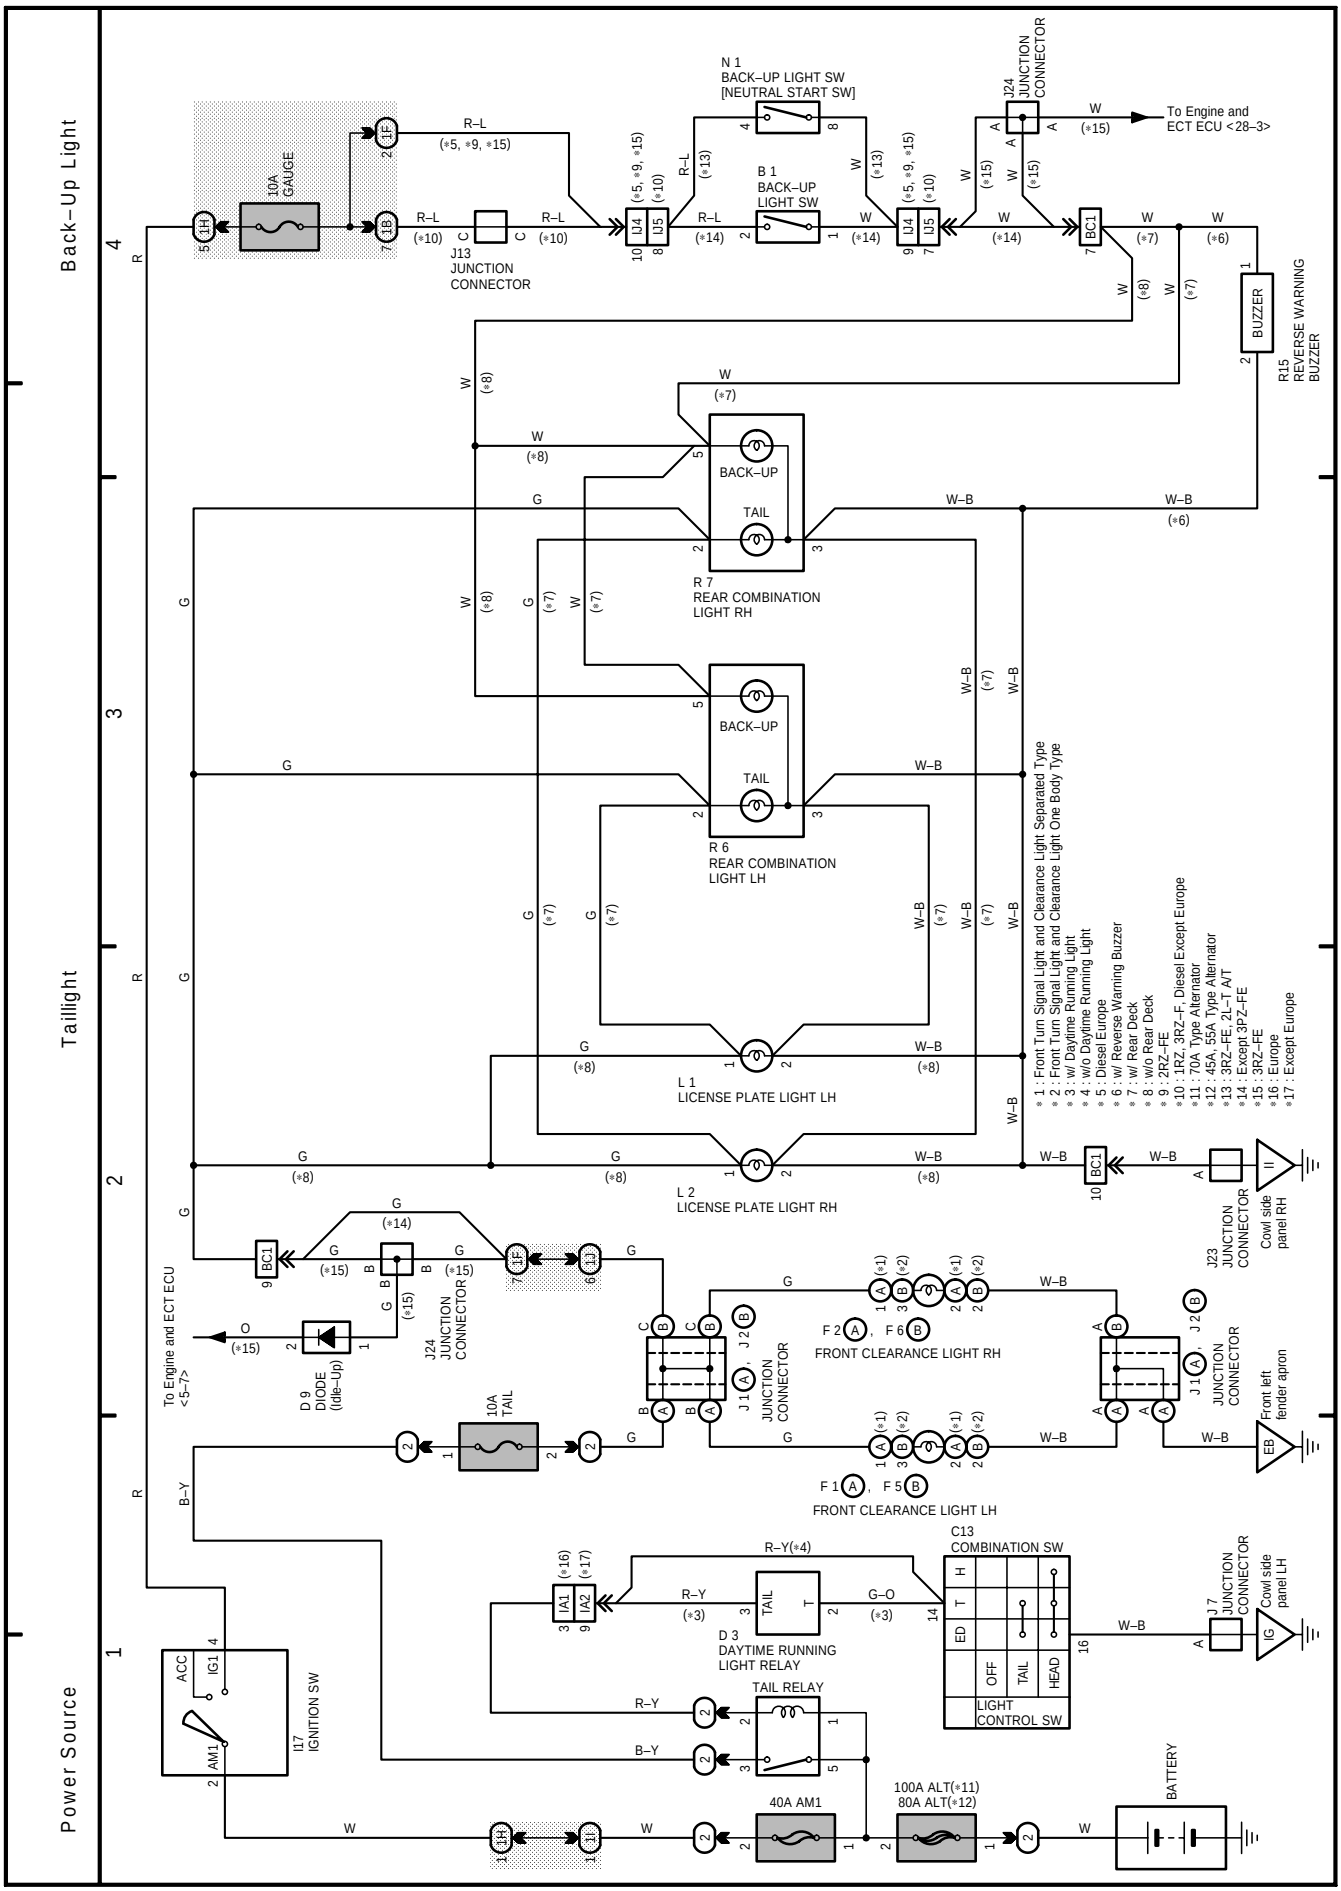

12 HILUX (LHD)
Power Source
Taillight
Back–Up Light
10A GAUGE
J13 JUNCTION CONNECTOR
N 1 BACK–UP LIGHT SW [NEUTRAL START SW]
B 1 BACK–UP LIGHT SW
J24 JUNCTION CONNECTOR
To Engine and ECT ECU <28–3>
R15 REVERSE WARNING BUZZER
R 7 REAR COMBINATION LIGHT RH
R 6 REAR COMBINATION LIGHT LH
L 1 LICENSE PLATE LIGHT LH
L 2 LICENSE PLATE LIGHT RH
BACK–UP
TAIL
J23 JUNCTION CONNECTOR
Cowl side panel RH
J24 JUNCTION CONNECTOR
D 9 DIODE (Idle–Up)
To Engine and ECT ECU <5–7>
10A TAIL
J1 JUNCTION CONNECTOR
F 2 , F 6
FRONT CLEARANCE LIGHT RH
F 1 , F 5
FRONT CLEARANCE LIGHT LH
Front left fender apron
EB
C13 COMBINATION SW
LIGHT CONTROL SW
OFF
TAIL
HEAD
J 7 JUNCTION CONNECTOR
Cowl side panel LH
D 3 DAYTIME RUNNING LIGHT RELAY
TAIL RELAY
I17 IGNITION SW
ACC
IG1
AM1
40A AM1
100A ALT(*11)
80A ALT(*12)
BATTERY
* 1 : Front Turn Signal Light and Clearance Light Separated Type
* 2 : Front Turn Signal Light and Clearance Light One Body Type
* 3 : w/ Daytime Running Light
* 4 : w/o Daytime Running Light
* 5 : Diesel Europe
* 6 : w/ Reverse Warning Buzzer
* 7 : w/ Rear Deck
* 8 : w/o Rear Deck
* 9 : 2RZ–FE
* 10 : 1RZ, 3RZ–F, Diesel Except Europe
* 11 : 70A Type Alternator
* 12 : 45A, 55A Type Alternator
* 13 : 3RZ–FE, 2L–T A/T
* 14 : Except 3PZ–FE
* 15 : 3RZ–FE
* 16 : Europe
* 17 : Except Europe