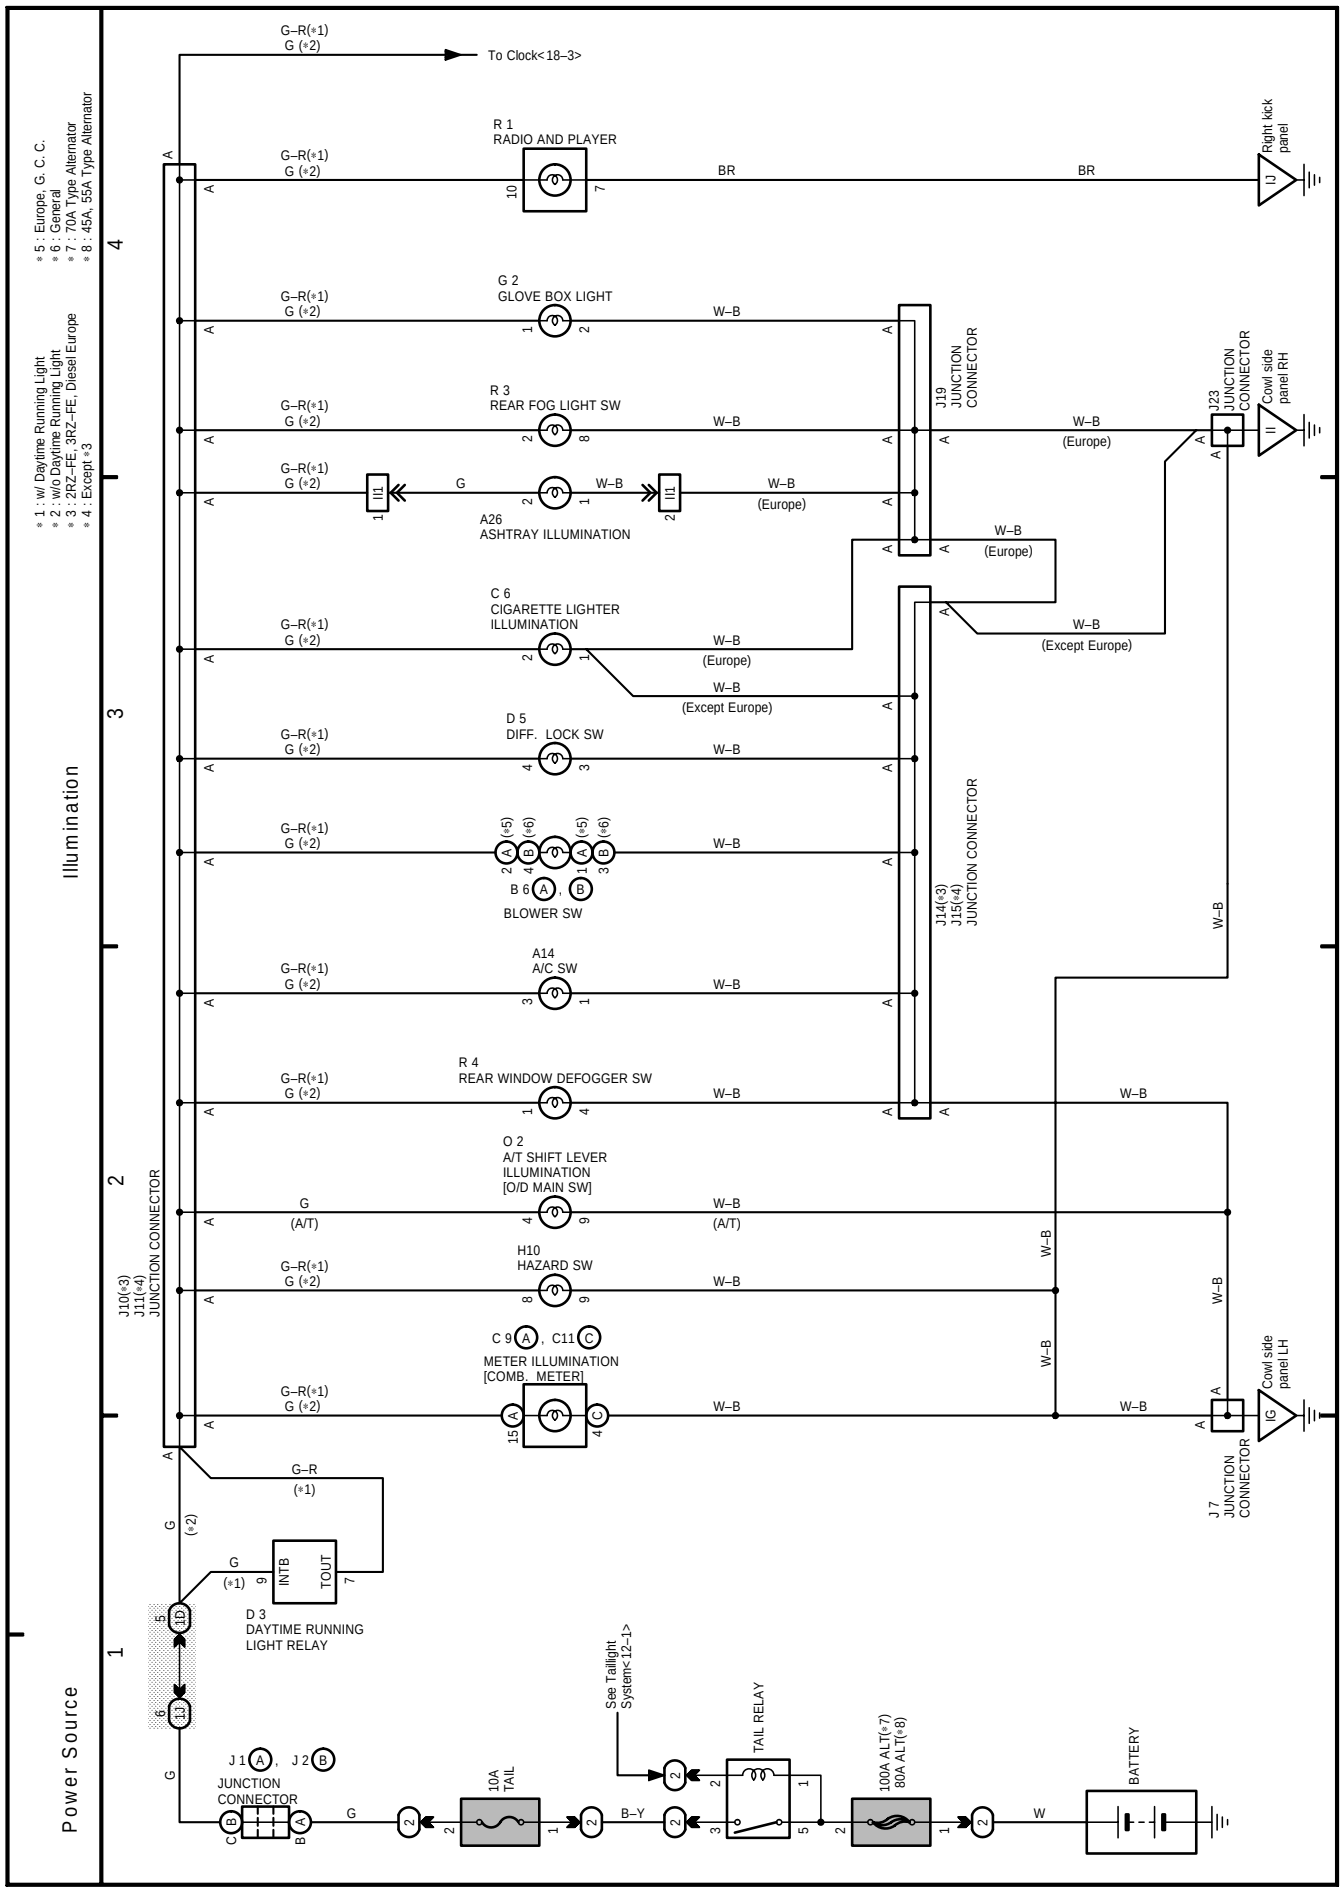

Power Source
Illumination
* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light
* 3 : 2RZ–FE, 3RZ–FE, Diesel Europe
* 4 : Except * 3
* 5 : Europe, G, C, C.
* 6 : General
* 7 : 70A Type Alternator
* 8 : 45A, 55A Type Alternator
To Clock<18–3>
R 1
RADIO AND PLAYER
Right kick panel
G 2
GLOVE BOX LIGHT
R 3
REAR FOG LIGHT SW
A26
ASHTRAY ILLUMINATION
C 6
CIGARETTE LIGHTER
ILLUMINATION
D 5
DIFF. LOCK SW
B 6
BLOWER SW
A14
A/C SW
R 4
REAR WINDOW DEFOGGER SW
O 2
A/T SHIFT LEVER
ILLUMINATION
[O/D MAIN SW]
H10
HAZARD SW
C 9, C11
METER ILLUMINATION
[COMB. METER]
J19
JUNCTION
CONNECTOR
J23
JUNCTION
CONNECTOR
Cowl side panel RH
J14(*3)
J15(*4)
JUNCTION CONNECTOR
J10(*3)
J11(*4)
JUNCTION CONNECTOR
Cowl side panel LH
J7
JUNCTION
CONNECTOR
D 3
DAYTIME RUNNING
LIGHT RELAY
INTB
TOUT
J 1, J 2
JUNCTION
CONNECTOR
10A
TAIL
See Taillight System<12–1>
TAIL RELAY
100A ALT(*7)
80A ALT(*8)
BATTERY
G–R(*1)
G (*2)
G–R
(*1)
G
(*2)
G
(*1)
W–B
(Europe)
W–B
(Except Europe)
G
(A/T)
W–B
(A/T)
B–Y
W