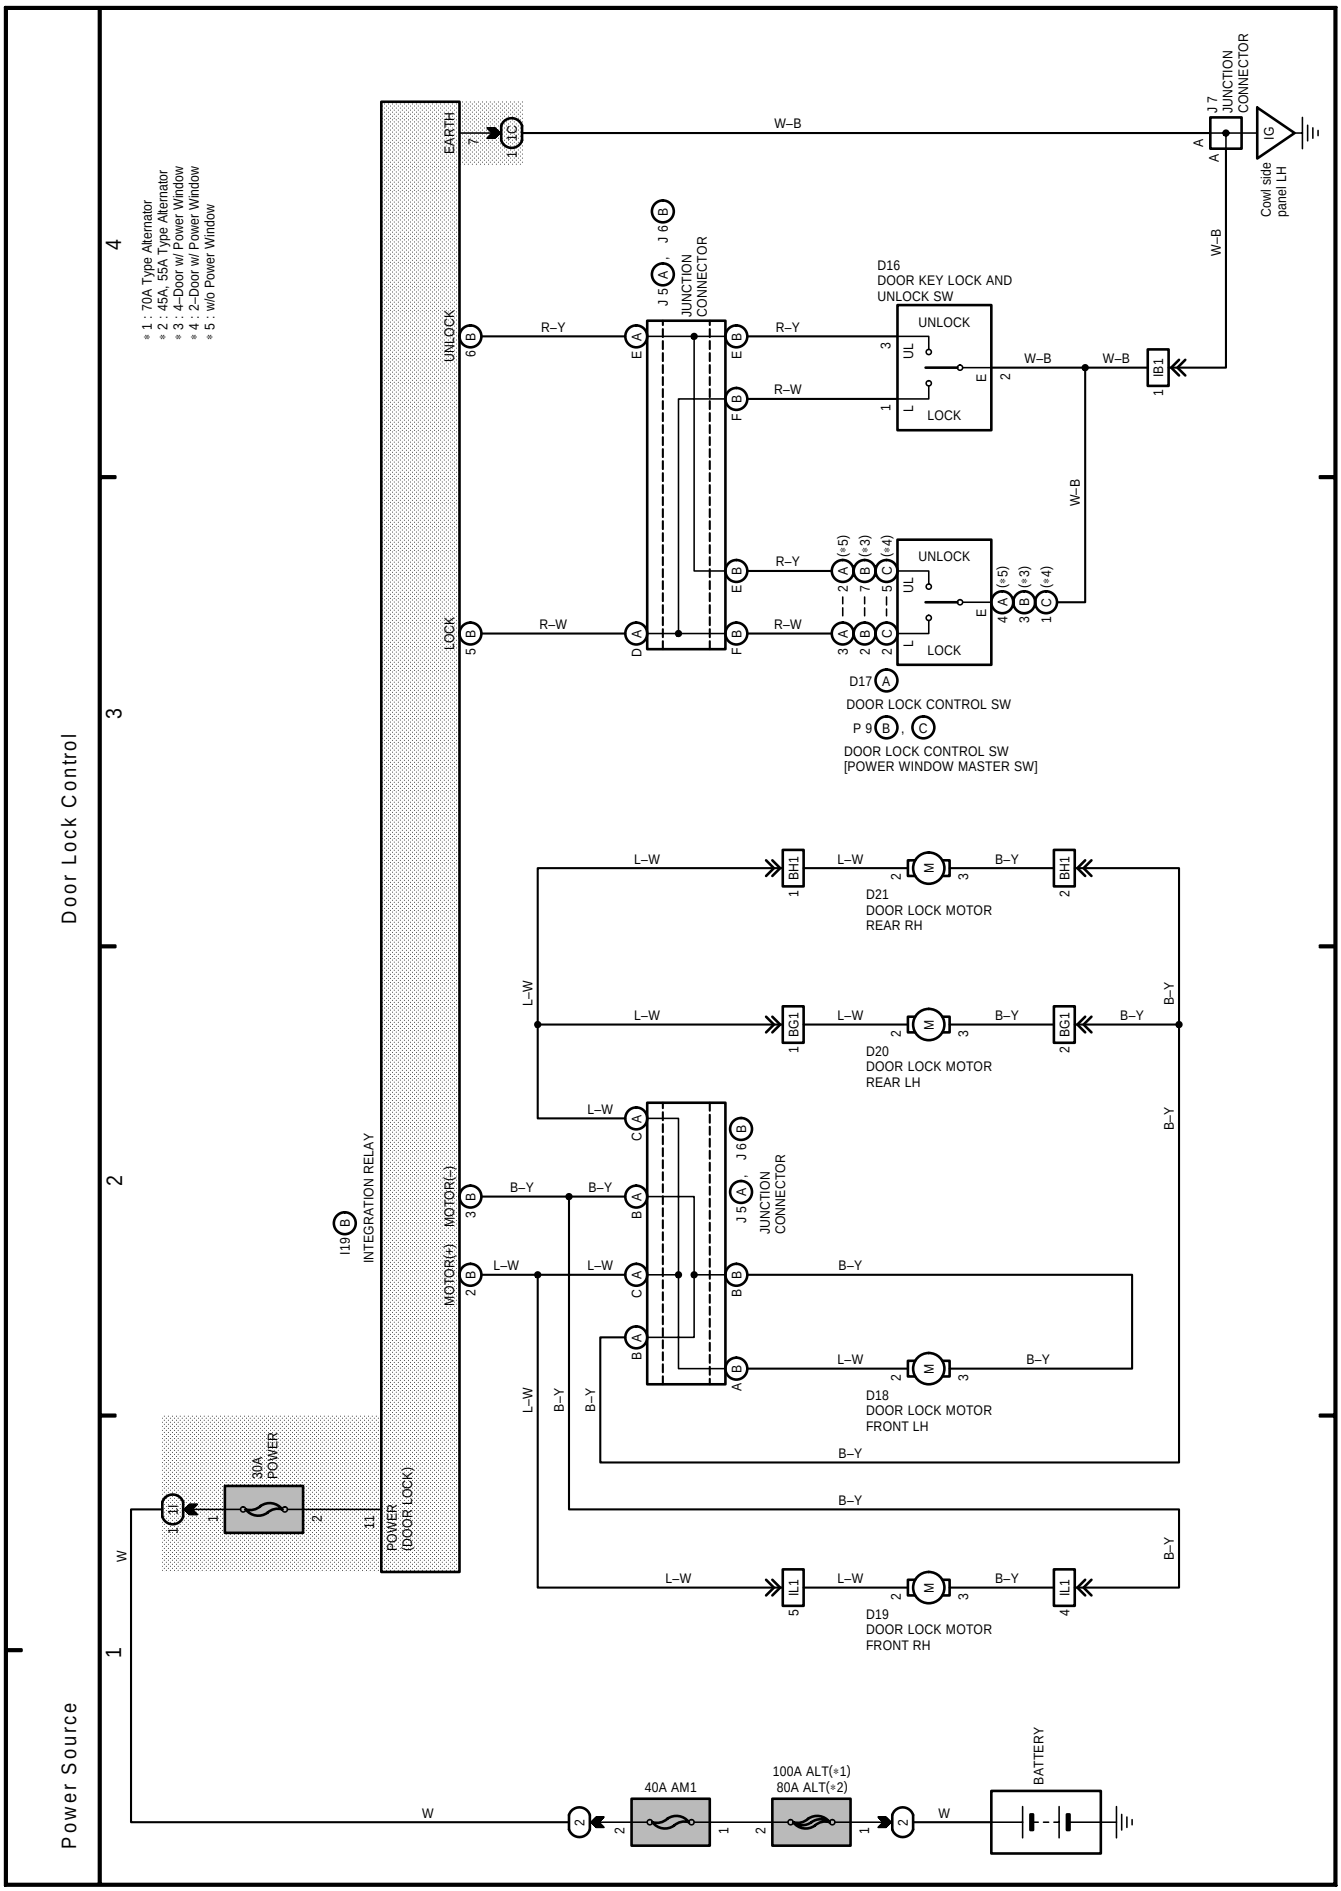

16 HILUX (LHD)
Power Source
Door Lock Control
1
2
3
4
* 1 : 70A Type Alternator
* 2 : 45A, 55A Type Alternator
* 3 : 4-Door w/ Power Window
* 4 : 2-Door w/ Power Window
* 5 : w/o Power Window
BATTERY
100A ALT(*1)
80A ALT(*2)
40A AM1
30A POWER
POWER (DOOR LOCK)
EARTH
W–B
Cowl side panel LH
J7 JUNCTION CONNECTOR
IG
IB1
D16
DOOR KEY LOCK AND UNLOCK SW
UNLOCK
LOCK
D17
DOOR LOCK CONTROL SW
P9
DOOR LOCK CONTROL SW [POWER WINDOW MASTER SW]
J5, J6
JUNCTION CONNECTOR
I19
INTEGRATION RELAY
MOTOR(+)
MOTOR(–)
D18
DOOR LOCK MOTOR FRONT LH
D19
DOOR LOCK MOTOR FRONT RH
D20
DOOR LOCK MOTOR REAR LH
D21
DOOR LOCK MOTOR REAR RH
BH1
BG1
IL1
R–Y
R–W
L–W
B–Y
W