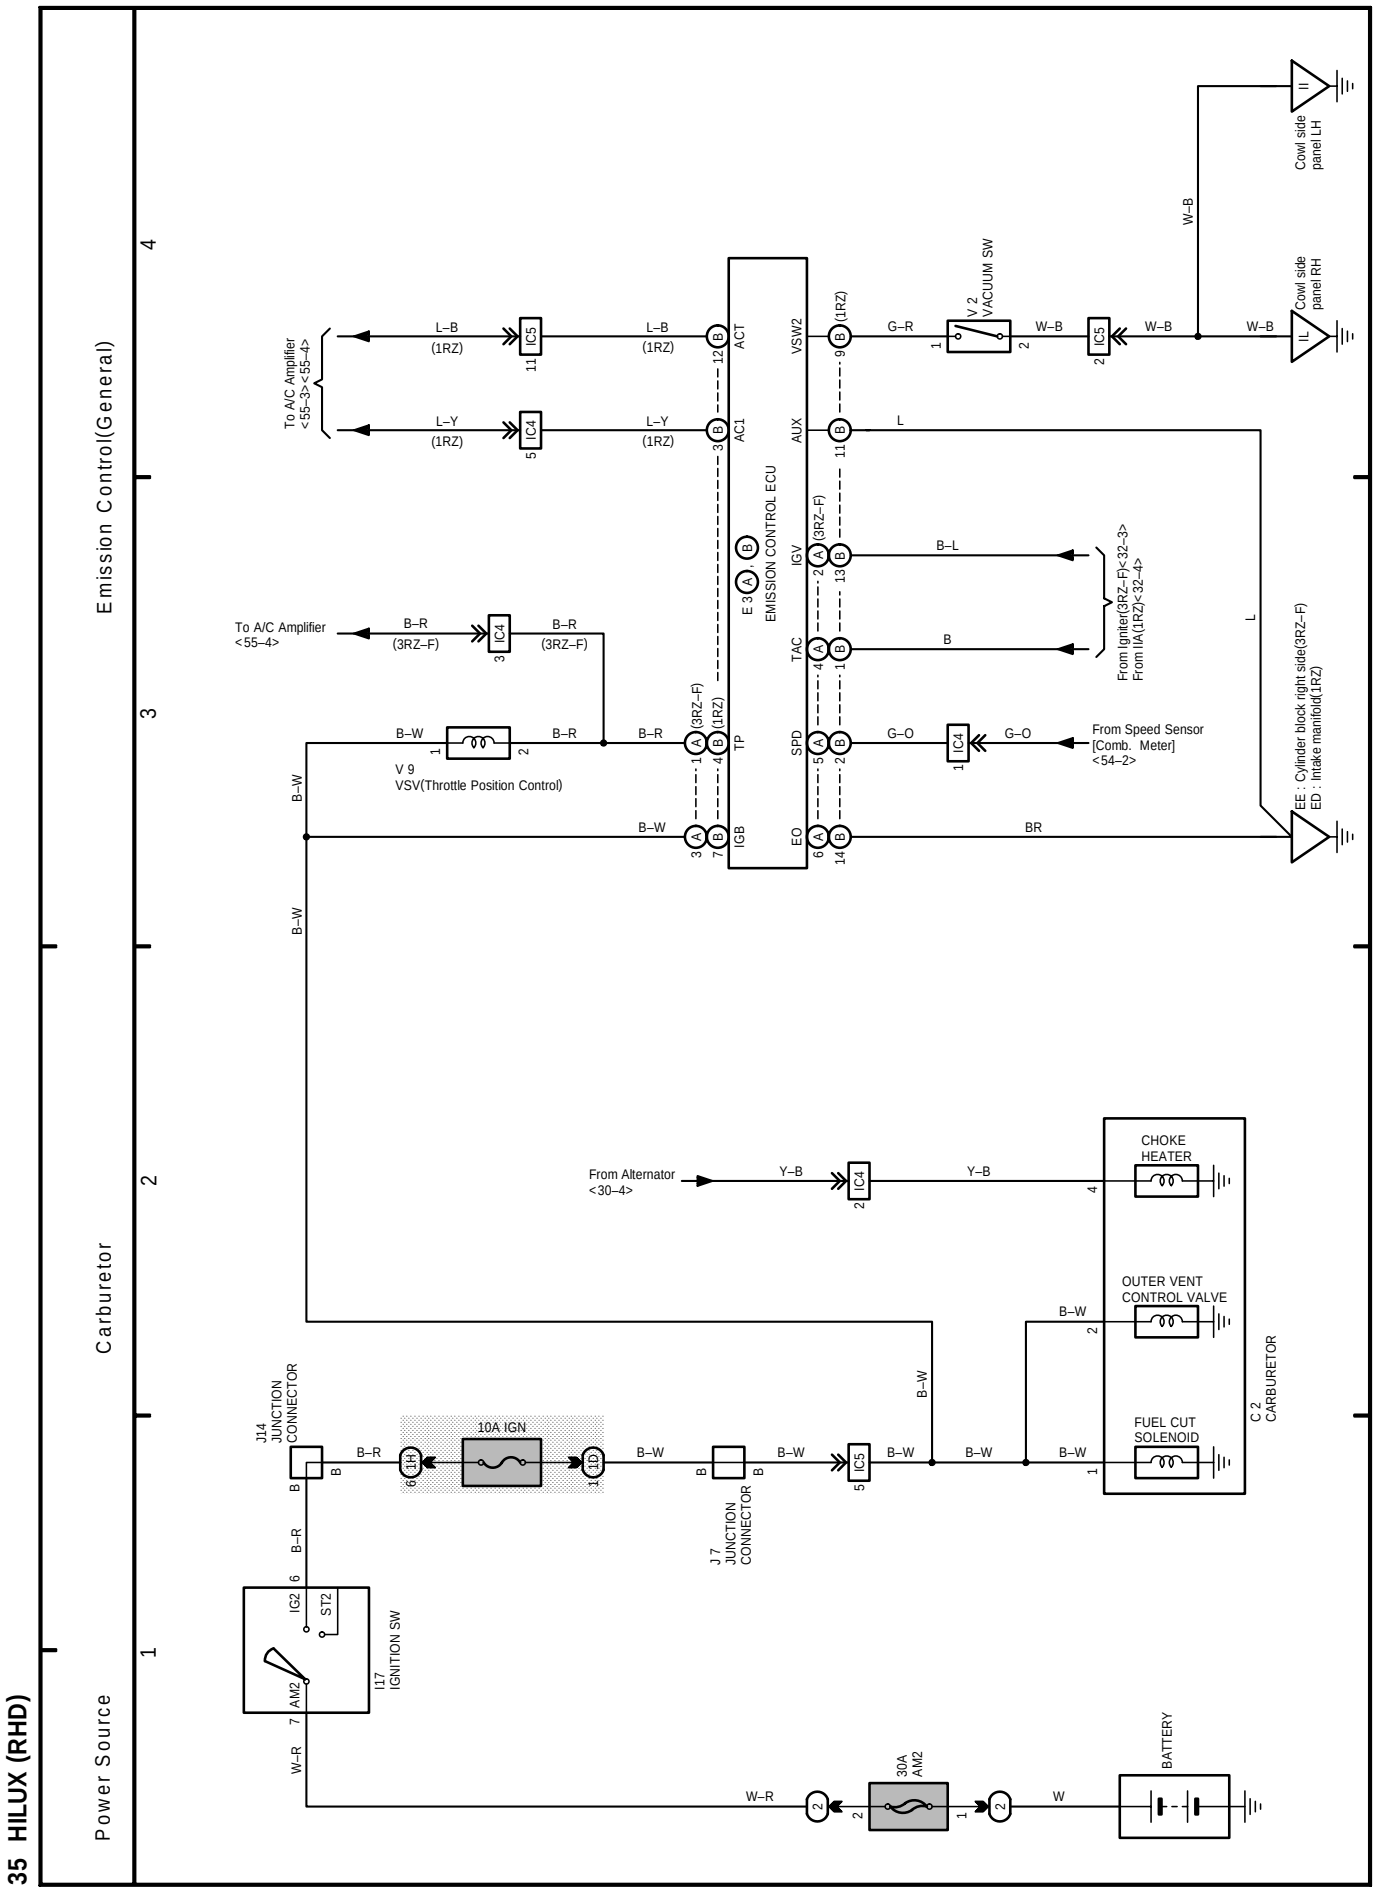

35 HILUX (RHD)
Power Source
Carburetor
Emission Control(General)
1
2
3
4
EMISSION CONTROL ECU
E 3
To A/C Amplifier <55–3><55–4>
To A/C Amplifier <55–4>
V 9 VSV(Throttle Position Control)
V 2 VACUUM SW
From Igniter(3RZ–F)<32–3> From IIA(1RZ)<32–4>
From Speed Sensor [Comb. Meter] <54–2>
From Alternator <30–4>
Cowl side panel LH
Cowl side panel RH
EE : Cylinder block right side(3RZ–F)
ED : Intake manifold(1RZ)
CHOKE HEATER
OUTER VENT CONTROL VALVE
FUEL CUT SOLENOID
C 2 CARBURETOR
J14 JUNCTION CONNECTOR
J7 JUNCTION CONNECTOR
10A IGN
I17 IGNITION SW
30A AM2
BATTERY