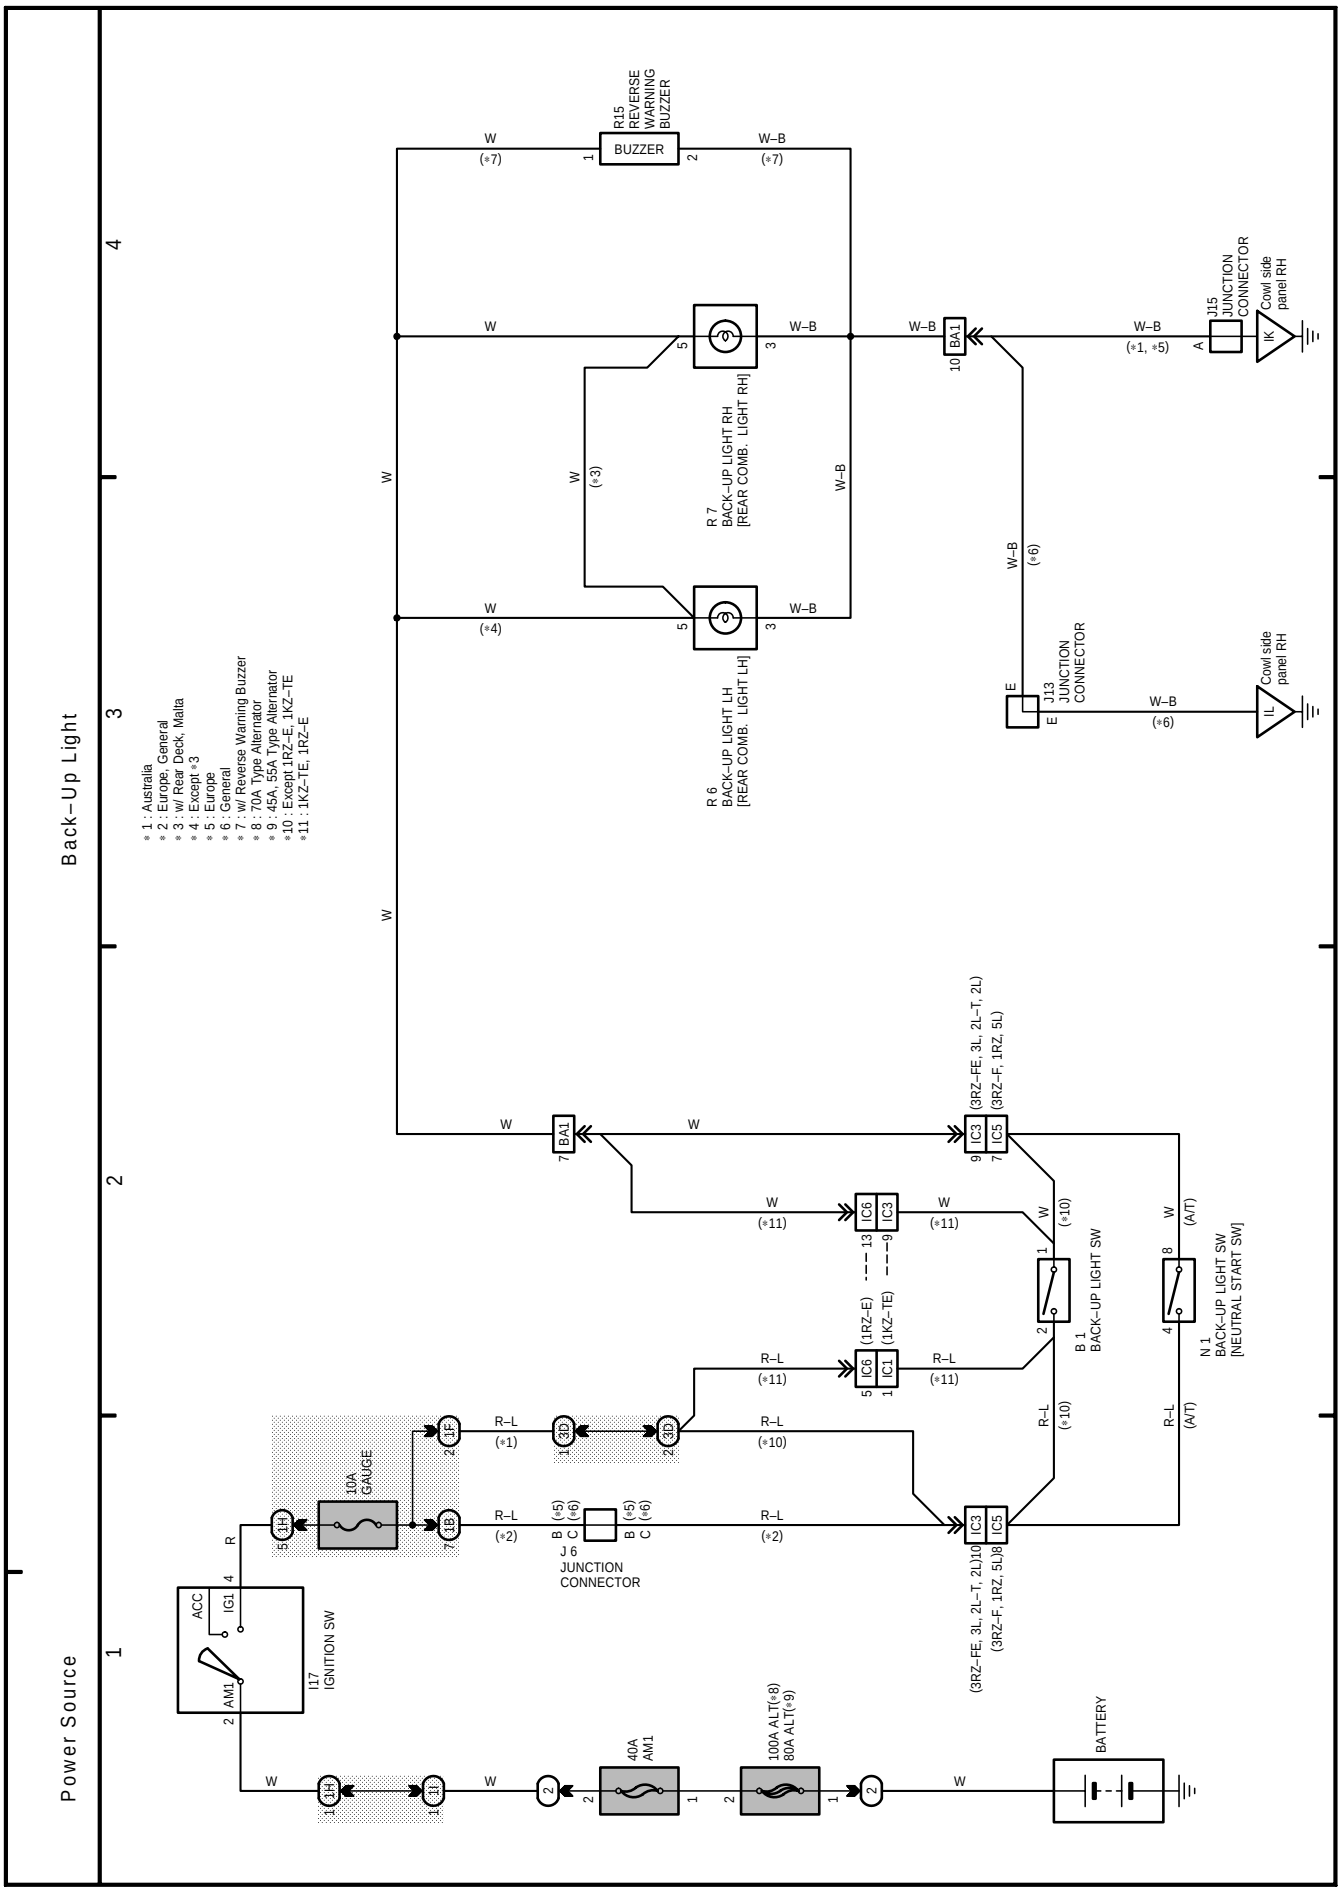

42 HILUX (RHD)
Power Source
Back–Up Light
1
2
3
4
* 1 : Australia
* 2 : Europe, General
* 3 : w/ Rear Deck, Malta
* 4 : Except *3
* 5 : Europe
* 6 : General
* 7 : w/ Reverse Warning Buzzer
* 8 : 70A Type Alternator
* 9 : 45A, 55A Type Alternator
*10 : Except 1RZ–E, 1KZ–TE
*11 : 1KZ–TE, 1RZ–E
R15 REVERSE WARNING BUZZER
BUZZER
R 7 BACK–UP LIGHT RH [REAR COMB. LIGHT RH]
R 6 BACK–UP LIGHT LH [REAR COMB. LIGHT LH]
J15 JUNCTION CONNECTOR
Cowl side panel RH
J13 JUNCTION CONNECTOR
B 1 BACK–UP LIGHT SW
N 1 BACK–UP LIGHT SW [NEUTRAL START SW]
J 6 JUNCTION CONNECTOR
I17 IGNITION SW
10A GAUGE
40A AM1
100A ALT(*8) 80A ALT(*9)
BATTERY
(3RZ–FE, 3L, 2L–T, 2L) (3RZ–F, 1RZ, 5L)
(1RZ–E) (1KZ–TE)
ACC
IG1
AM1