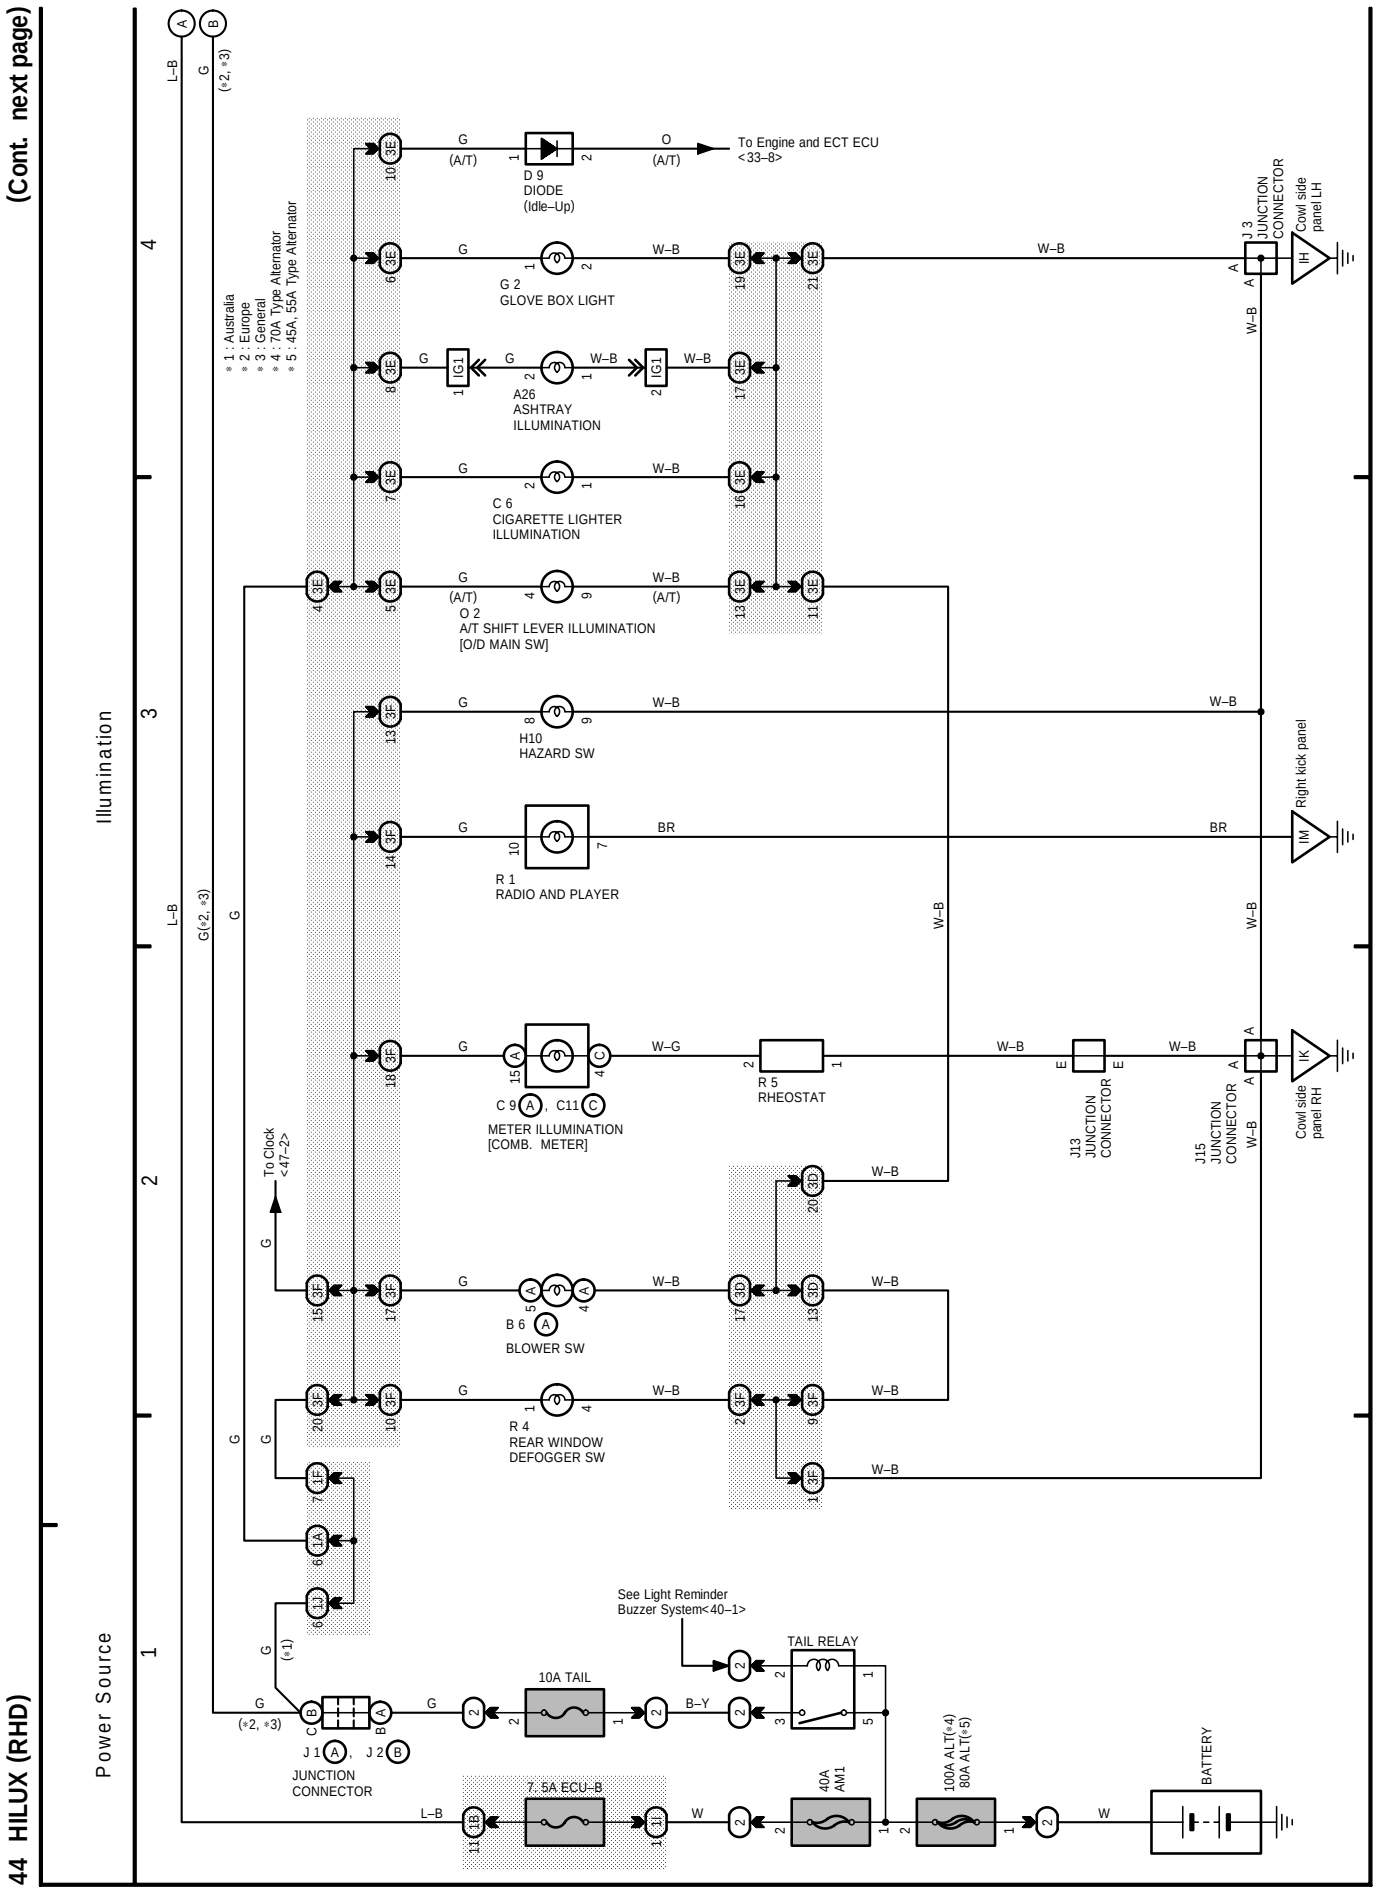

(Cont. next page)
44 HILUX (RHD)
Power Source
Illumination
1
2
3
4
* 1 : Australia
* 2 : Europe
* 3 : General
* 4 : 70A Type Alternator
* 5 : 45A, 55A Type Alternator
D 9
DIODE
(Idle–Up)
To Engine and ECT ECU
<33–8>
G 2
GLOVE BOX LIGHT
A26
ASHTRAY
ILLUMINATION
C 6
CIGARETTE LIGHTER
ILLUMINATION
O 2
A/T SHIFT LEVER ILLUMINATION
[O/D MAIN SW]
H10
HAZARD SW
R 1
RADIO AND PLAYER
C 9 , C11
METER ILLUMINATION
[COMB. METER]
R 5
RHEOSTAT
B 6
BLOWER SW
R 4
REAR WINDOW
DEFOGGER SW
To Clock
<47–2>
See Light Reminder
Buzzer System<40–1>
TAIL RELAY
10A TAIL
J 1 , J 2
JUNCTION
CONNECTOR
7. 5A ECU–B
40A
AM1
100A ALT(*4)
80A ALT(*5)
BATTERY
J 3
JUNCTION
CONNECTOR
Cowl side
panel LH
Right kick panel
J13
JUNCTION
CONNECTOR
J15
JUNCTION
CONNECTOR
Cowl side
panel RH

44 HILUX (RHD) (Cont' d)

