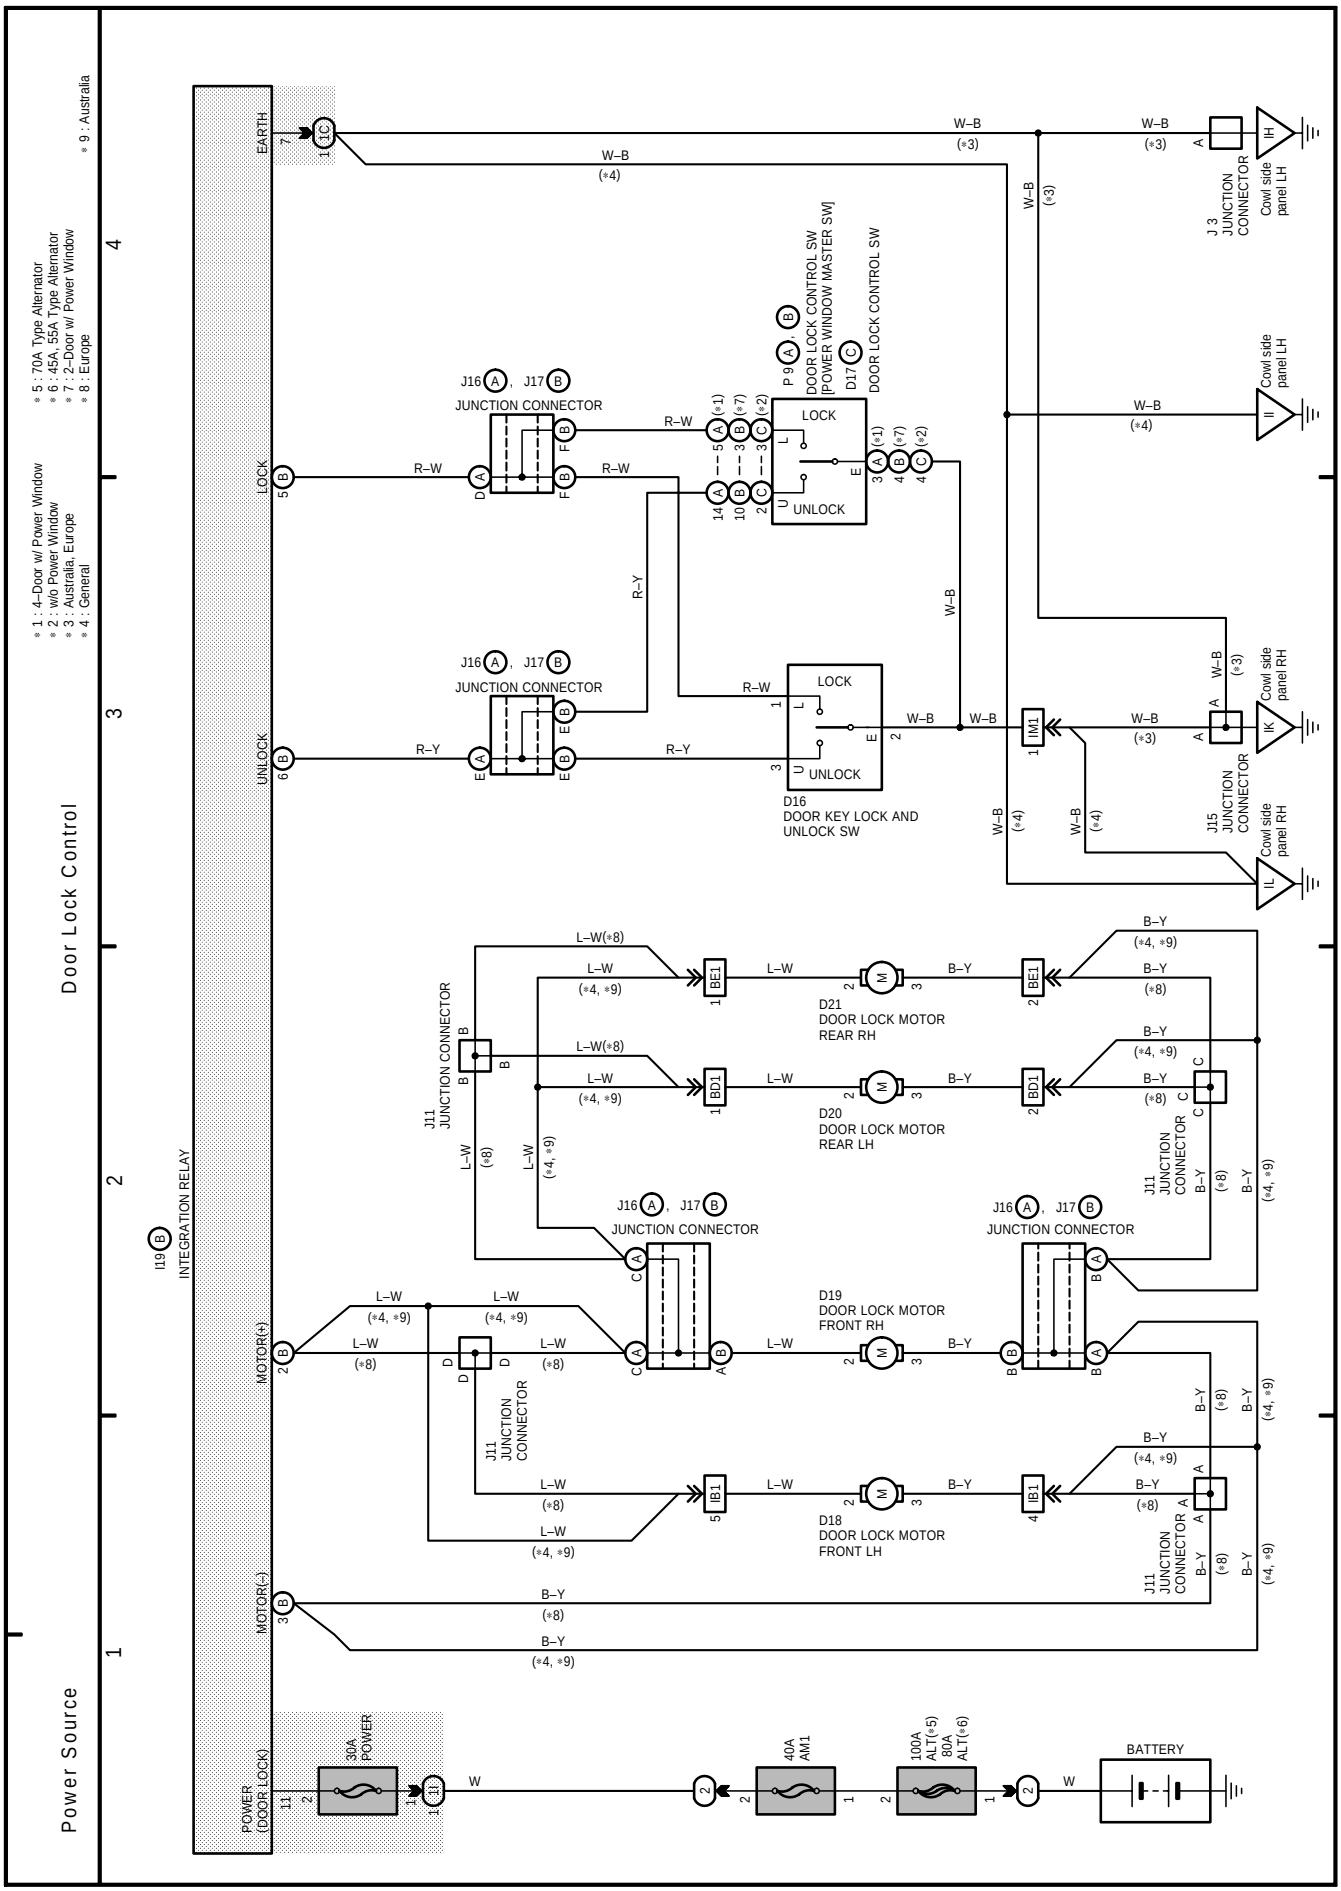

Power Source
Door Lock Control
1
2
3
4
45 HILUX (RHD)
* 1 : 4–Door w/ Power Window
* 2 : w/o Power Window
* 3 : Australia, Europe
* 4 : General
* 5 : 70A Type Alternator
* 6 : 45A, 55A Type Alternator
* 7 : 2–Door w/ Power Window
* 8 : Europe
* 9 : Australia
INTEGRATION RELAY
I19
EARTH
LOCK
UNLOCK
MOTOR(+)
MOTOR(–)
POWER (DOOR LOCK)
30A POWER
40A AM1
100A ALT(*5) 80A ALT(*6)
BATTERY
J16 , J17
JUNCTION CONNECTOR
D16 DOOR KEY LOCK AND UNLOCK SW
D17 DOOR LOCK CONTROL SW
P9 DOOR LOCK CONTROL SW [POWER WINDOW MASTER SW]
D18 DOOR LOCK MOTOR FRONT LH
D19 DOOR LOCK MOTOR FRONT RH
D20 DOOR LOCK MOTOR REAR LH
D21 DOOR LOCK MOTOR REAR RH
J11 JUNCTION CONNECTOR
J3 JUNCTION CONNECTOR
J15 JUNCTION CONNECTOR
Cowl side panel LH
Cowl side panel RH
LOCK
UNLOCK
R–W
R–Y
W–B
L–W
L–W(*8)
B–Y
(*1)
(*2)
(*3)
(*4)
(*4, *9)
(*7)
(*8)