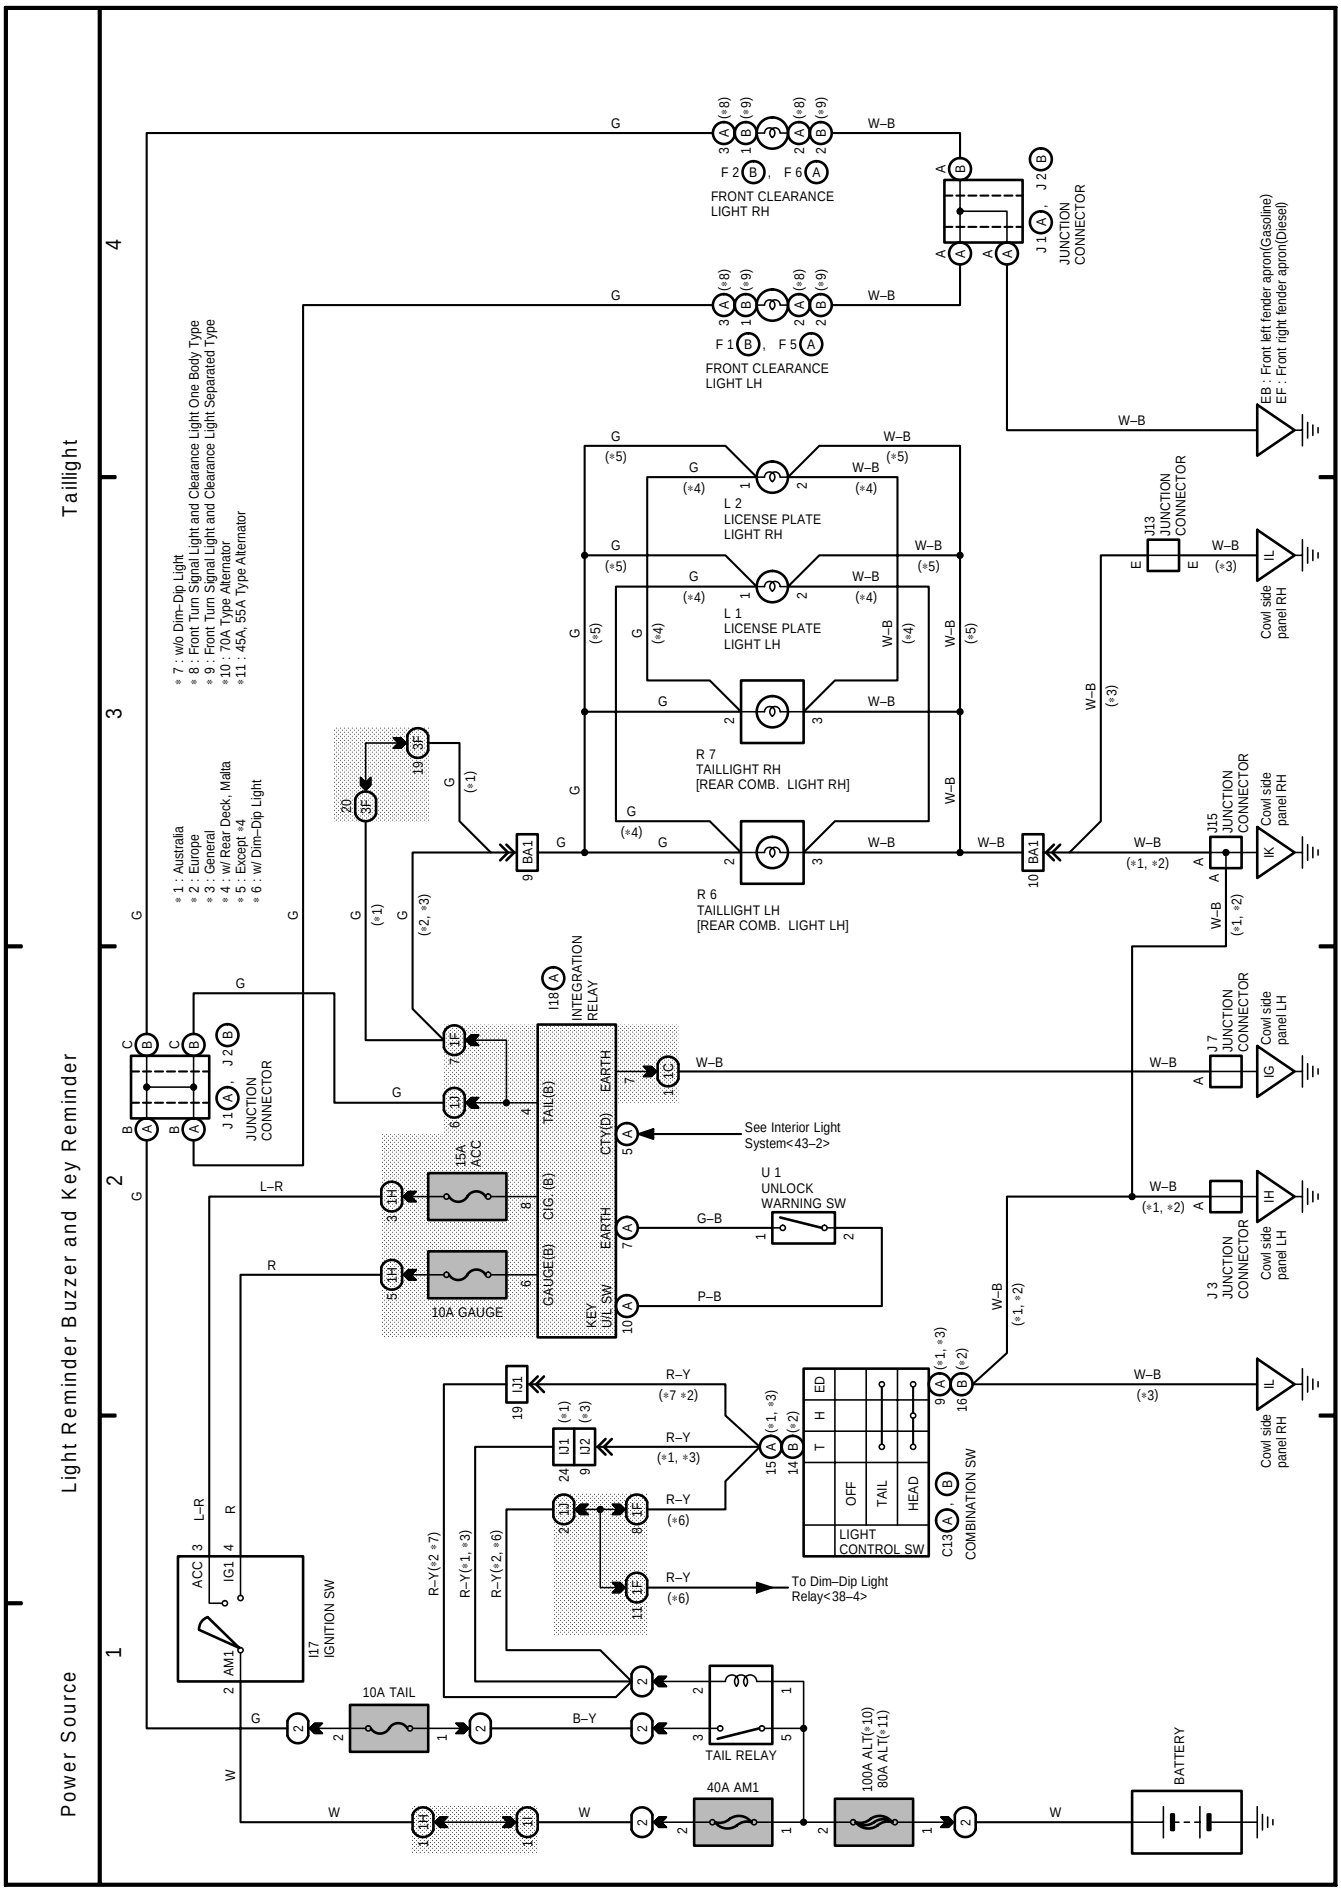

Taillight
Light Reminder Buzzer and Key Reminder
Power Source
FRONT CLEARANCE LIGHT RH
FRONT CLEARANCE LIGHT LH
JUNCTION CONNECTOR
L 2 LICENSE PLATE LIGHT RH
L 1 LICENSE PLATE LIGHT LH
R 7 TAILLIGHT RH [REAR COMB. LIGHT RH]
R 6 TAILLIGHT LH [REAR COMB. LIGHT LH]
EB : Front left fender apron(Gasoline)
EF : Front right fender apron(Diesel)
Cowl side panel RH
Cowl side panel LH
INTEGRATION RELAY
15A ACC
10A GAUGE
U 1 UNLOCK WARNING SW
See Interior Light System<43–2>
IGNITION SW
10A TAIL
TAIL RELAY
40A AM1
100A ALT(*10) 80A ALT(*11)
BATTERY
LIGHT CONTROL SW
COMBINATION SW
To Dim–Dip Light Relay<38–4>
* 1 : Australia
* 2 : Europe
* 3 : General
* 4 : w/ Rear Deck, Malta
* 5 : Except *4
* 6 : w/ Dim–Dip Light
* 7 : w/o Dim–Dip Light
* 8 : Front Turn Signal Light and Clearance Light One Body Type
* 9 : Front Turn Signal Light and Clearance Light Separated Type
*10 : 70A Type Alternator
*11 : 45A, 55A Type Alternator