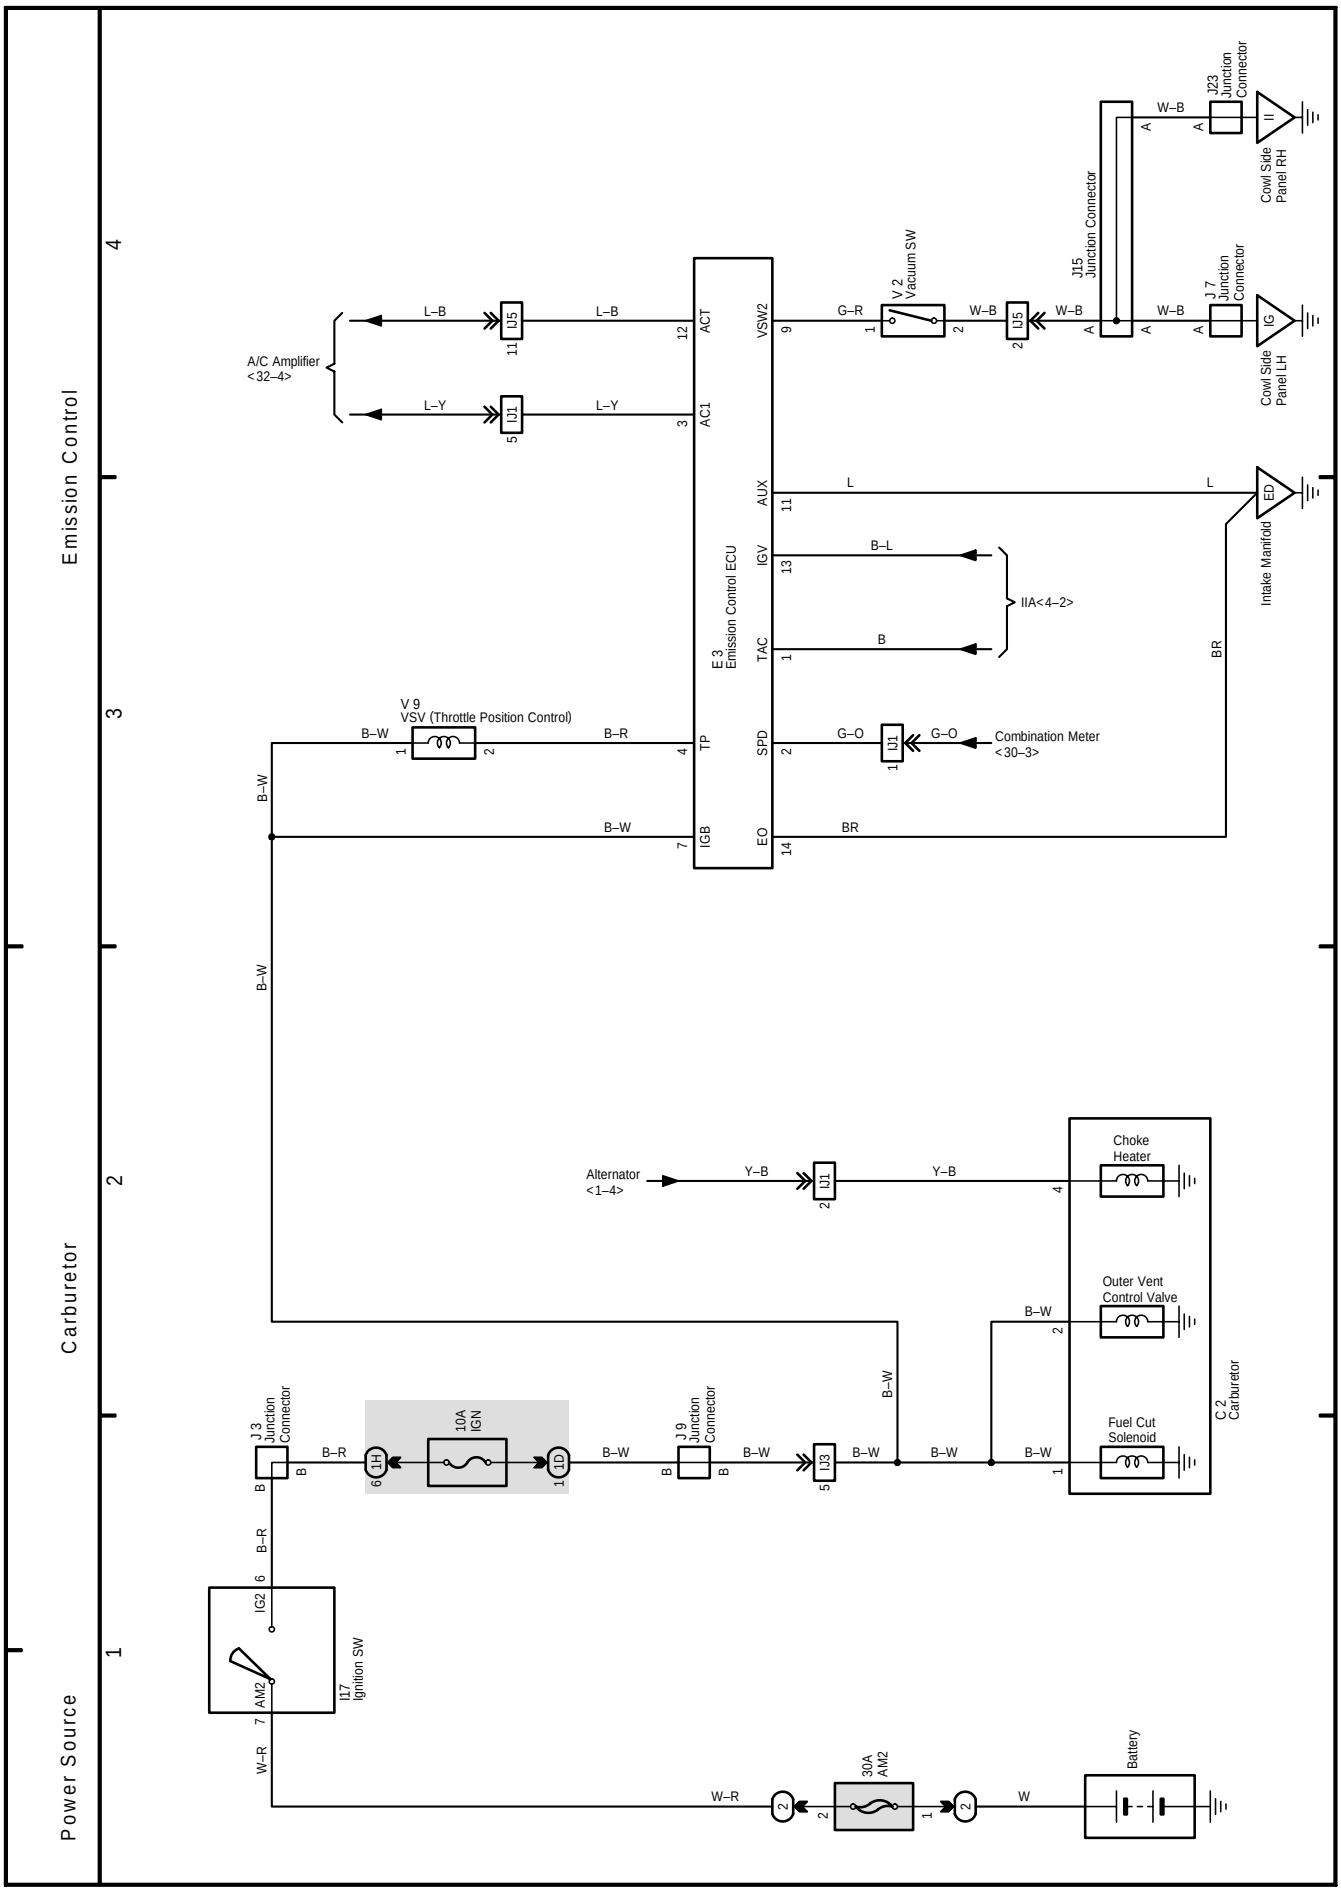

7 HILUX (LHD)
Power Source
Carburetor
Emission Control
1
2
3
4
A/C Amplifier
<32–4>
L–B
L–Y
I5
I1
ACT
AC1
E3
Emission Control ECU
VSW2
AUX
IGV
TAC
TP
SPD
IGB
EO
V 2
Vacuum SW
J15
Junction Connector
J23
Junction Connector
J 7
Junction Connector
Cowl Side
Panel RH
Cowl Side
Panel LH
W–B
G–R
L
B–L
B
IIA<4–2>
BR
Intake Manifold
ED
IG
V 9
VSV (Throttle Position Control)
B–W
B–R
G–O
Combination Meter
<30–3>
Alternator
<1–4>
Y–B
J1
Choke
Heater
Outer Vent
Control Valve
Fuel Cut
Solenoid
C 2
Carburetor
J3
Junction
Connector
J9
Junction
Connector
10A
IGN
1H
1D
I3
IG2
AM2
I17
Ignition SW
30A
AM2
Battery
W–R
W