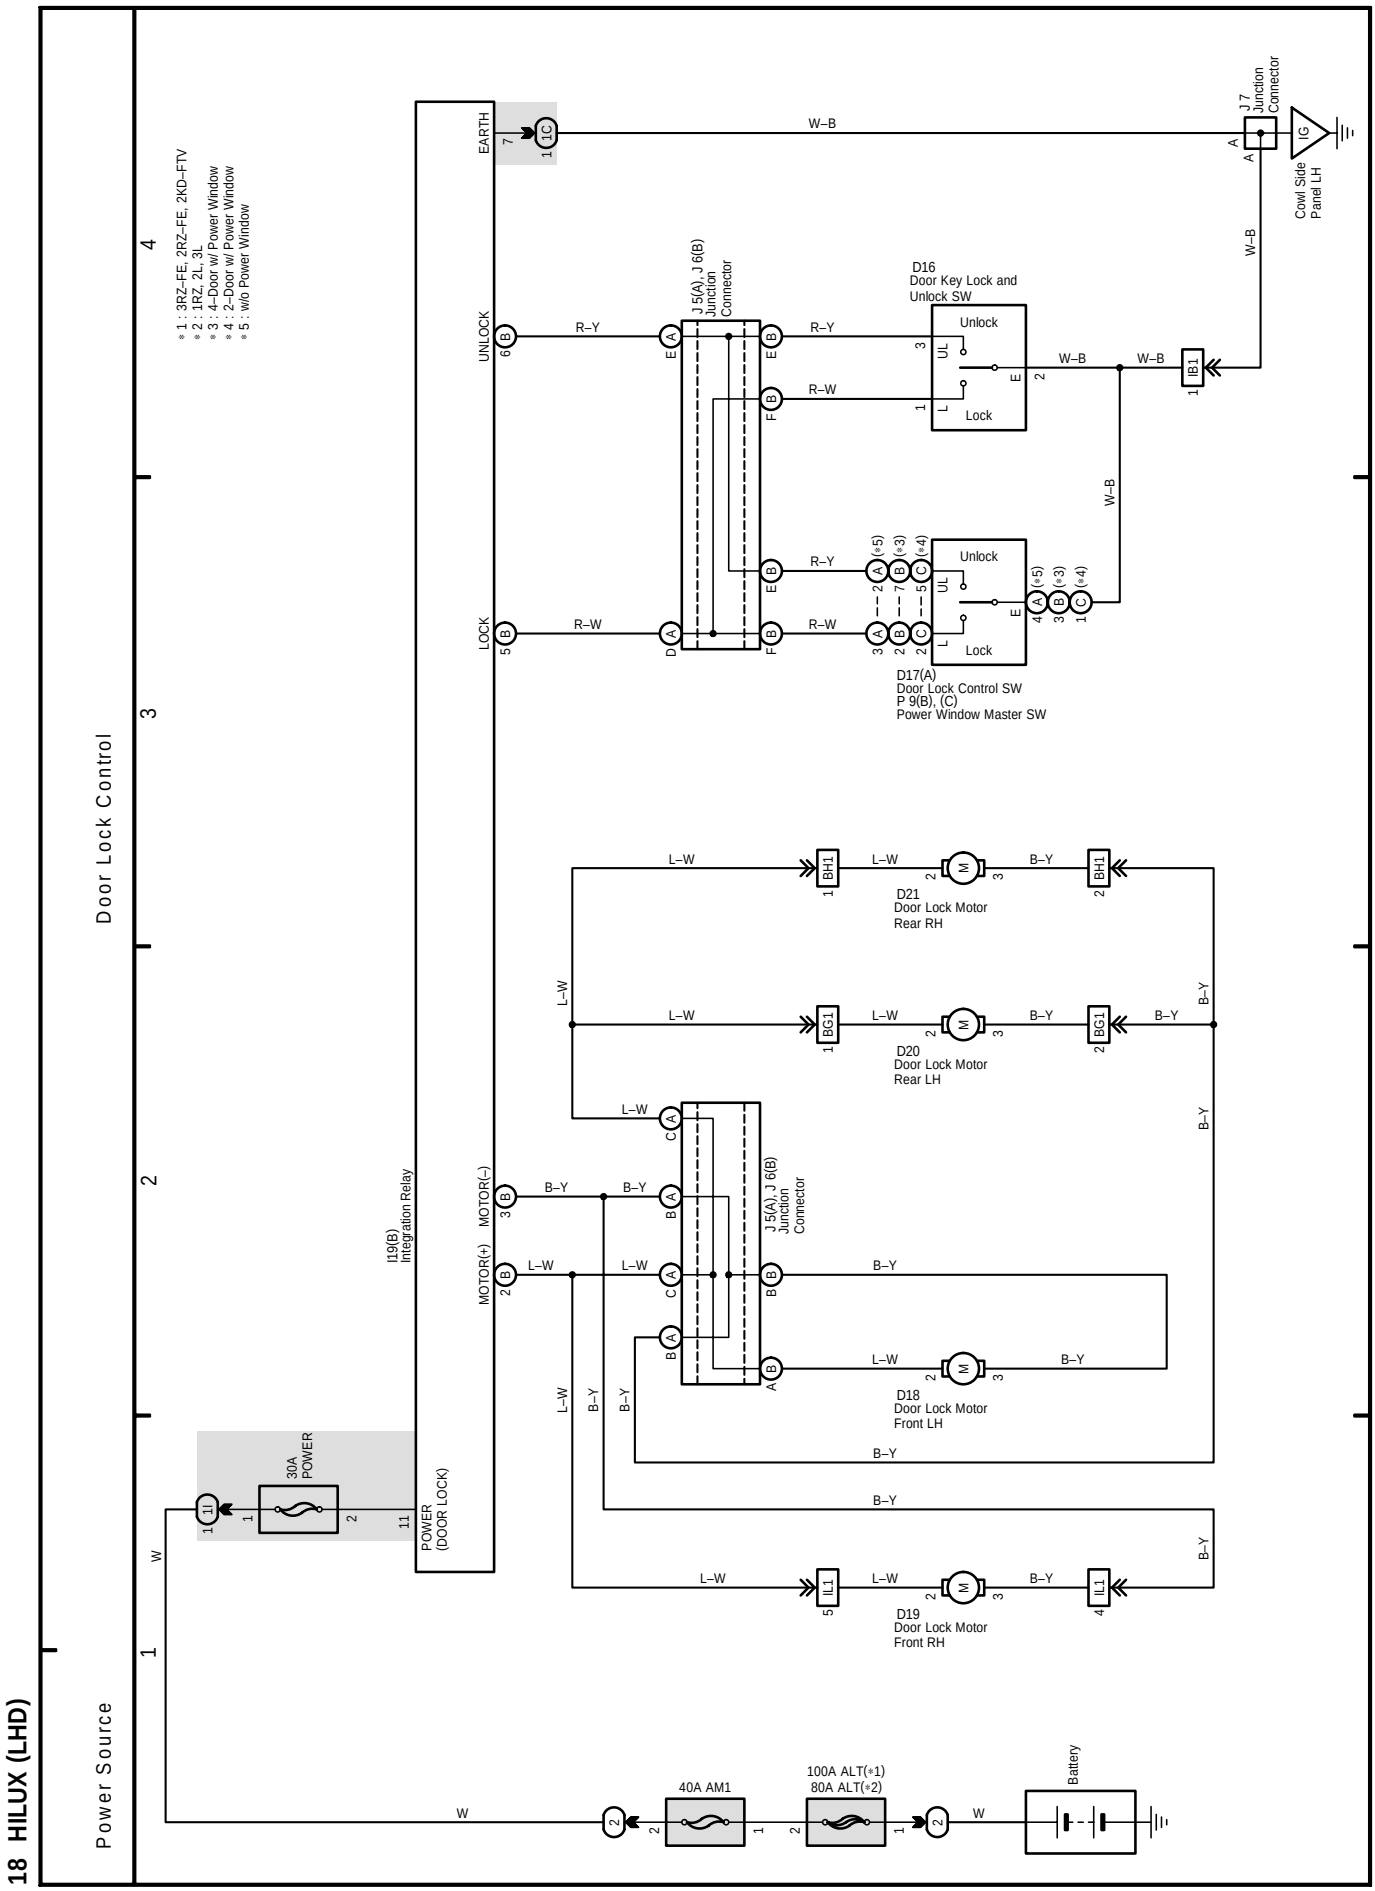

18 HILUX (LHD)
Power Source
Door Lock Control
1
2
3
4
* 1 : 3RZ–FE, 2RZ–FE, 2KD–FTV
* 2 : 1RZ, 2L, 3L
* 3 : 4–Door w/ Power Window
* 4 : 2–Door w/ Power Window
* 5 : w/o Power Window
Battery
40A AM1
100A ALT(*1)
80A ALT(*2)
30A POWER
I19(B) Integration Relay
POWER (DOOR LOCK)
EARTH
UNLOCK
LOCK
MOTOR(+)
MOTOR(–)
J 7 Junction Connector
Cowl Side Panel LH
J 5(A), J 6(B) Junction Connector
D16 Door Key Lock and Unlock SW
Unlock
Lock
D17(A) Door Lock Control SW
P 9(B), (C) Power Window Master SW
D18 Door Lock Motor Front LH
D19 Door Lock Motor Front RH
D20 Door Lock Motor Rear LH
D21 Door Lock Motor Rear RH
W–B
R–Y
R–W
L–W
B–Y
W