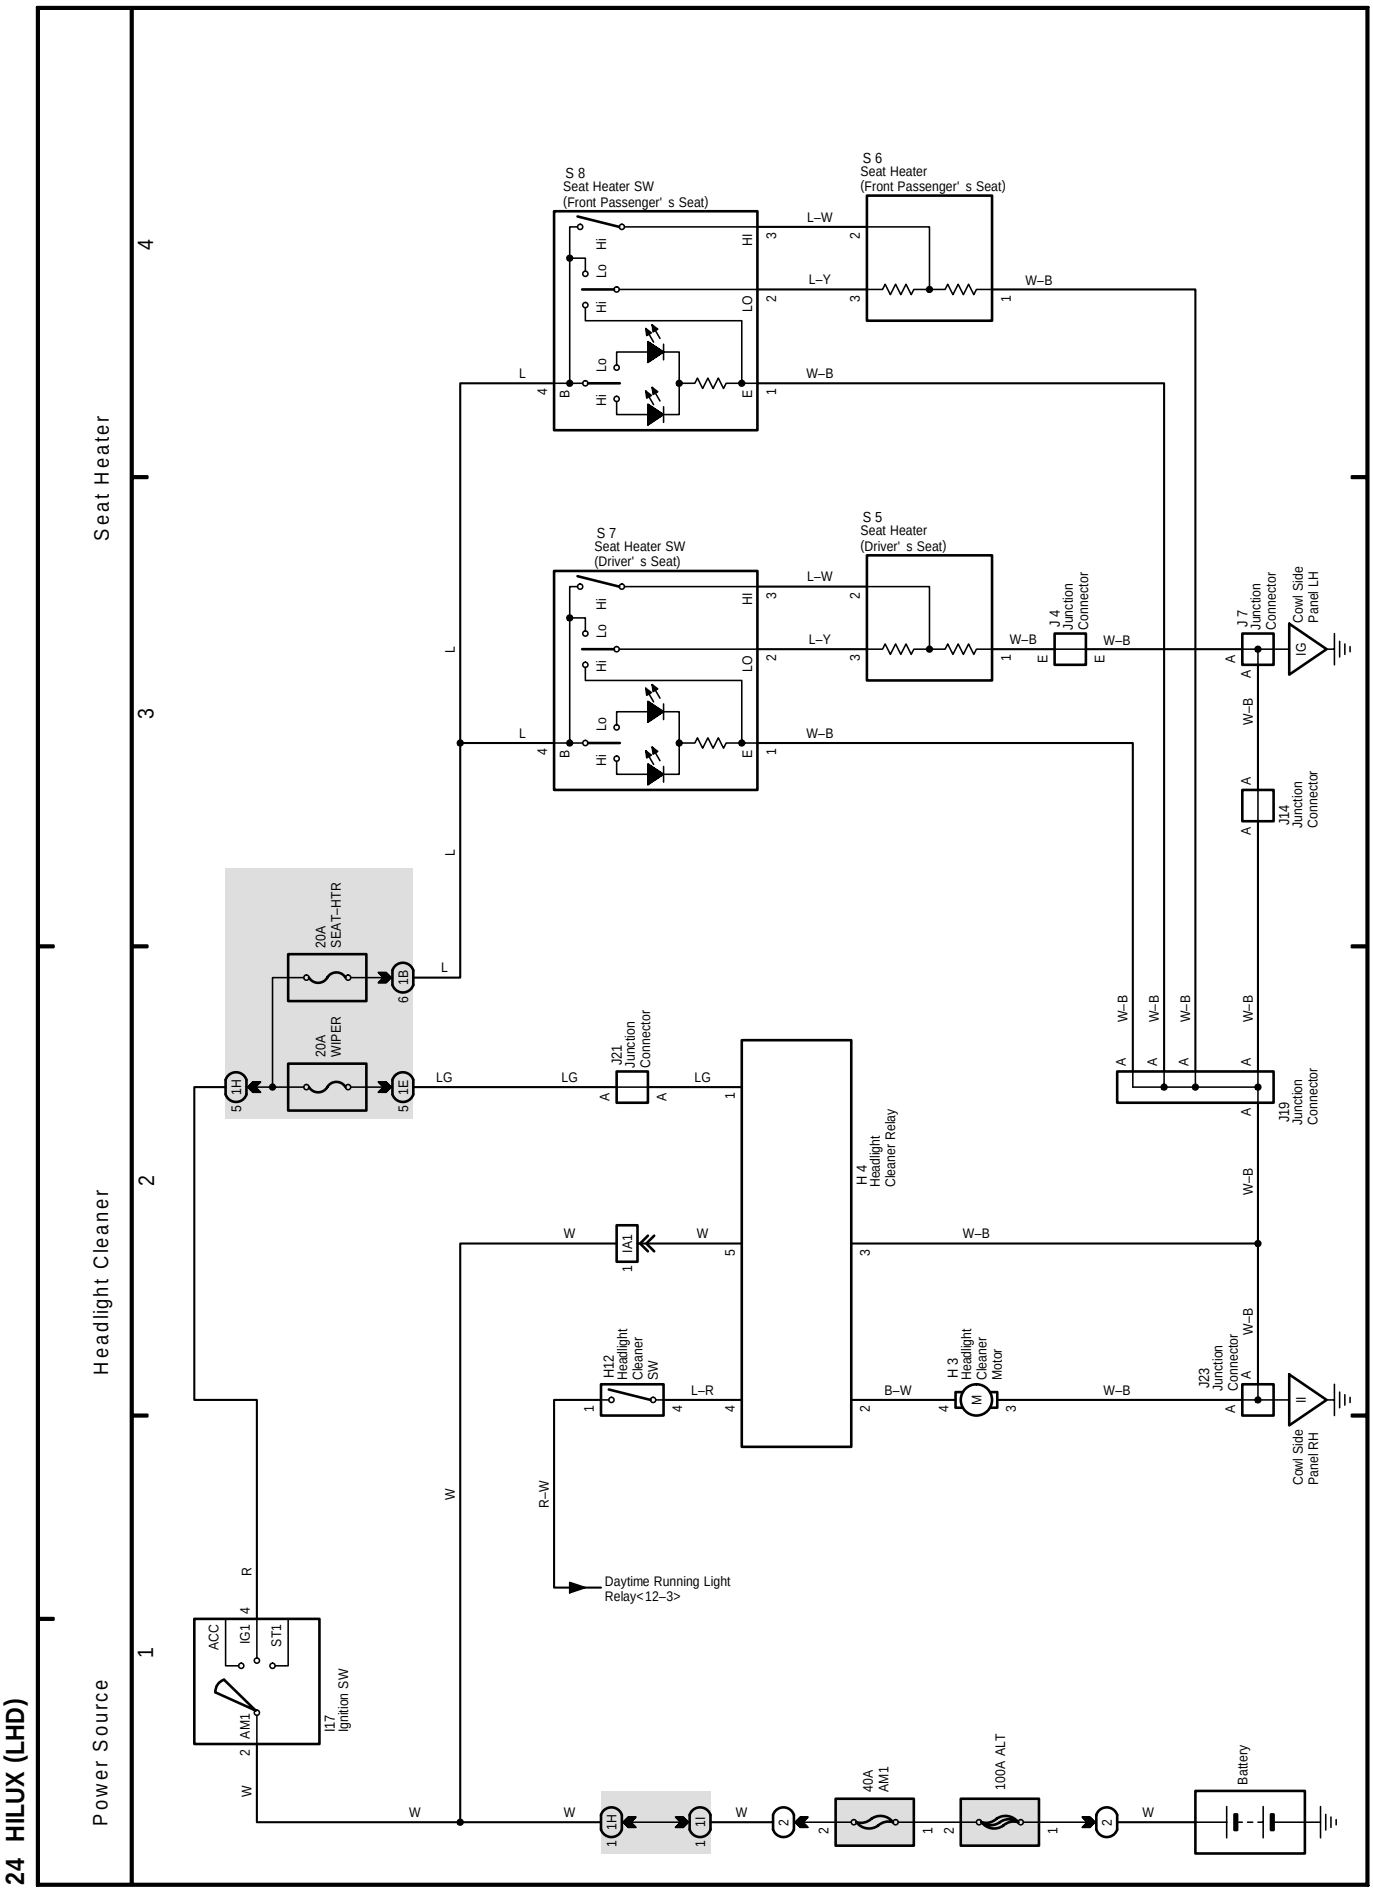

24 HILUX (LHD)
Power Source
Headlight Cleaner
Seat Heater
1
2
3
4
S 8
Seat Heater SW
(Front Passenger' s Seat)
S 6
Seat Heater
(Front Passenger' s Seat)
S 7
Seat Heater SW
(Driver' s Seat)
S 5
Seat Heater
(Driver' s Seat)
J 4
Junction
Connector
J 7
Junction
Connector
Cowl Side
Panel LH
J14
Junction
Connector
J19
Junction
Connector
J21
Junction
Connector
20A
SEAT–HTR
20A
WIPER
H 4
Headlight
Cleaner Relay
H12
Headlight
Cleaner
SW
H 3
Headlight
Cleaner
Motor
J23
Junction
Connector
Cowl Side
Panel RH
Daytime Running Light
Relay<12–3>
I17
Ignition SW
ACC
IG1
ST1
AM1
40A
AM1
100A ALT
Battery
L–W
L–Y
W–B
L
LG
W
R–W
B–W
L–R
R