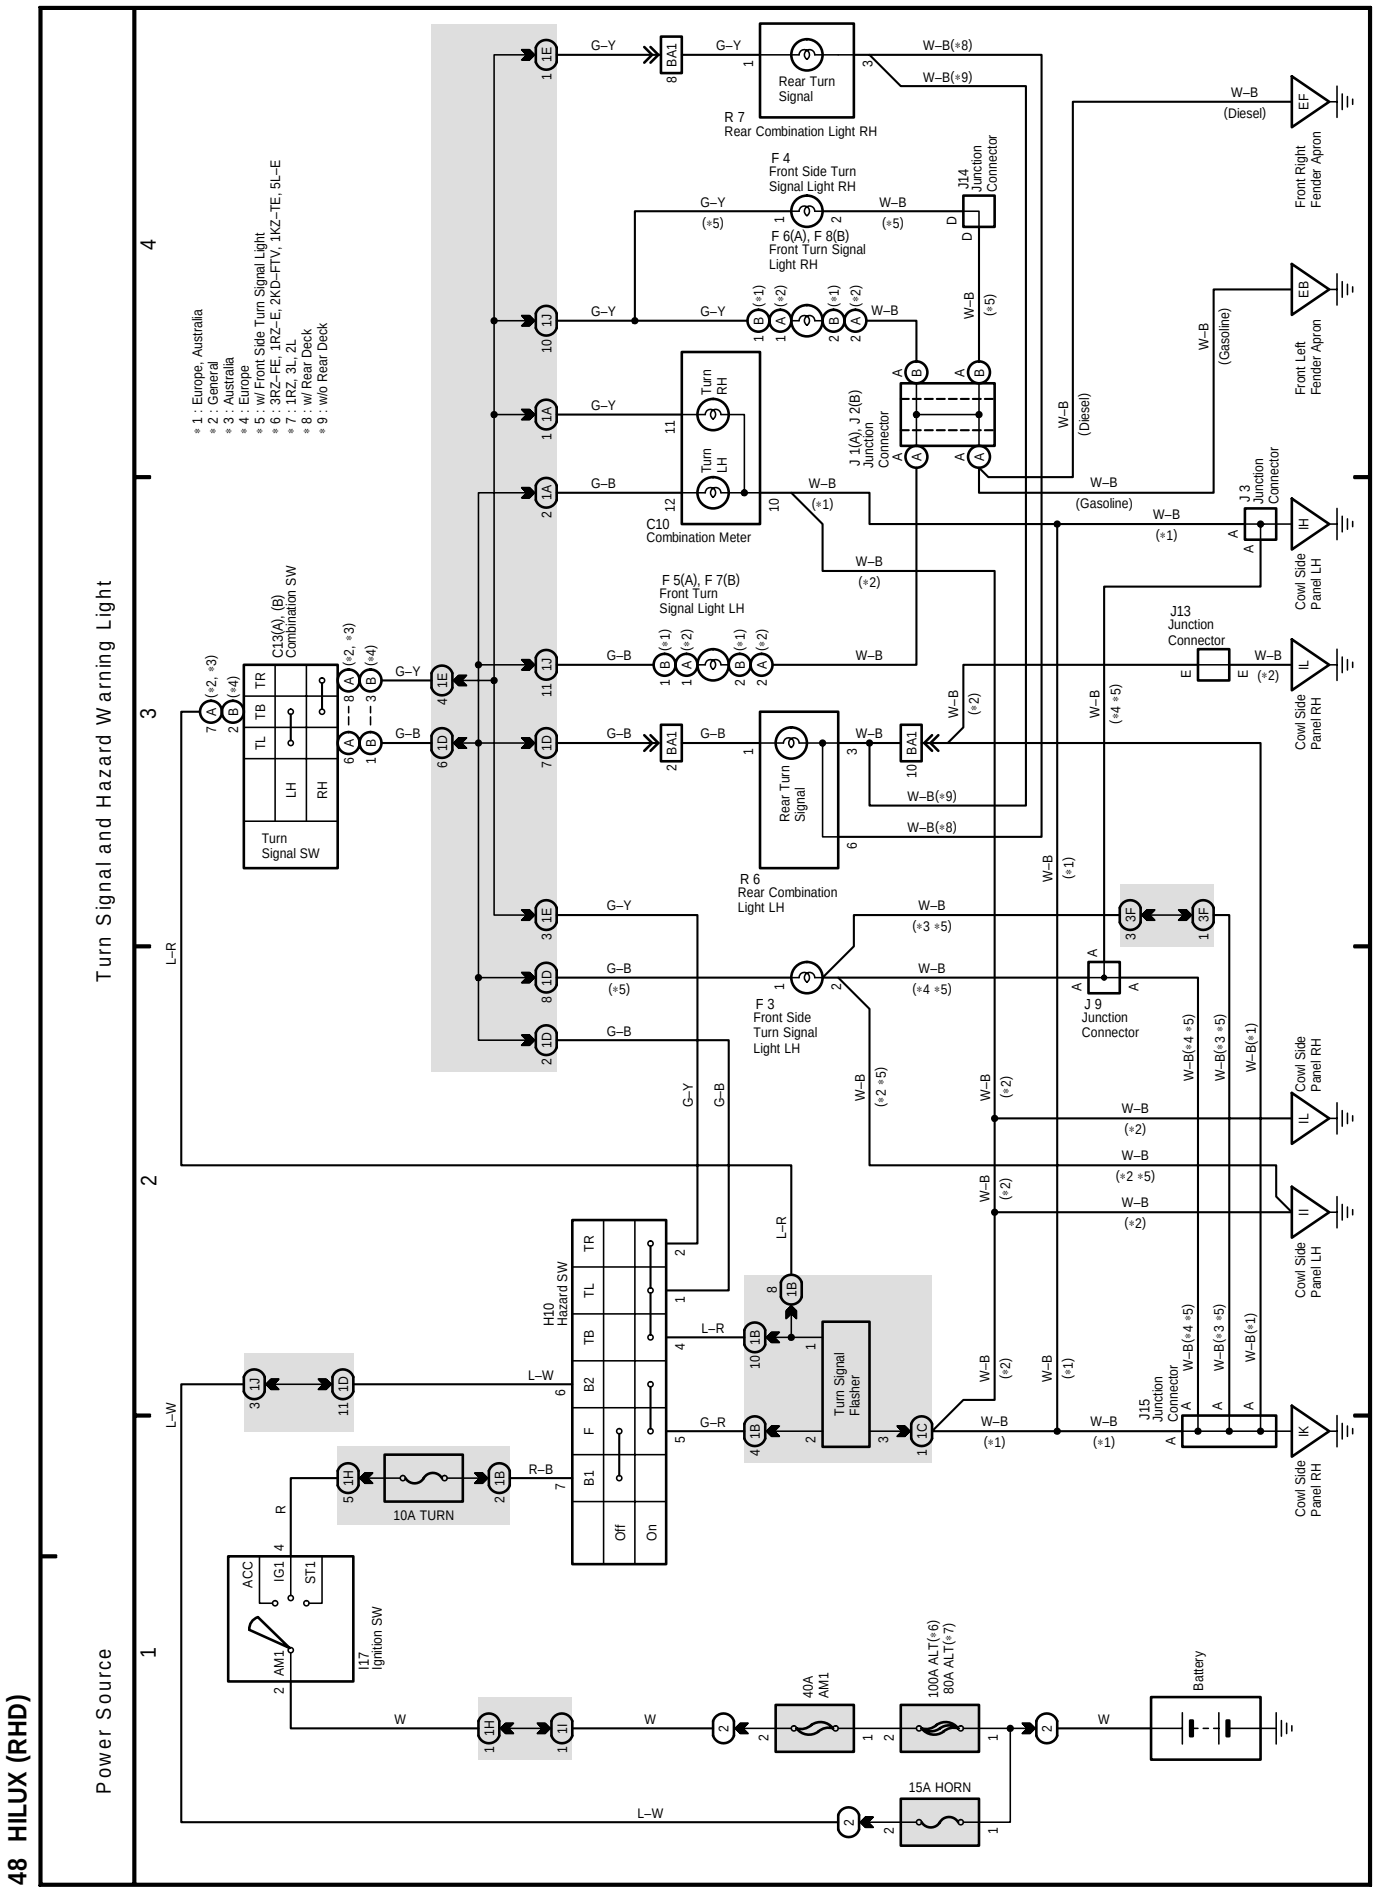

48 HILUX (RHD)
Power Source
Turn Signal and Hazard Warning Light
* 1 : Europe, Australia
* 2 : General
* 3 : Australia
* 4 : Europe
* 5 : w/ Front Side Turn Signal Light
* 6 : 3RZ–FE, 1RZ–E, 2KD–FTV, 1KZ–TE, 5L–E
* 7 : 1RZ, 3L, 2L
* 8 : w/ Rear Deck
* 9 : w/o Rear Deck
Rear Turn Signal
R 7
Rear Combination Light RH
F 4
Front Side Turn Signal Light RH
F 6(A), F 8(B)
Front Turn Signal Light RH
J14 Junction Connector
Front Right Fender Apron
Front Left Fender Apron
J 1(A), J 2(B) Junction Connector
C10 Combination Meter
Turn RH
Turn LH
J3 Junction Connector
Cowl Side Panel LH
F 5(A), F 7(B)
Front Turn Signal Light LH
C13(A), (B) Combination SW
Turn Signal SW
J13 Junction Connector
Cowl Side Panel RH
R 6
Rear Combination Light LH
F 3
Front Side Turn Signal Light LH
J 9 Junction Connector
H10 Hazard SW
Turn Signal Flasher
J15 Junction Connector
10A TURN
I17 Ignition SW
40A AM1
100A ALT(*6) 80A ALT(*7)
Battery
15A HORN