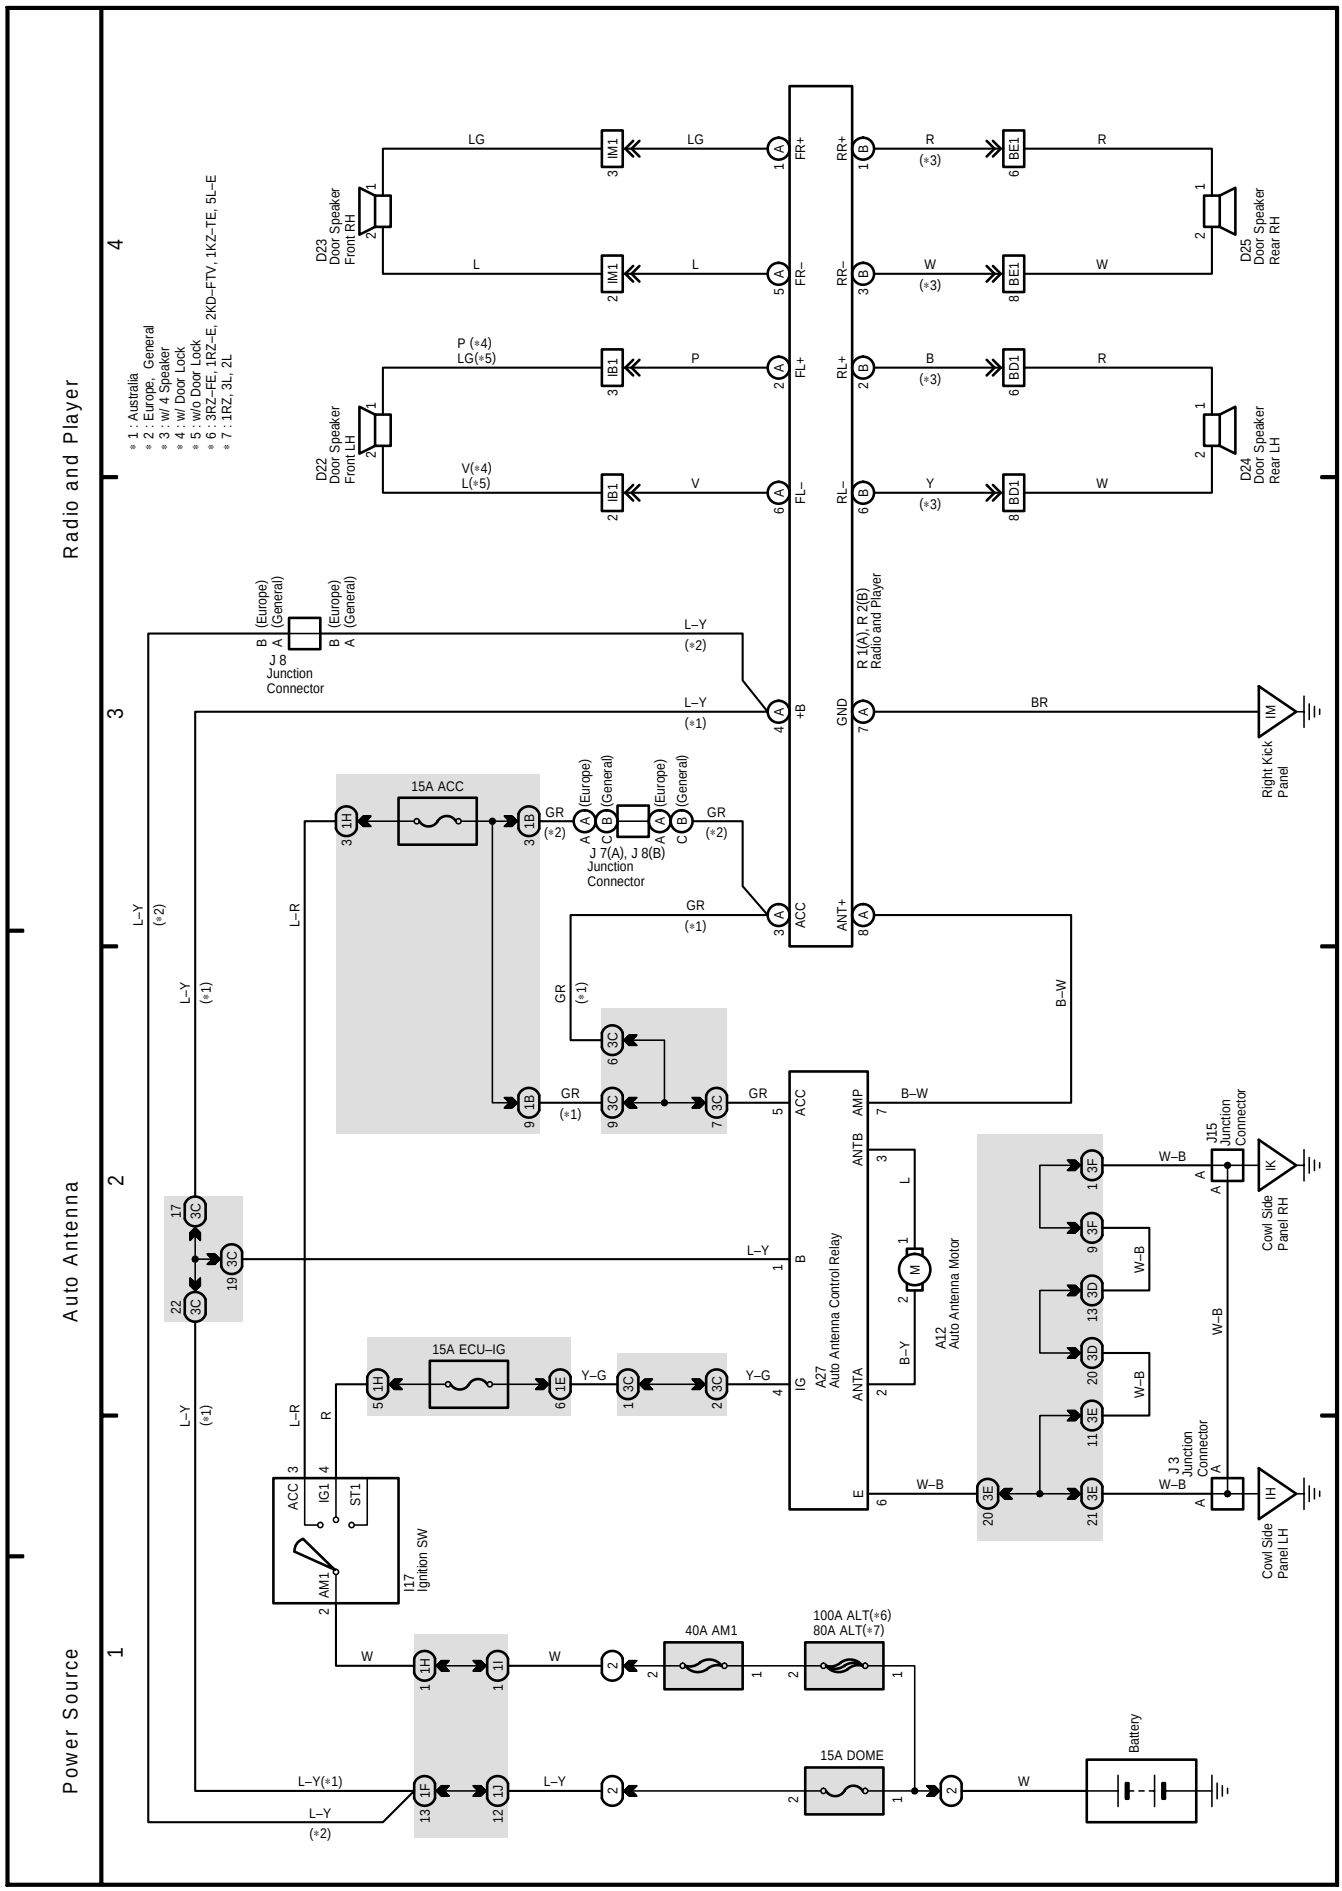
62 HILUX (RHD)


Power Source
Auto Antenna
Radio and Player
＊1 : Australia
＊2 : Europe, General
＊3 : w/ 4 Speaker
＊4 : w/ Door Lock
＊5 : w/o Door Lock
＊6 : 3RZ–FE, 1RZ–E, 2KD–FTV, 1KZ–TE, 5L–E
＊7 : 1RZ, 3L, 2L
D23 Door Speaker Front RH
D25 Door Speaker Rear RH
D22 Door Speaker Front LH
D24 Door Speaker Rear LH
J 8 Junction Connector
J 7(A), J 8(B) Junction Connector
R 1(A), R 2(B) Radio and Player
Right Kick Panel
15A ACC
15A ECU–IG
I17 Ignition SW
A27 Auto Antenna Control Relay
A12 Auto Antenna Motor
J15 Junction Connector
J 3 Junction Connector
Cowl Side Panel RH
Cowl Side Panel LH
40A AM1
100A ALT(＊6) 80A ALT(＊7)
15A DOME
Battery