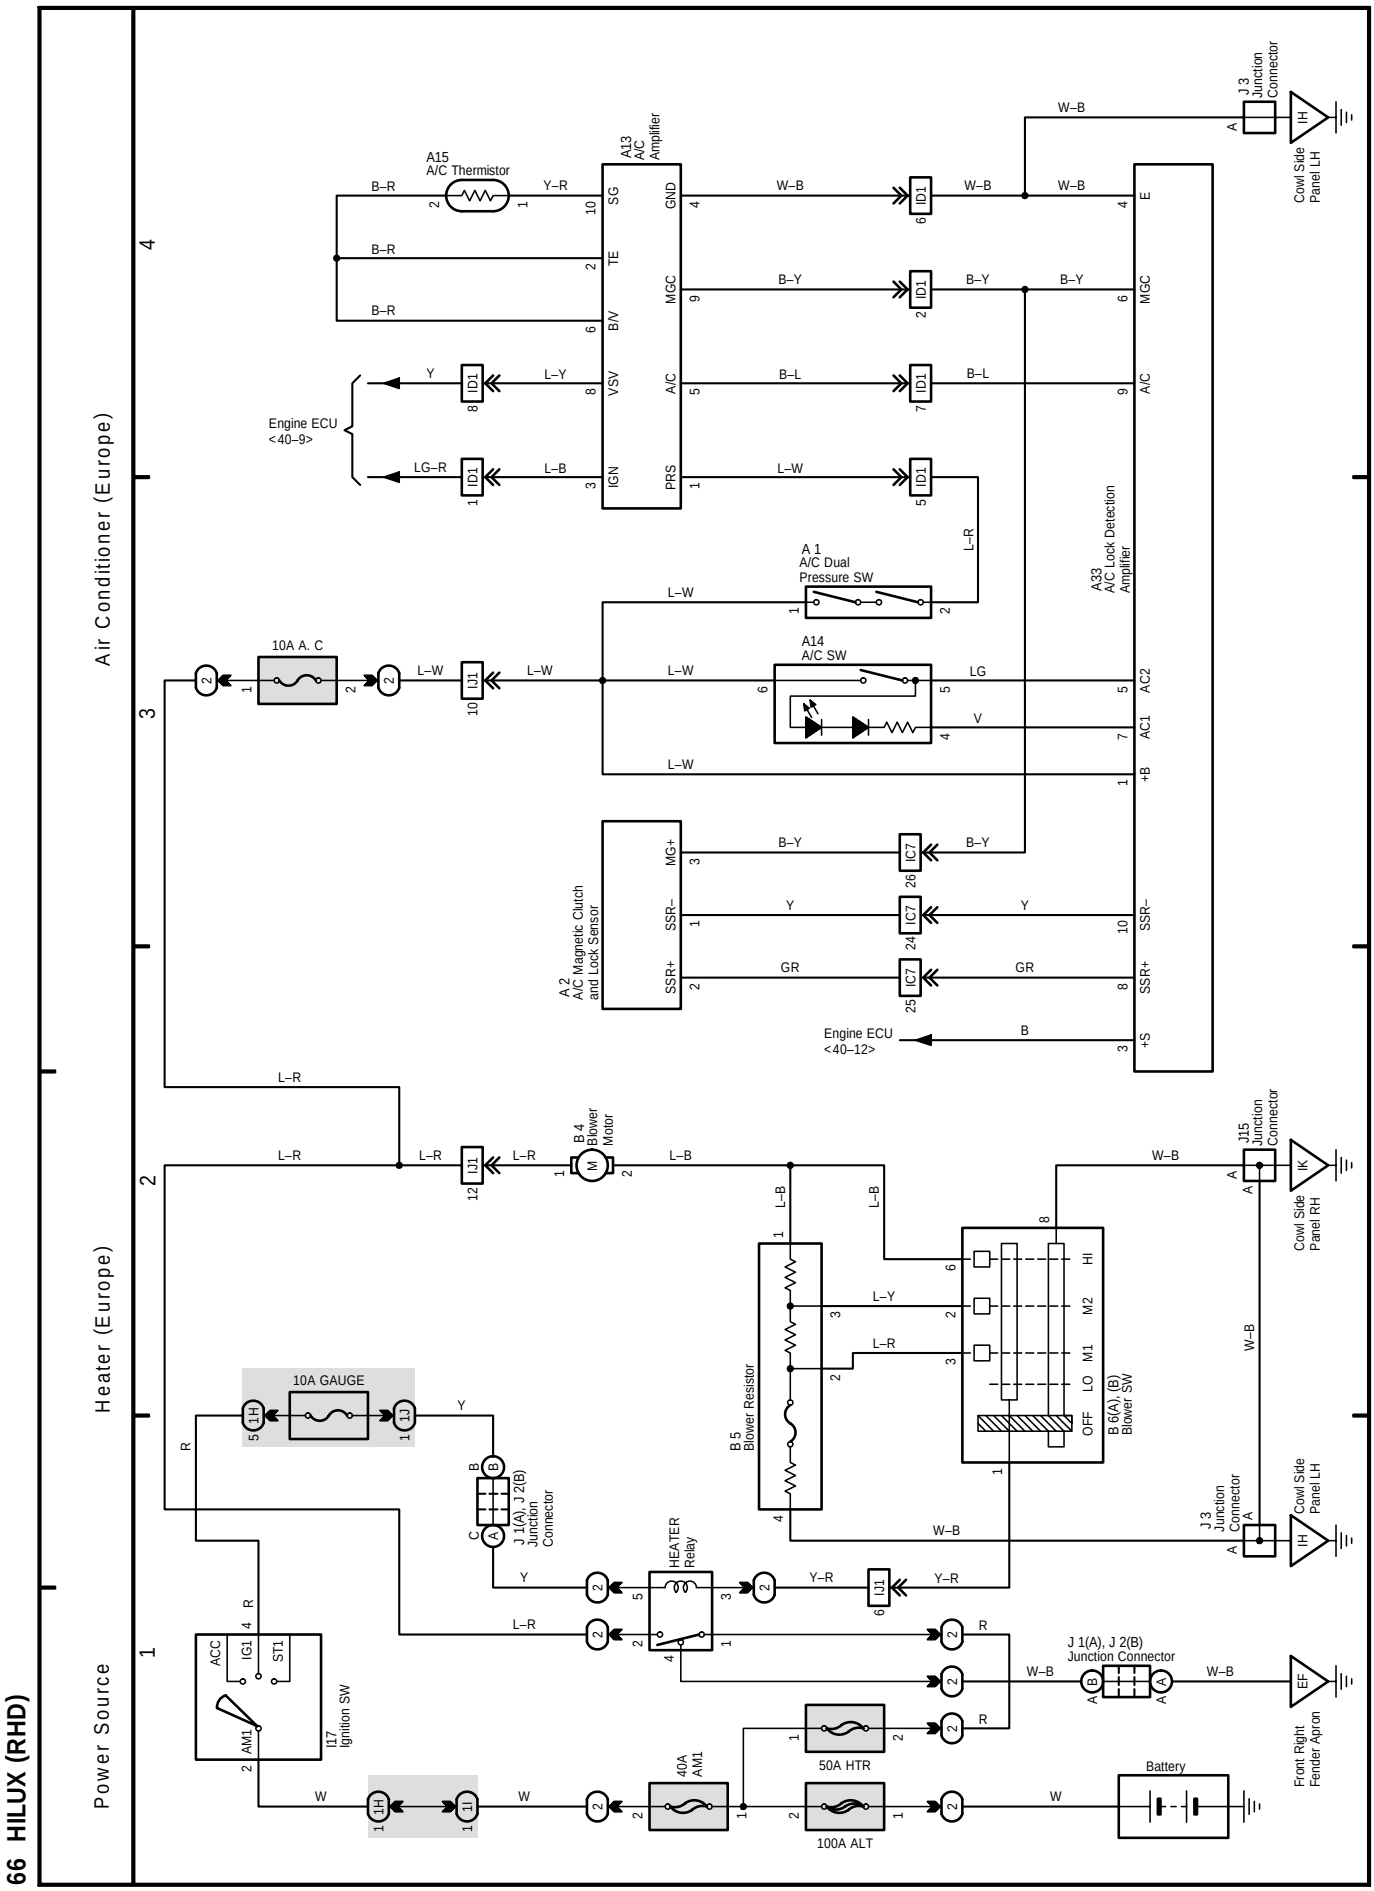

66 HILUX (RHD)
Power Source
Heater (Europe)
Air Conditioner (Europe)
A15
A/C Thermistor
A13
A/C
Amplifier
SG
TE
B/V
VSV
IGN
GND
MGC
A/C
PRS
Engine ECU
<40–9>
A 1
A/C Dual
Pressure SW
A14
A/C SW
A33
A/C Lock Detection
Amplifier
E
MGC
A/C
AC2
AC1
+B
A 2
A/C Magnetic Clutch
and Lock Sensor
MG+
SSR–
SSR+
+S
Engine ECU
<40–12>
10A A. C
J 3
Junction
Connector
Cowl Side
Panel LH
J15
Junction
Connector
Cowl Side
Panel RH
B 4
Blower
Motor
B 5
Blower Resistor
B 6(A), (B)
Blower SW
HI
M2
M1
LO
OFF
10A GAUGE
J 1(A), J 2(B)
Junction
Connector
HEATER
Relay
I17
Ignition SW
ACC
IG1
ST1
AM1
40A
AM1
50A HTR
100A ALT
Battery
Front Right
Fender Apron
1
2
3
4