

EG

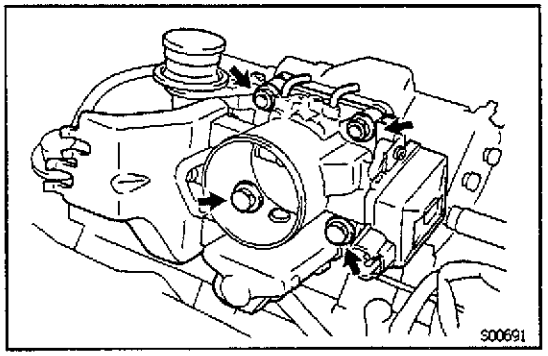

THROTTLE BODY INSTALLATION

1. **INSTALL THROTTLE BODY**
(a) Install the 2 water bypass hoses to the throttle body.
(b) Install the throttle body with the 2 bolts and 2 nuts.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)
2. **CONNECT WATER BYPASS HOSES TO NO.2 WATER BYPASS PIPE**
3. **CONNECT VACUUM HOSES TO THROTTLE BODY**
4. **CONNECT THROTTLE POSITION SENSOR CONNECTOR**
5. **FILL WITH ENGINE COOLANT**

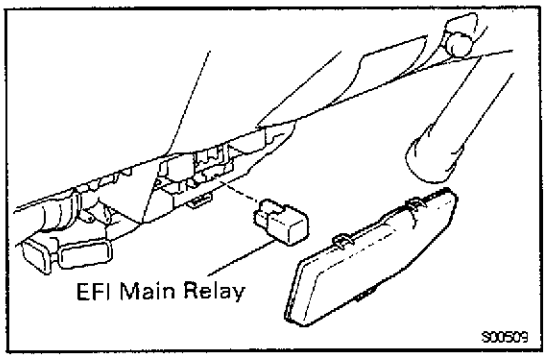


EFI MAIN RELAY


EFI MAIN RELAY (Marking: EFI MAIN)

INSPECTION

1. **REMOVE EFI MAIN RELAY**

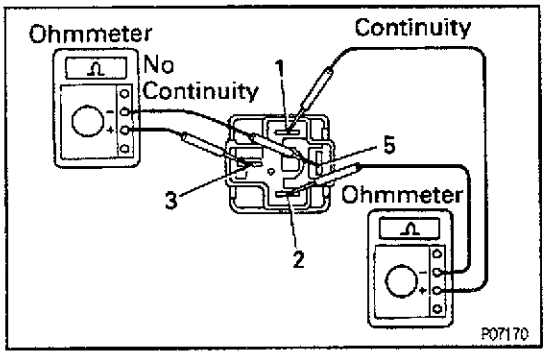

2. **INSPECT EFI MAIN RELAY**
A. Inspect relay continuity
(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
(b) Check that there is no continuity between terminals 3 and 5.
If continuity is not as specified, replace the relay.

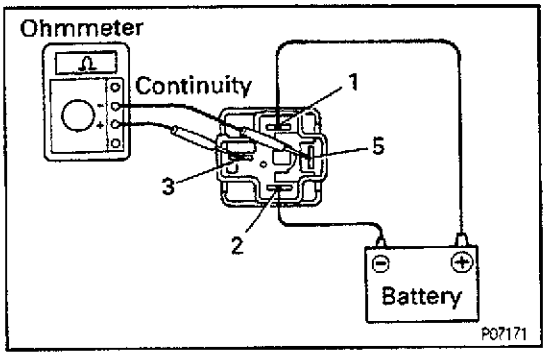

B. Inspect relay operation
(a) Apply battery voltage across terminals 1 and 2.
(b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.
If operation is not as specified, replace the relay.
3. **REINSTALL EFI MAIN RELAY**