IDLE SPEED (2RZ–FE, 3RZ–FE)

EM02W–01


INSPECTION

1. INITIAL CONDITIONS

(a) Engine at normal operating temperature
(b) Air cleaner installed
(c) All pipes and hoses of air induction system connected
(d) All accessories switched OFF
(e) All vacuum lines properly connected
(f) EFI system wiring connectors fully plugged
(g) Ignition timing checks correctly
(h) Transmission in neutral position

2. CONNECT HAND–HELD TESTER

(See page EM–16)

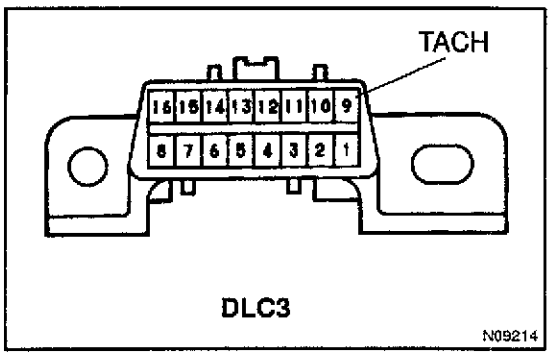

If you have no hand–held tester, connect tachometer test prove to terminal 9 (TACH) of DLC3.

SST 09843–18030

3. INSPECTION IDLE SPEED

(a) Race the engine speed at 2,500 rpm for approx. 90 seconds.
(b) Check the idle speed

Idle speed:
650 – 750 rpm

If the idle speed is not as specified, check the ISC valve and air intake system.

4. DISCONNECT HAND–HELD TESTER